


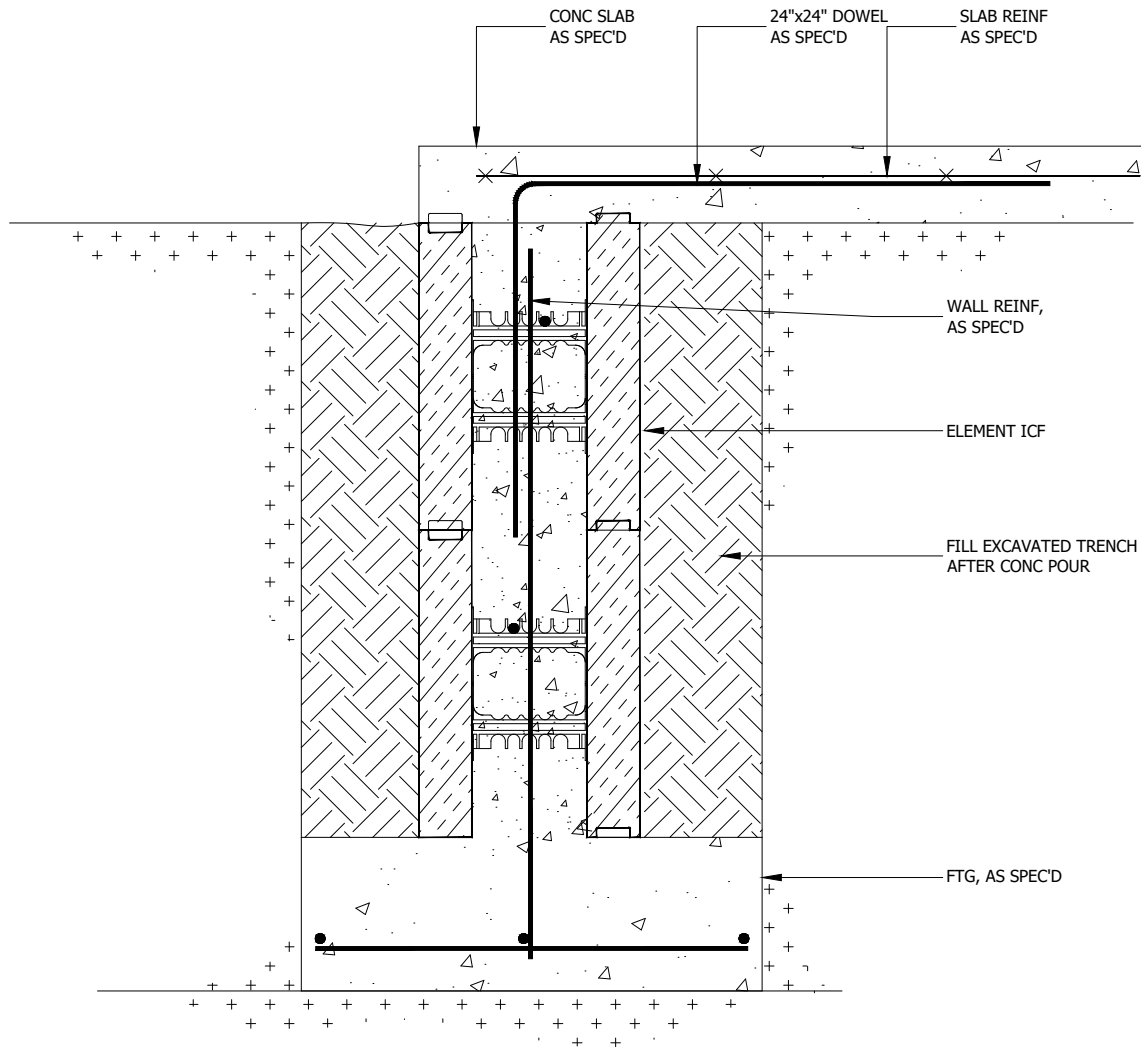

NOTES:

1. Refer to the Element Prescriptive Engineering for reinforcement design of Element ICF walls.
2. Bottom course of Element is shown with the bottom interlocks removed. Optionally, leaving interlocks in place will increase wall or footing height by 0.525"