


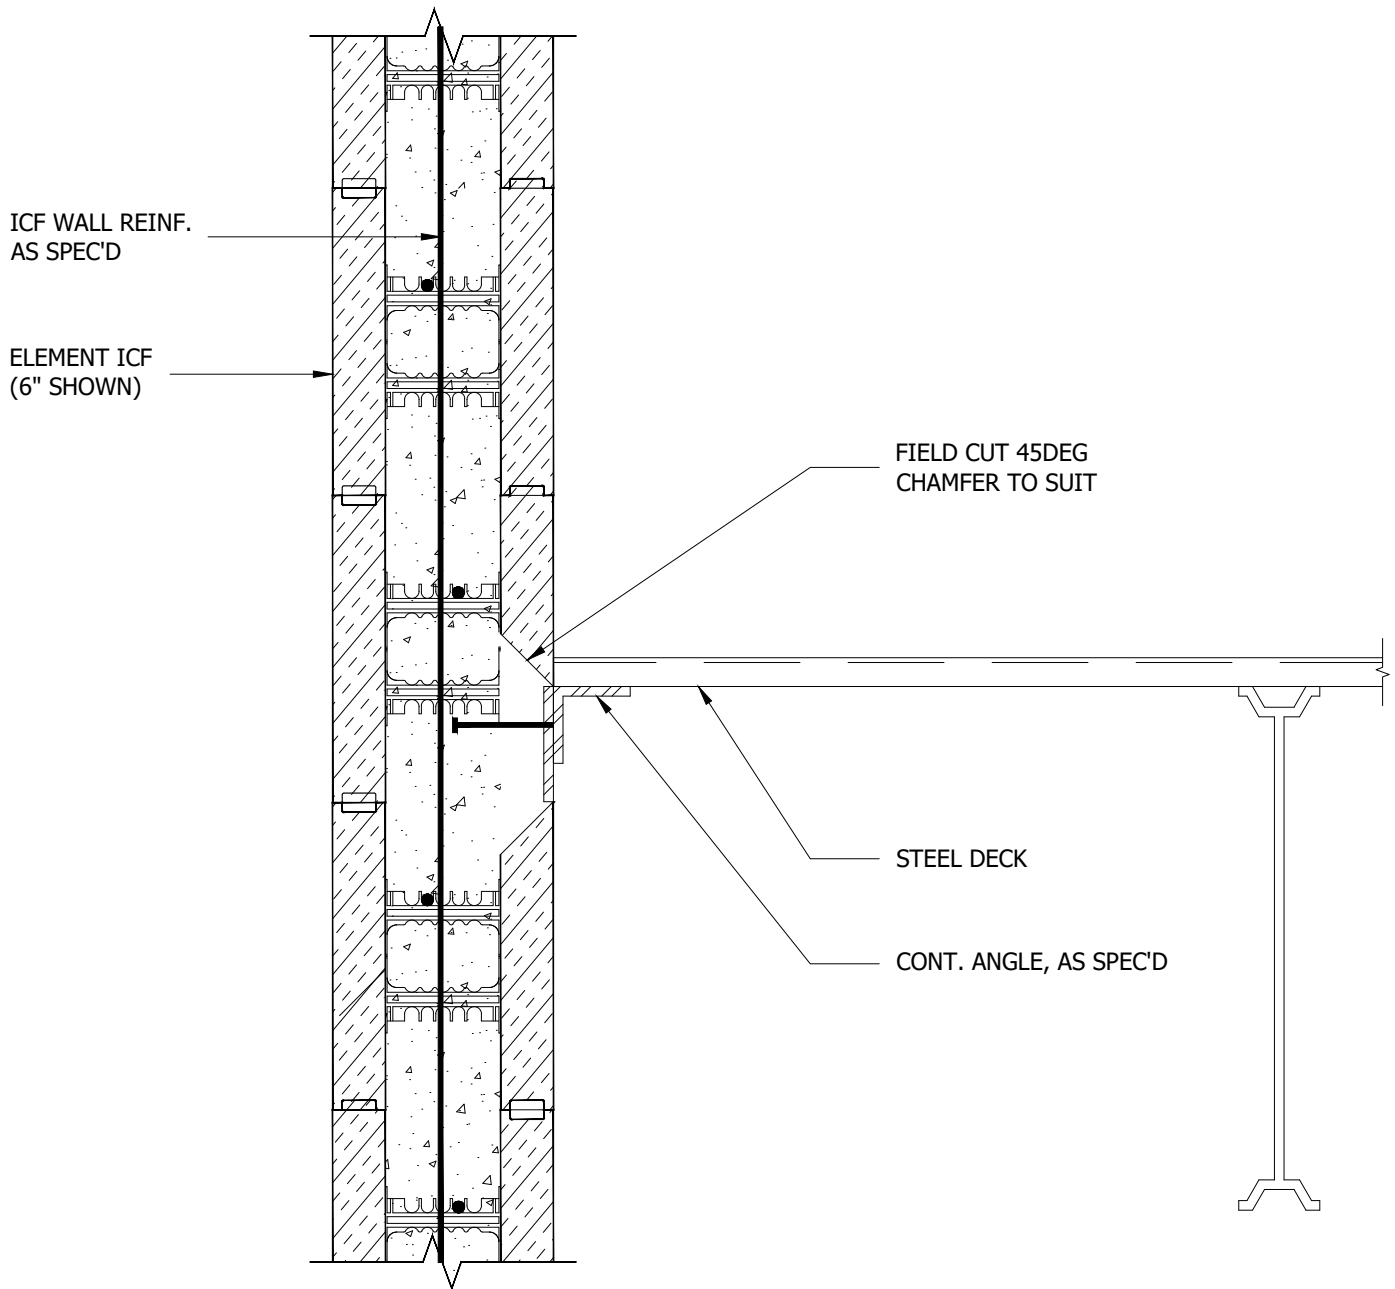

NOTES:

1. Refer to the Element Prescriptive Engineering for reinforcement design of Element ICF walls
2. A protective cover, such as tarp, should be placed over Element form panels in the vicinity where on-site welding and torch work is conducted.