


ELEMENTICF[®]
LOGIX BRANDS


INSTALLATION GUIDE

4th Edition

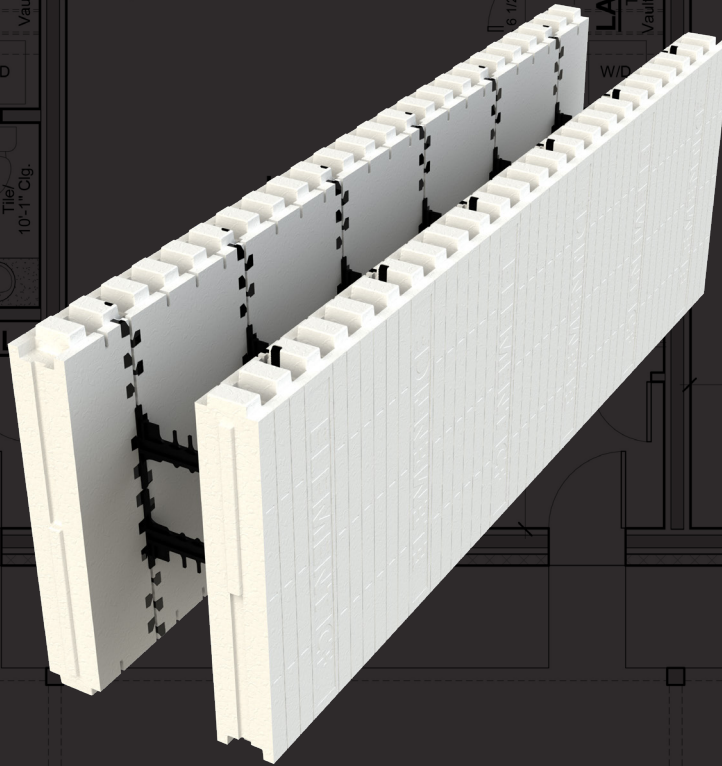


UNIT 1 - CARPORT

Concrete/
8'-7"

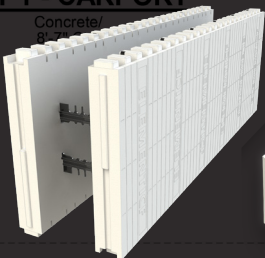



UNIT 2 - CARPORT

Concrete/
8'-7"

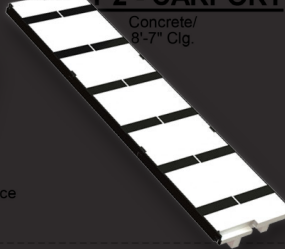

Screen Fence

UNIT 3 - CARPORT

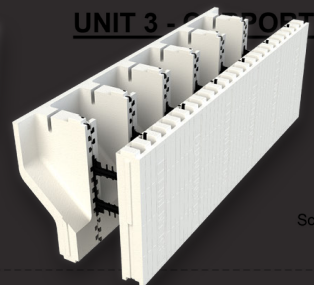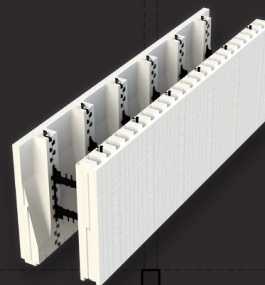

Screen Fence

Disclaimer of Liability

Reference to "Logix Brands Ltd." means the manufacturer (the "Manufacturer") selling the product(s) referenced in the Title section (the "Products") of the enclosed drawings (the "Drawings") to consumers (the "User"). The Manufacturer sells its Products "as is" and the consents of the Drawings are provided "as is".

NO EXPRESS WARRANTIES ARE GIVEN. ALL WARRANTIES, EXPRESS, STATUTORY AND IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED.

The User assumes all risks as to the use of the Products and/or the Drawings.

The Drawings are to be used as reference guides only. The User shall confirm the information contained in the Drawings meets local building codes and construction practices by consulting with local building officials and professionals, and determine if there are any additional building and/or construction requirements. Before use, the User should fully investigate the Products to enable informed choices as to suitability for a particular construction project and proper design and implementation. It is the User's responsibility and obligation to ensure all work performed conforms to applicable building code and labour safety regulations governing the construction.

As the Manufacturer has no control over installation design and workmanship, accessory materials or application conditions, the Manufacturer does not warrant the performance or results of any installation containing the Products and/or derived from the Drawings. The User acknowledges that it has not relied upon any representation, condition or warranty made by the Manufacturer or any other person on the Manufacturer's behalf.

The Manufacturer assumes no responsibility that its Products will be fit for any particular purpose, the Manufacturer will not be liable for any direct, incidental, consequently or indirect damages (including lost profits) arising out of the use of its Products and/or the Drawings.

The Manufacturer reserves the right to make changes to the Drawings without notice and assumes no liability in connection with the use of the Drawings.

© Copyright Logix Brands Ltd. 2023 All rights reserved.

No part of the work contained herein as covered by this copyright may be reproduced or used in any block, or any means – graphic, electronic or mechanical, including without limitation photocopying.

TABLE OF CONTENTS

2.1 – INTRODUCTION 2-7

2.2 – STRUCTURE OF AN ELEMENT ICF BLOCK 2-8

 2.2.1 – ESTIMATING ELEMENT ICF PRODUCTS..... 2-10

2.3 – USEFUL TOOLS & MATERIALS..... 2-10

2.4 – PRODUCT HANDLING & PLACEMENT 2-11

 2.4.1 – HANDLING WEIGHTS 2-12

 2.4.2 – RECOMMENDED OFFLOADING METHODS..... 2-12

2.5 – JOBSITE EFFICIENCY..... 2-13

2.6 – WALL LAYOUT..... 2-14

2.7 – ACCURATE FOOTINGS & SLABS 2-15

2.8 – ELEMENT WALL CONSTRUCTION 2-18

 2.8.1 – SECURING ELEMENT ICF COURSES 2-19

 2.8.2 – BRIDGING FLEXTIES™ 2-20

 2.8.3 – THE FIRST COURSE 2-21

 2.8.4 – THE SECOND COURSE 2-23

 2.8.5 – ADDITIONAL COURSES..... 2-26

 2.8.6 – COURSE HEIGHTS..... 2-27

 2.8.6.1 – HEIGHT ADJUSTERS WITH SITE-ASSEMBLED BLOCKS 2-28

 2.8.6.2 – HEIGHT ADJUSTERS WITH PREFORMED BLOCKS..... 2-29

 2.8.6.3 – HALF-HEIGHTS..... 2-30

 2.8.7 – FIELD-FABRICATED ICF CORNERS 2-32

 2.8.7.1 – BRICK LEDGE CORNERS..... 2-32

 2.8.7.2 – TAPER TOP CORNERS FROM MITRE CUTS 2-34

 2.8.7.3 – TAPER TOP CORNERS FROM STANDARD CORNERS 2-36

 2.8.7.4 – CORNERS FROM STANDARD BLOCKS 2-37

 2.8.7.5 – UNCOMMON WALL ANGLES FROM STANDARD BLOCKS..... 2-41

 2.8.8 – TEE WALLS 2-43

 2.8.9 – GABLE WALLS 2-45

 2.8.10 – RADIUS WALLS 2-46

 2.8.11 – ELEMENT ICF INSERT 2-47

TABLE OF CONTENTS

2.9 – REINFORCEMENT	2-48
2.9.1 – BASIC REINFORCEMENT	2-48
2.9.2 – HORIZONTAL & VERTICAL REINFORCEMENT.....	2-49
2.9.3 – HORIZONTAL REBAR SPACINGS	2-50
2.9.4 – TYPICAL REINFORCEMENT AT OPENINGS	2-51
2.9.5 – LINTELS.....	2-52
2.10 – WINDOW & DOOR BUCKS	2-53
2.10.1 – PRO BUCK™	2-54
2.10.2 – TREATED PLYWOOD BUCK	2-59
2.10.3 – SOLID WOOD BUCK	2-60
2.10.4 – RADIUS OPENINGS	2-61
2.10.5 – METAL JAMB SYSTEMS.....	2-62
2.10.11 – FLASHING OPENINGS.....	2-63
2.11 – ADDITIONAL BLOCK SUPPORT.....	2-67
2.11.1 – STRAPPING AND BRACING.....	2-67
2.11.2 – CORNER BLOCK SUPPORT	2-69
2.12 – WALL BRACING & ALIGNMENT SYSTEM.....	2-71
2.13 – FLOOR CONNECTIONS.....	2-72
2.13.1 – LEDGER WITH ANCHOR BOLTS & JOIST HANGERS.....	2-72
2.13.2 – STEEL ANGLE IRON LEDGER.....	2-73
2.13.3 – BRICK LEDGE FOR TOP & BOTTOM CHORD BEARING SYSTEMS.....	2-75
2.13.4 – LEDGER WITH SIMPSON BRACKET & JOIST HANGERS.....	2-76
2.13.5 – TRANSITION LEDGE.....	2-78
2.13.5.1 – TRANSITION LEDGE WITH CORNER BLOCKS	2-79
2.13.6 – TAPER TOP WITH SILL PLATE.....	2-81
2.13.7 – CONCRETE FLOOR SYSTEMS	2-82
2.13.7.1 – PRECAST CONCRETE FLOORS	2-82
2.13.7.2 – COMPOSITE FLOOR SYSTEMS	2-83
2.14 – ROOF CONNECTIONS	2-84
2.15 – SERVICE PENETRATIONS.....	2-85
2.16 – CONCRETE PLACEMENT.....	2-86
2.16.1 – PRE-PLACEMENT CHECKLIST	2-86
2.16.2 – MIX DESIGN.....	2-87

TABLE OF CONTENTS

2.16.3 – BEST PRACTICES..... 2-88

2.16.4 – PLACING CONCRETE.....2-89

2.16.5 – POST-PLACEMENT CHECKLIST2-90

2.17 – ELECTRICAL INSTALLATIONS2-91

2.18 – PLUMBING INSTALLATIONS2-92

2.19 – INTERIOR & EXTERIOR FINISHES2-93

2.19.1 – VAPOR & AIR BARRIERS.....2-93

2.19.2 – INTERIOR DRYWALL.....2-94

2.19.3 – EXTERIOR SIDING.....2-95

2.19.4 – STEEL PANEL SIDING2-96

2.19.5 – WOOD SIDING2-97

2.19.6 – EIFS.....2-98

2.19.7 – CEMENT COMPOSITE SIDING2-99

2.19.8 – BRICK VENEER 2-100

2.19.9 – BELOW GRADE WATERPROOFING, DAMP PROOFING & PARGING..... 2-101

2.19.9.1 – BELOW GRADE WATERPROOFING..... 2-101

2.19.9.2 – ABOVE GRADE PARGING..... 2-103

2.20 – ATTACHING FIXTURES2-104

2.20.1 – LIGHT WEIGHT FIXTURES..... 2-104

2.20.2 – HEAVY WEIGHT FIXTURES 2-104

2.20.2.1 – CABINETS 2-105

2.20.2.2 – GRAB BARS 2-106

2.20.2.3 – TELEVISIONS..... 2-107

2.21 – TALL WALLS2-108

APPENDIX A – HOLDING POWER OF SCREWS FASTENED TO ELEMENT FURRING STRIPS.....2-111

APPENDIX A.2 – MINIMUM FASTENER LENGTHS2-112

APPENDIX B – RADIUS WALL TABLE.....2-113

APPENDIX C – PREFERRED WALL DIMENSIONS.....2-123

APPENDIX D – SUPPORTING PRODUCTS.....2-129

APPENDIX E – ELEMENT ICF CONCRETE VOLUMES.....2-131

TABLE OF CONTENTS



2.1 – INTRODUCTION

Logix® Brands develops insulated concrete form (ICF) systems engineered for consistent performance in the field. Our products are designed to support efficient installation, and long-term durability when installed in accordance with this guide.

Logix provides technical support focused on practical, job-site application. Our technical team is available to assist with installation questions and to help resolve site-specific conditions as they arise. Contractor training and regional support resources are available across the United States and Canada.

With decades of experience in ICF manufacturing and company-owned production facilities throughout North America, Logix maintains direct control over product design, quality, and ongoing system development.


For more information contact a Logix® Brands representative or visit our product website at www.ElementICF.com and click “Contact Us.” You can also register online to receive Element ICF updates.

This manual will be updated regularly. Current updates will be available at www.ElementICF.com.

2.2 – STRUCTURE OF AN ELEMENT ICF BLOCK

The images below show the typical anatomy of Site-Assembled and Preformed Standard Element ICF blocks. The same features generally apply to Element corner, brick ledge, and taper top blocks.

SITE-ASSEMBLED STANDARD BLOCK

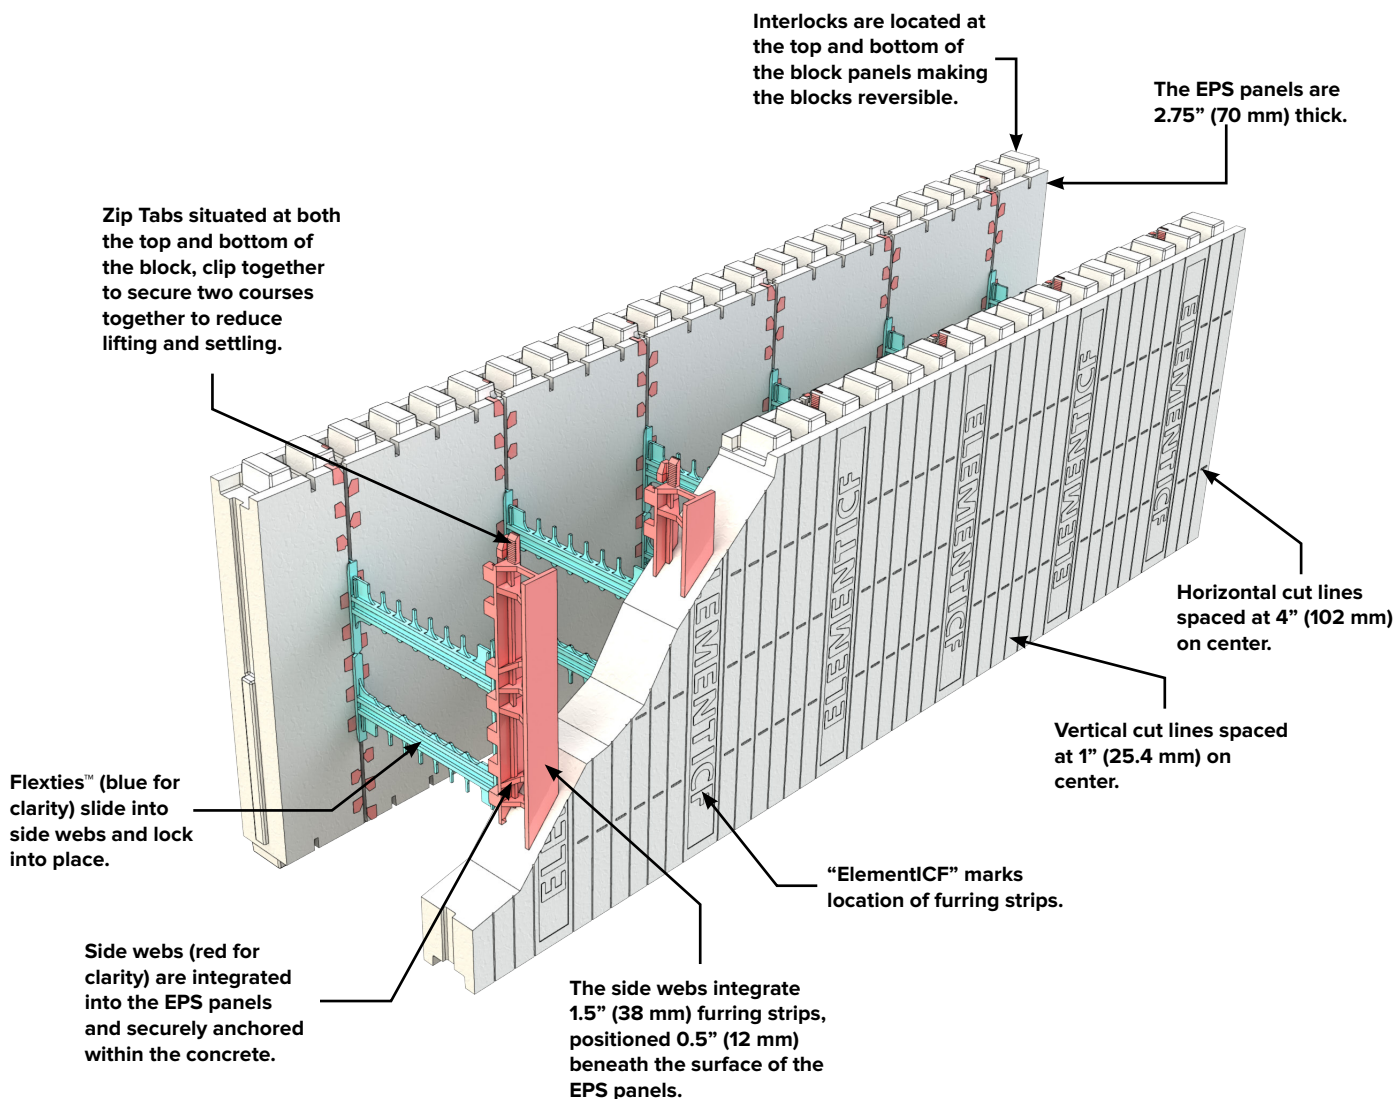


Side webs and Flexties™ are spaced at 8" (203 mm) on center.

NOTE:

- When cuts are made along the block horizontally, the blocks are no longer reversible. However, all horizontally cut pieces can be used on the wall typically at the bottom or top course of the wall or opening.
- **Minimum fastener lengths:** Furring strips sit under 0.5 in. (12 mm) of foam cover on standard blocks and 1.0 in. (25 mm) at the outside corner of corner blocks. A fastener driven into a furring strip must pass through the applied material plus this cover and still fully engage the tab - see **Appendix A.2**.

PREFORMED STANDARD BLOCK

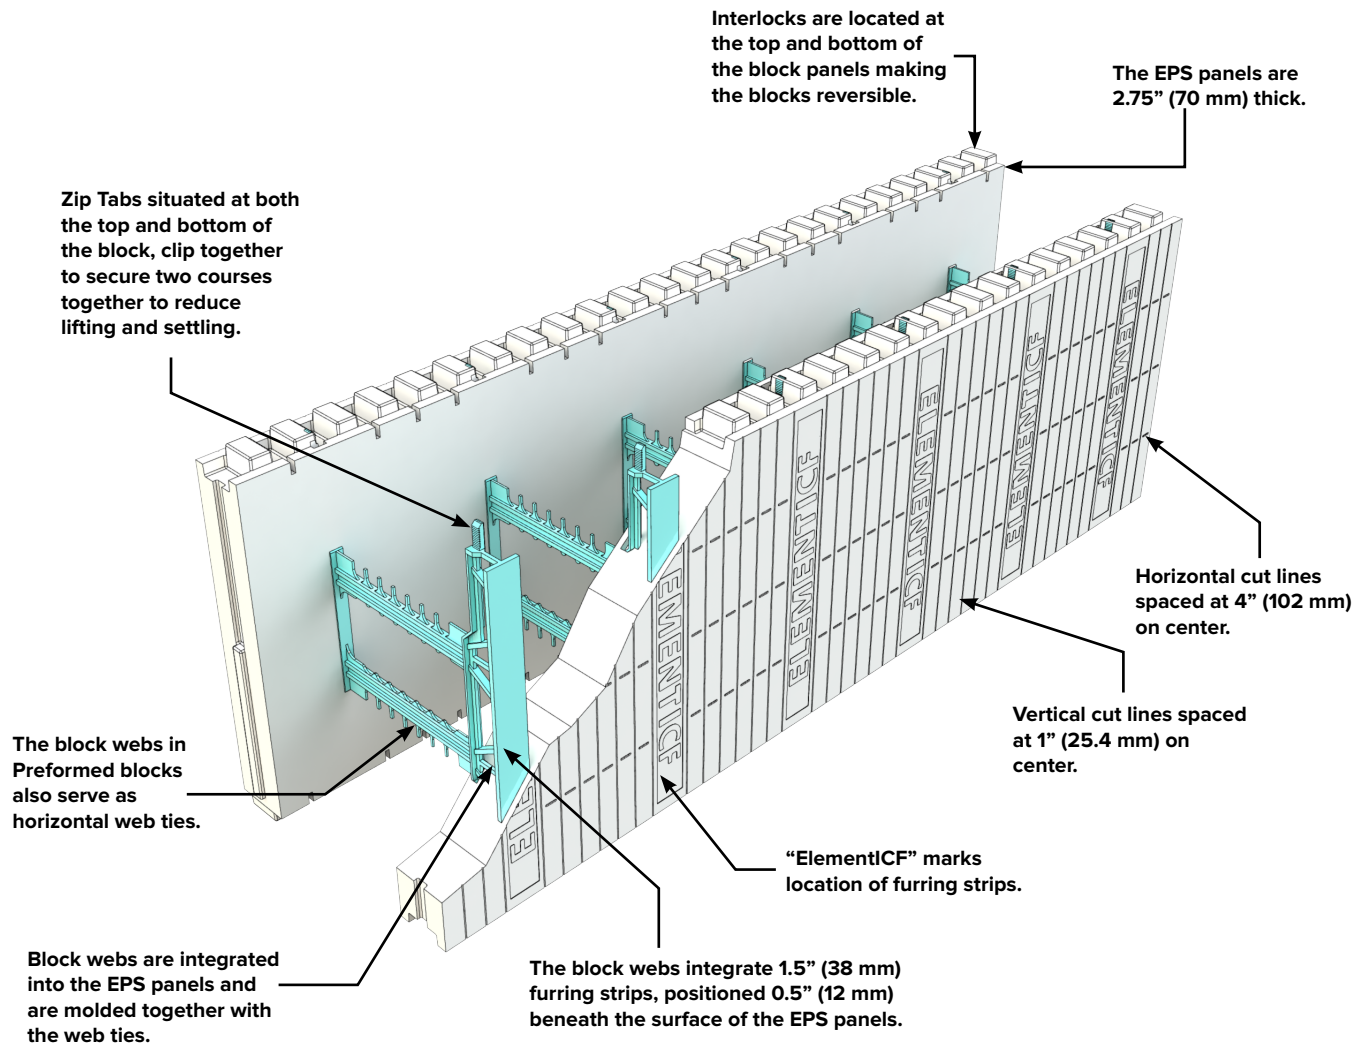


Side webs and web ties are spaced at 8" (203 mm) on center.


2.2.1 – ESTIMATING ELEMENT ICF PRODUCTS

For estimating Element ICF blocks, refer to the **Element Estimating Guide** or use the **Element Project Estimator** web app, which provides detailed, project-specific quantities. For preliminary, high-level planning, the **One-Minute Estimator** may be used to generate ballpark quantities for blocks, concrete, and reinforcing steel. Both tools are accessible from the Element [ICF home page](#) by selecting the “Estimating” link in the top-right corner.

Concrete volumes for each block type are provided in “APPENDIX E – ELEMENT ICF CONCRETE VOLUMES” on page 131.

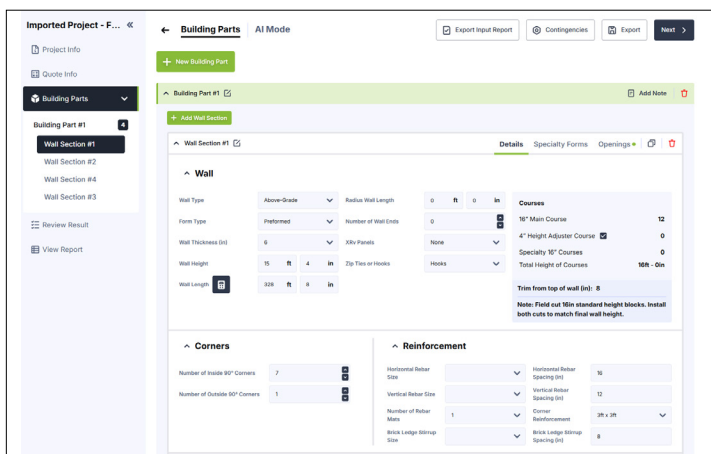

Element Project Estimator

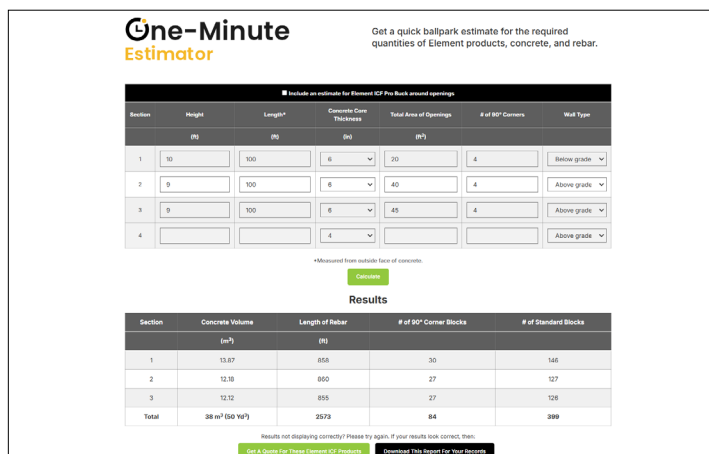

Element One Estimator

2.3 – USEFUL TOOLS & MATERIALS

- Pruning saw
- Cordless drill
- Screws
- Hot knife
- Electric chainsaw
- Fiberglass-reinforced tape
- Step ladder
- Rebar bender/cutter
- Internal vibrator
- Contractor-grade foam gun
- Low expansion foam adhesive
- Approved scaffold planks
- Transit or laser
- 48-inch (1220 mm) level
- Bolt cutters
- String line
- Chalk line
- Wall alignment system (safety compliant)
- 36-inch (914 mm) plastic zip ties
- Concrete embedments
- Window and door buck material
- Sleeves for wall penetrations

2.4 – PRODUCT HANDLING & PLACEMENT

Element ICF products may be handled using several accepted methods. Element blocks are manufactured with a consistent 2 3/4-inch (70 mm) panel thickness, which reduces the likelihood of damage during normal handling when products are managed in accordance with this guide.



- Element panels are packaged in bags containing six standard panels per bag. Bags are placed on skids and shrink-wrapped for shipment.
- Element blocks are bundled into compact units intended to facilitate handling.
- Flexties™ for site-assembled blocks are shipped separately in boxes.
- Products may be unloaded manually; however, the use of appropriate mechanical handling equipment is recommended, particularly when unloading skids of panels.
- Corner blocks and panels are bundled to improve handling efficiency.
- When transporting blocks on open trailers, loads shall be adequately secured. Care shall be taken to prevent damage caused by strapping, restraints, or improper load securement.
- Element blocks are manufactured to the following dimensional tolerances:

Length: $\pm 1/8$ -inch (± 3 mm)

Height: $\pm 1/16$ -inch (± 2 mm)

Upon unloading, blocks shall be inspected to verify uniform length and height. A minimum of two blocks per skid should be measured. If blocks are found to be outside the stated tolerances, installation shall not proceed, and the local Element representative shall be notified immediately.

2.4.1 – HANDLING WEIGHTS

Element ICF blocks are delivered in secured bundles and placed on wooden forklift pallets to support handling and transportation.

The following weights are provided for reference only:

- **Standard Blocks**
One 8-inch (203 mm) Preformed standard block weighs approximately 7 lb (3 kg).
A full pallet containing 29 blocks weighs approximately 203 lb (87 kg), excluding the pallet.
- **Site-Assembled Panels**
Each bundle of 6-inch (152 mm) Site-assembled panels weighs approximately 26 lb (11.8 kg).
A full pallet containing 18 bundles weighs approximately 468 lb (212 kg), excluding the pallet.


Actual weights may vary. Contractors are responsible for verifying handling conditions and selecting appropriate equipment and methods.

2.4.2 – RECOMMENDED OFFLOADING METHODS

- **Mechanical Offloading**
The use of mechanical handling equipment, such as forklifts or pallet jacks, is the preferred method for offloading Element ICF products and shall be used where available.
- **Manual Offloading**
Where mechanical equipment is not available and manual offloading is undertaken, appropriate tools and methods shall be used to maintain control of the load. A pallet puller used in combination with a strap is recommended to draw pallets toward the trailer tailgate in a controlled manner.

If a pallet puller is not available, a temporary hook fabricated from reinforcing steel may be used solely to reposition the pallet toward the trailer edge. This method shall be employed with caution.

All material handling operations shall be conducted in accordance with applicable occupational health and safety regulations. The installer and contractor are solely responsible for ensuring adequate equipment, sufficient personnel, and safe lifting practices are used at all times.

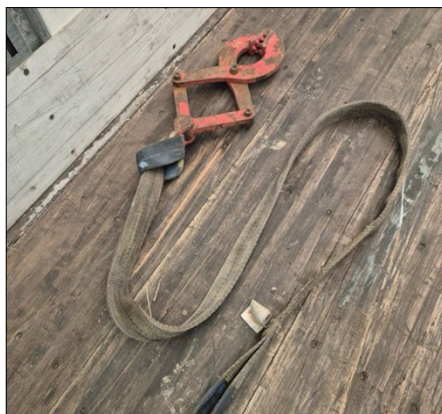

2.5 – JOBSITE EFFICIENCY

An efficient jobsite means a faster and safer installation, and ultimately a higher quality finished project.

- Keep all materials and tools outside of the footing area until the chalk lines have been snapped and the wall layout is complete. Generally, construction is accomplished from within the perimeter of the structure.
- When wall layout is complete, place blocks at least 7-ft (2134 mm) inside the perimeter of the footings or slab to accommodate the wall alignment system.
- Space skids of standard blocks around the inside of the entire perimeter.



When placing courses of blocks, always take blocks from the closest skid. This will eliminate the effects of normal manufacturing variations between skids.

- Periodic checking of dimensions ensures accurate wall construction.
- Additional materials that should be located within the perimeter:
 - Window and door bucks
 - Rebar (straight or pre-bent)
 - Alignment system
 - Approved scaffold planks
 - Tools


2.6 – WALL LAYOUT

Accurate wall layout is essential to completing an Element project successfully and profitably.

Confirm that the wall layout matches the project plans and specifications.

Element offers both straight Standard blocks and 90 degree corner blocks. Blocks can also be easily cut on-site to accommodate any corner angle or radius. See “2.8.10 – RADIUS WALLS” on page 46.


To minimize on-site cutting and reduce waste, “APPENDIX C – PREFERRED WALL DIMENSIONS” on page 123 outlines various wall length dimensions based on efficient and optimal layouts.

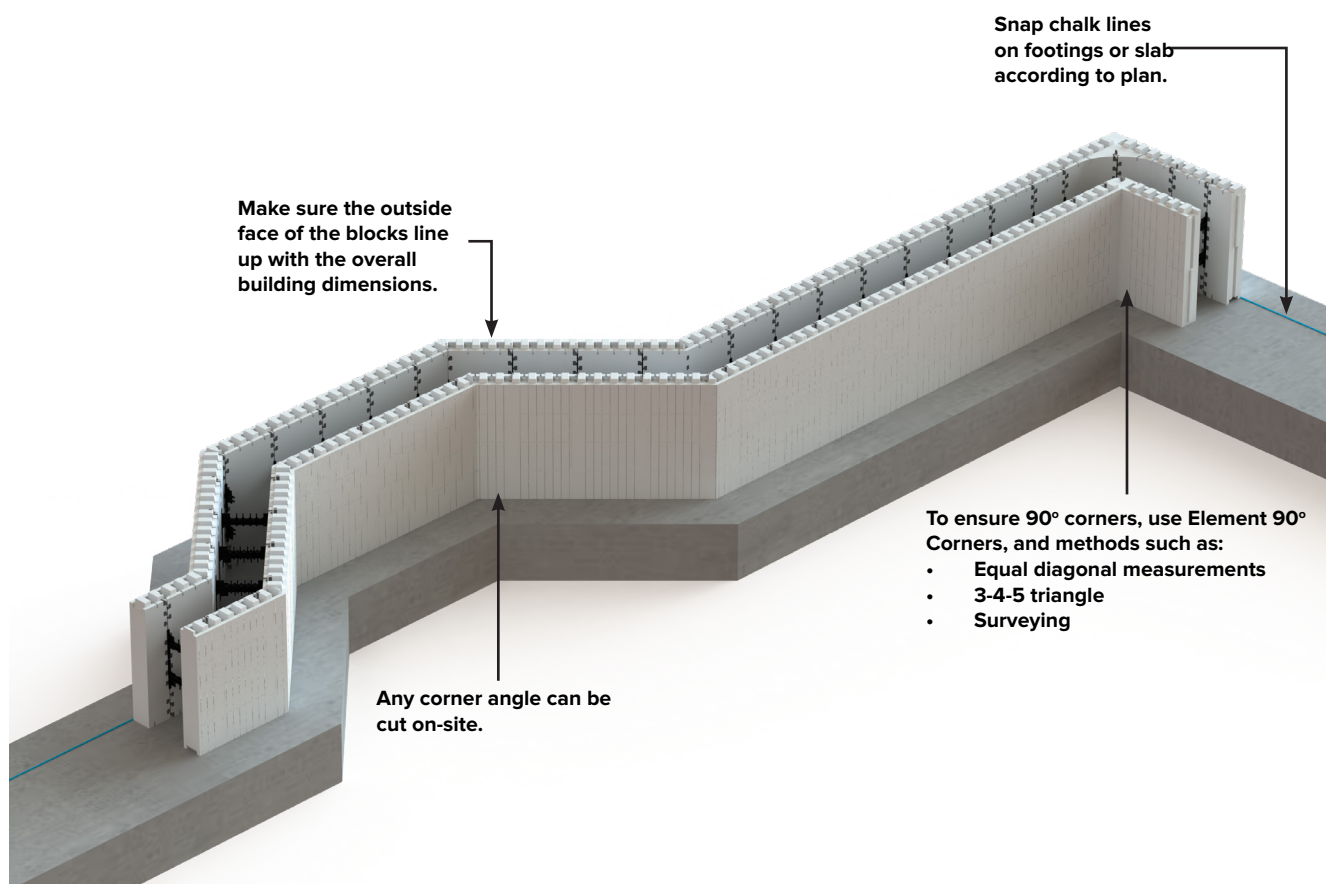


2.7 – ACCURATE FOOTINGS & SLABS

The first step to a successful Element installation is an accurate footing or slab. This means a footing or slab that is:


- Code compliant
- Designed in accordance with construction drawings and specifications
- Designed taking into account soil conditions, seismic area, number of stories, building loads, and water tables.

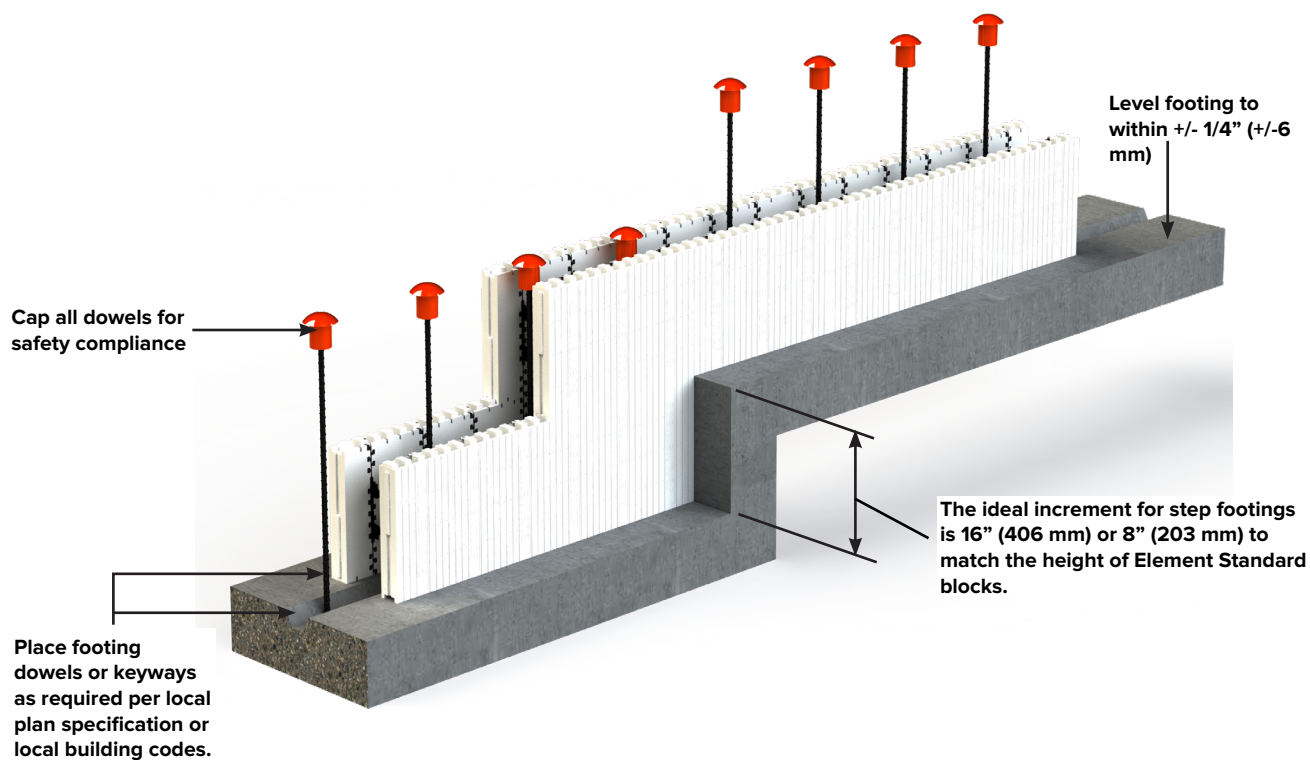


When placing the first course of ICF blocks, installers can choose to remove the interlocks that rest on the footing or leave them in place. Retaining these interlocks can increase the finished ICF wall height by ½-inch (13 mm), since they project ½-inch (13 mm) beyond a standard 16-inch (406 mm) block.

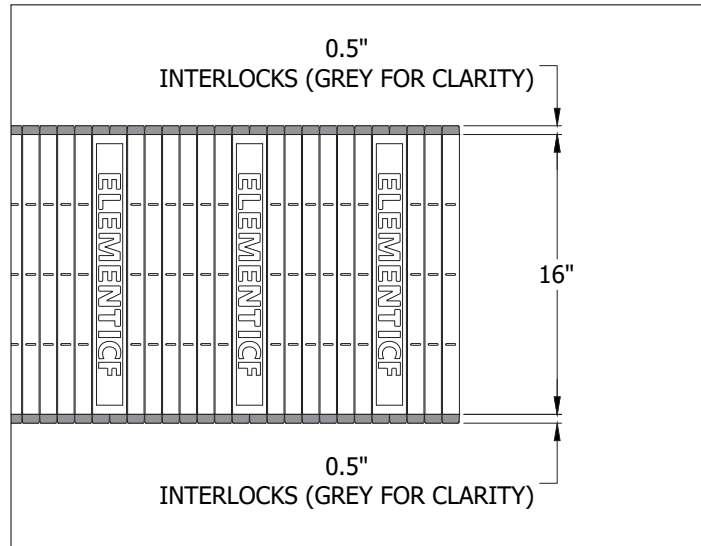

Standard 16-inch (406 mm) tall blocks have interlocks along the top and bottom that are 1/2-inch (13 mm) in height.

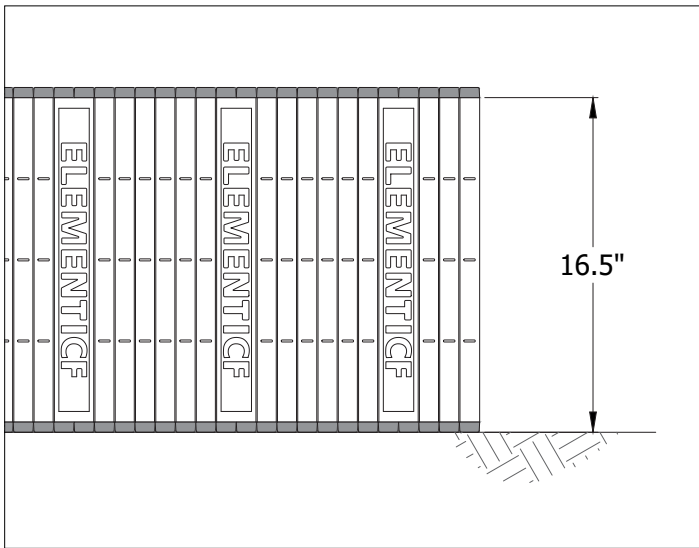


Standard 16-inch (406 mm) tall blocks on footing with bottom interlocks.

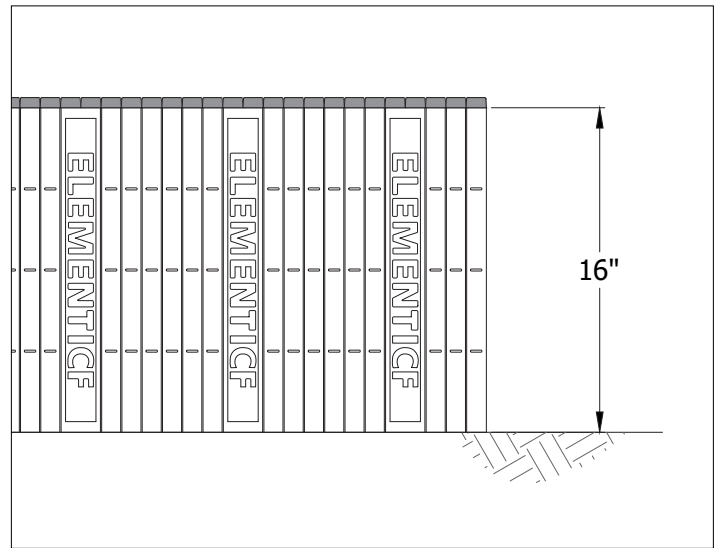


Standard 16-inch (406 mm) tall blocks on footing with bottom interlocks removed.


Depending on whether interlocks are present at the lowest or highest step of the footing, the step height may need to be adjusted by ½-inch (13 mm) to ensure the ICF courses seat properly. This is especially important to consider when using blocks shorter than 16-inches (406 mm) in height.

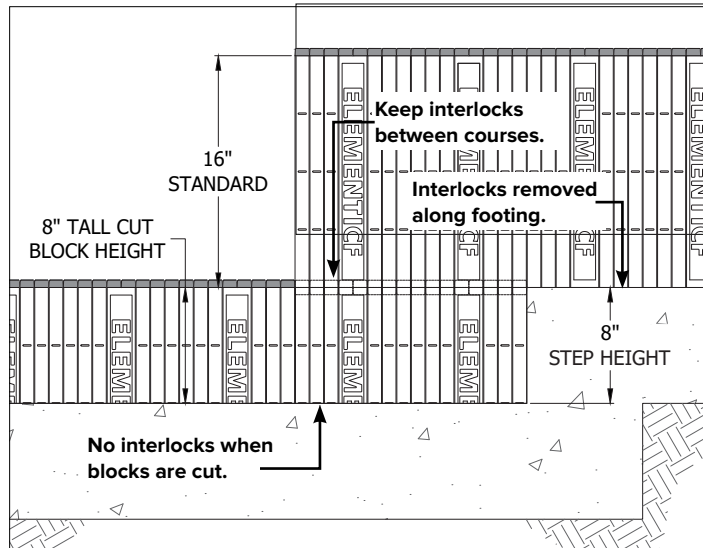


Example of cut block on lower step footing with interlocks removed.

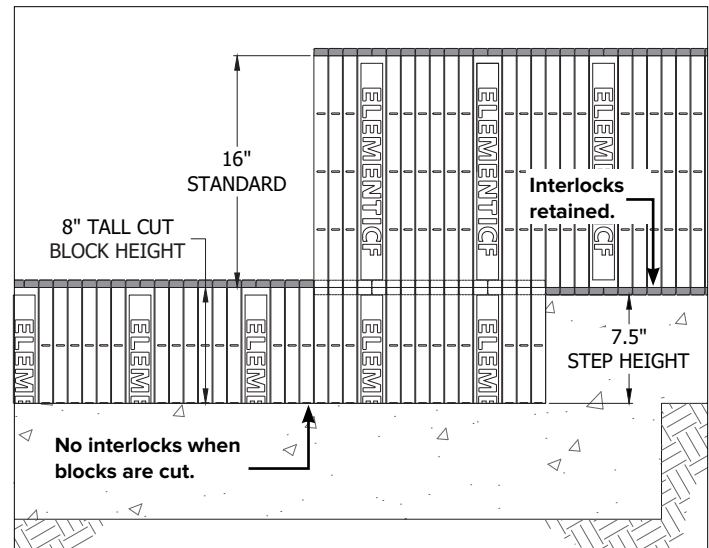

Example of cut block on lower step footing with interlocks retained - reduces step footing by ½-inch (13 mm).

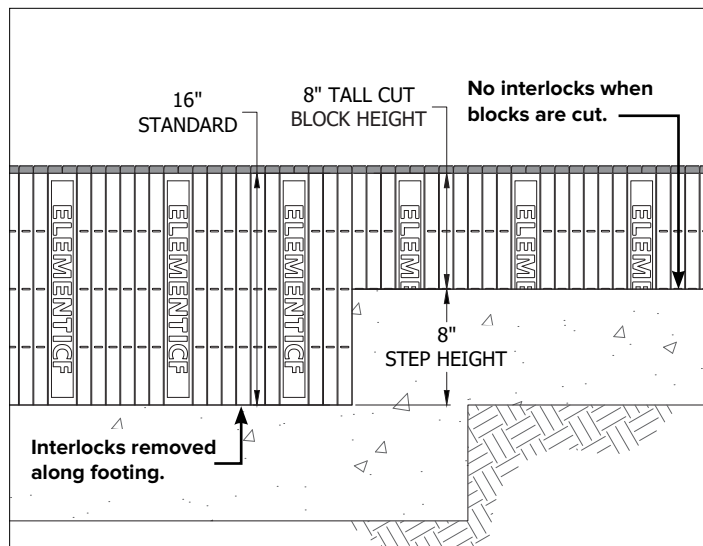


Example of cut block on higher step footing with interlocks removed.

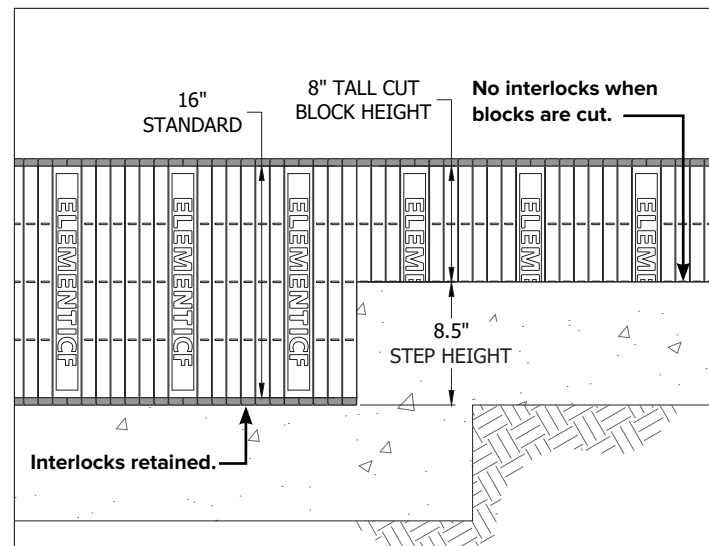

Example of cut block on higher step footing with interlocks in place - increases step footing by ½-inch (13 mm).


2.8 – ELEMENT WALL CONSTRUCTION

When a block is cut, it can be identified using bars and webs. For example, a cut block with three bars, two webs, and three bars will be referred to as a “3-2-3”.

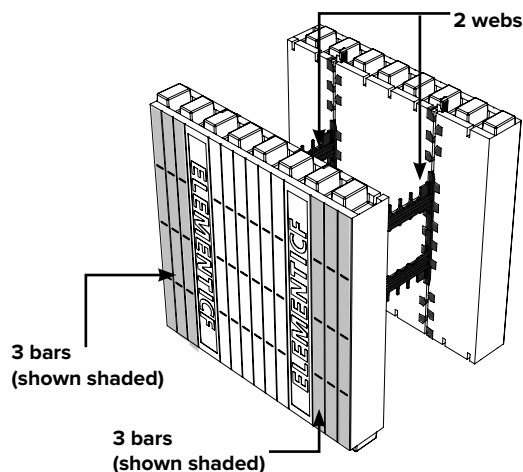

By establishing a logical block pattern that takes into account the building dimensions, maximum efficiency will be achieved. It is important that the building dimensions have a tolerance of +/-1/2-inch (13 mm) or a stacked vertical joint will result. Such joints are acceptable if dimensions necessitate but will require additional block support on both sides of the block.

When building dimensions are based on 4-ft (1219 mm) increments, it is recommended to maintain a staggered joint pattern at the corners by reversing the orientation of the corner blocks..

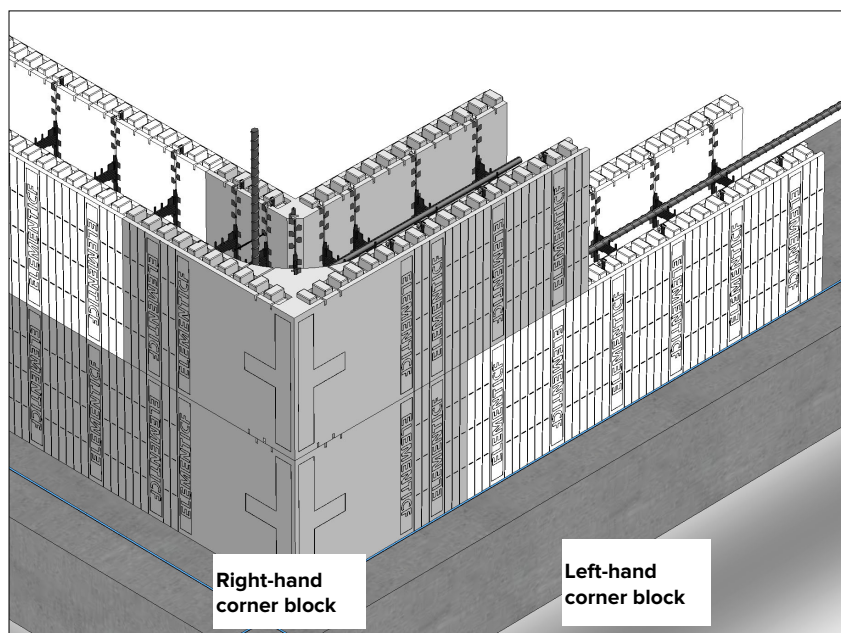

Alternating corner blocks are achieved by flipping the reversible corner blocks.



2.8.1 – SECURING ELEMENT ICF COURSES

Element's built-in Zip Tabs keep courses tight in most situations, so supplemental support, such as zip ties, wire hooks, Form Lock bridging Flexties™ are only needed in specific situations. Use the checklist below when supplemental support is needed.

Task	When It May Be Needed	Tips & Caution
Horizontal Zip Ties or hooks	• First course - locks the first course layout until the 2nd course is placed (especially helpful if you're not using kicker plates) • Top course - good practice to secure and maintain alignment. • Corner, window and door rough openings, beam pockets, lintels and any block that has been vertically cut.	• Trim tails of zip ties flush to avoid interference with rebar and concrete placement. • Bridging Flex-Ties, specifically for use on site-assembled blocks can supplement around large openings.
Vertical Hooks	Not required.	Zip tabs built into Element prevent uplift and "floating" without vertical hooks.
Form Lock	• 4 ft frost walls — add to one course (second course up from footing). • Short stem walls when no full alignment system is used. • Taller walls — add to second course up from footing, then 2nd course down from top of wall, then every 4th or 5th course in between.	Use only if extra straightness is desired: • Site-assembled walls: optional and not needed if you already have enough Bridging FlexTies. • Preformed walls: optional — installer preference.

Quick Reference

1. Start Simple: Build the wall with the built-in Zip Tabs only; add zip ties, hooks and Form Lock where the checklist calls for them.
2. First & Last Rows Rule: Secure the very bottom and very top—everything in between depends on openings or cuts.
3. Cut = Tie: Any vertical cut block needs horizontal (and, if practical, vertical) zip ties or hooks.
4. Bridging Flexties™ on Site-assembled walls can replace Form Lock.
5. Don't Overdo It: More hardware ≠ straighter wall. Use the minimum fasteners needed for a clean pour.


2.8.2 – BRIDGING FLEXTIES™

Using Bridging Flexties™ across the joints between courses increases the concrete pressure resistance of the Element ICF wall system. This technique—referred to as Bridging Flexties™—is especially recommended in areas subjected to higher-than-normal concrete pressures, such as at corner blocks.


Bridging Flexties™ provide a clear advantage by eliminating the need for Form Locks and simplifying wall assembly. Typically, only two Bridging Flexties™ per block are required, which also contributes to straighter, flatter walls.

All Site-assembled ICF blocks can accommodate Bridging Flexties™. With Preformed ICF blocks, Bridging Flexties™ can only be used in the diagonals of Preformed corners.


NOTE: Be sure to install horizontal rebar for the current course prior to installing Bridging Flexties™.

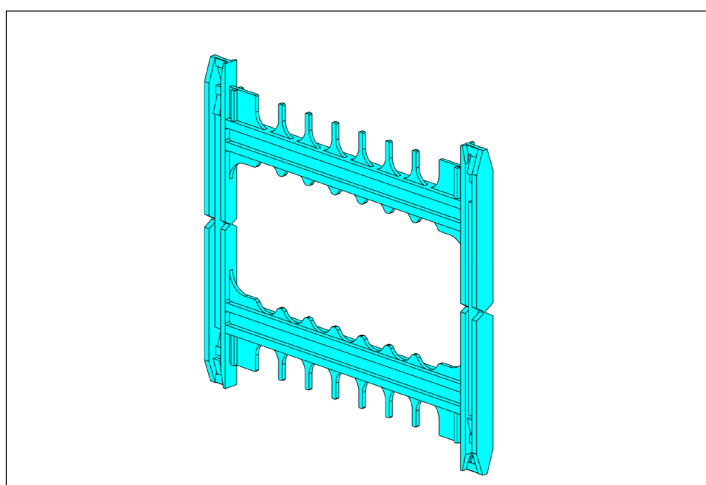


Additional Flexties™ can be used to increase block pressure resistance (shown in blue for clarity).

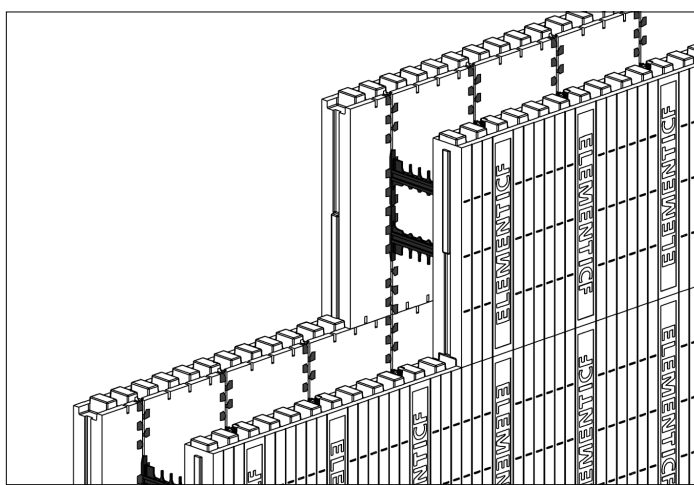

Conventionally placed Element blocks without Bridging Flexties™.

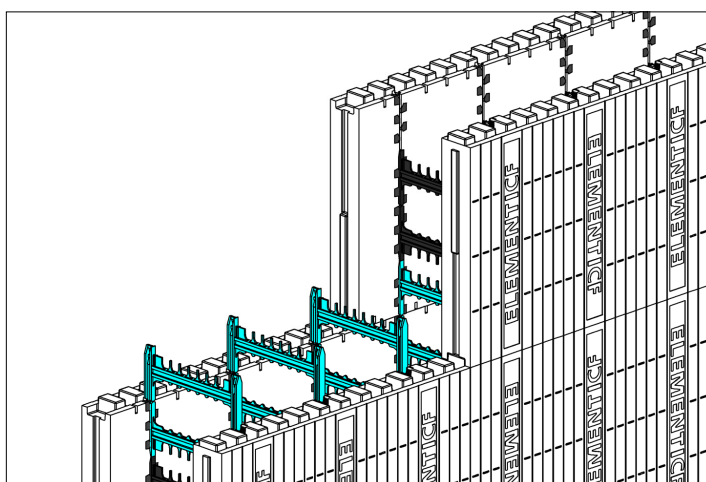


Bridging Flexties™ added for additional block support. Illustration shows various possible locations, but typically only 2 to 3 bridging Flexties™ per block are needed.

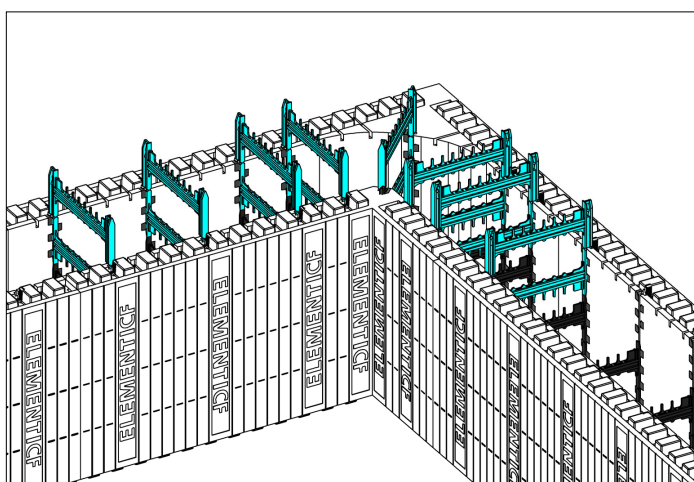


Bridging Flexties™ at corners. Illustration shows various possible locations, but typically only 2 to 3 bridging Flexties™ per block are needed.


2.8.3 – THE FIRST COURSE

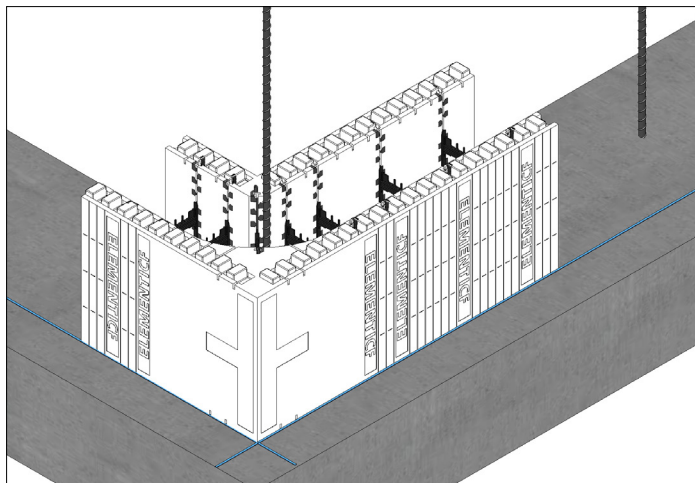

STEP 1: Start first course at a corner and align with chalk line. The interlocks at the bottom of the blocks can be removed, if preferred.

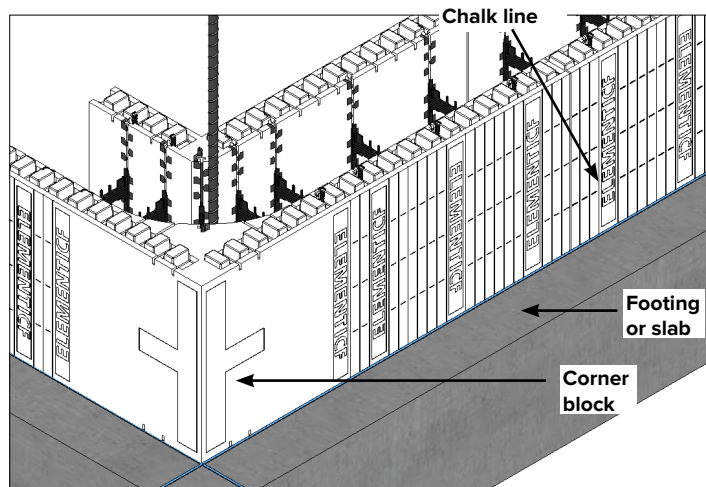


STEP 2: Continue placing blocks along the chalk line.

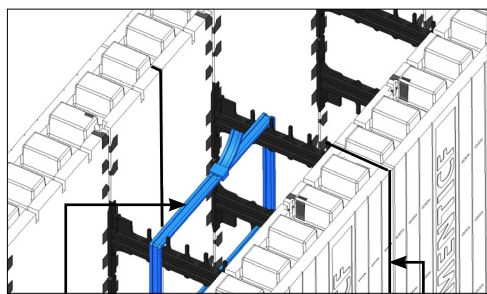


Zip tie securing blocks.

Joint between blocks
(shown as dark lines
for clarity)

STEP 3: Secure blocks end-to-end to maintain building dimensions using zip ties.

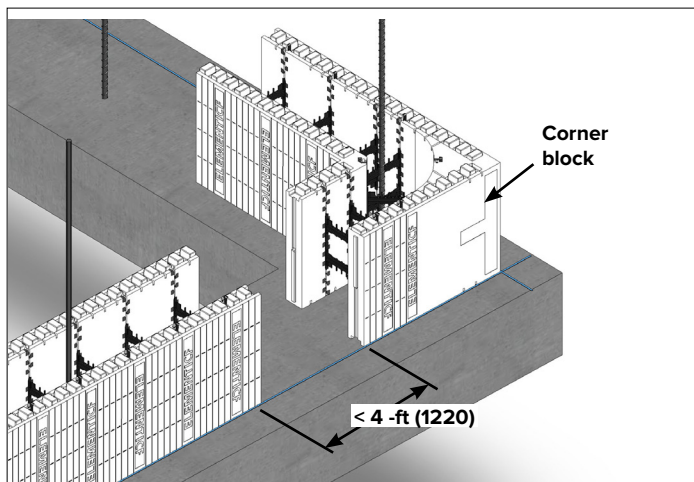


STEP 4: When blocks are 4-ft (1220 mm) or less from the second corner, place the second corner block.

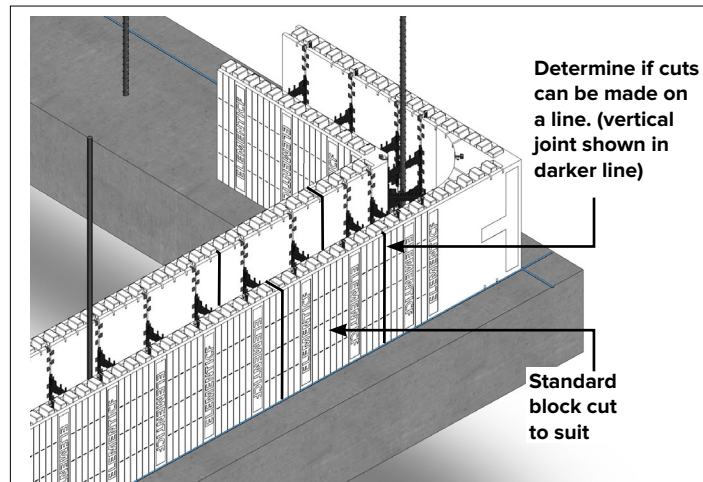

STEP 5: Cut a Standard block to fit the space left between the corner and the previous Standard block.

At this point, determine if adjustments are needed to the building dimensions so the cut can be made on a line. If adjustments are needed, alter chalk lines accordingly.

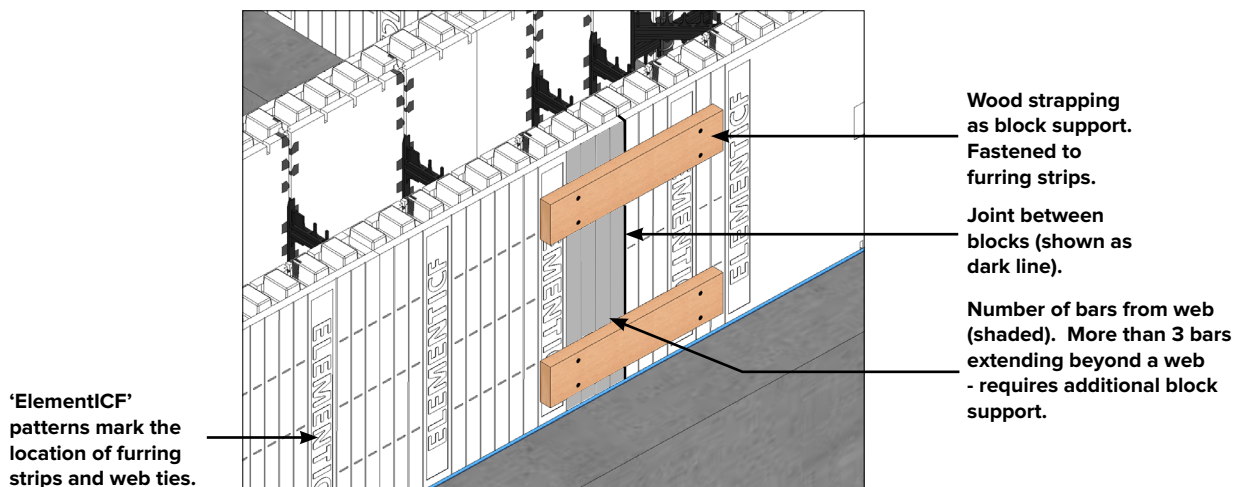

If more than 3 bars are extending beyond any web, additional block support is required on both faces of the block.

STEP 6: Continue around the wall in this manner until the first course is complete and dimensions are verified.


Leave the first course of blocks in place across door openings and low windows until blocks have been placed and building dimensions have been verified to maintain the interlock pattern above openings.

STEP 7: Place necessary rebar in first course as specified and according to local code.

NOTE: Web ties are designed with 'rebar slots' to provide secure placement of horizontal rebar, and allows for non-contact lap splices. See "2.9.2 – HORIZONTAL & VERTICAL REINFORCEMENT" on page 49.

For examples of horizontal corner reinforcement at Element corner blocks, detail drawings are available in the [Element Technical Library website](#).

STEP 8: Prior to starting the second course, install additional block support if required.

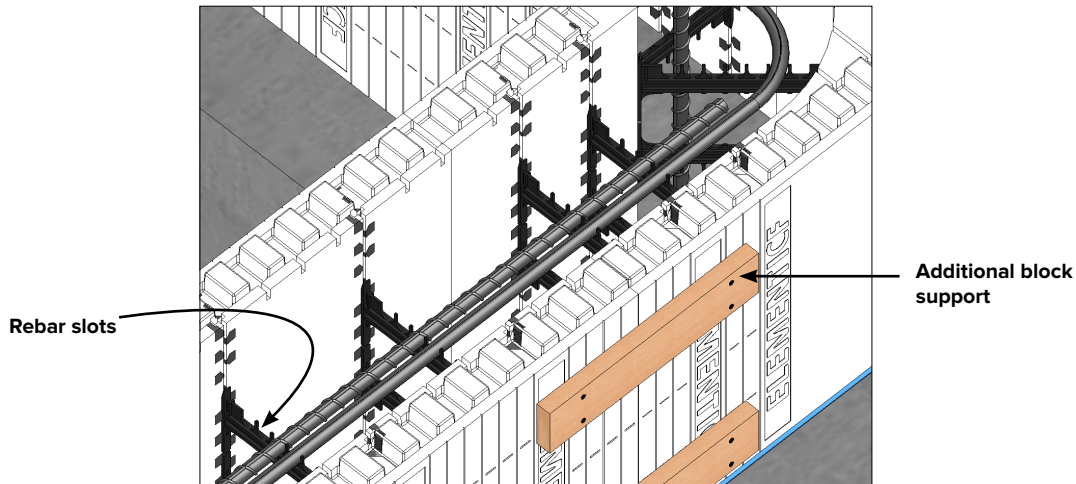


Place reinforcement and necessary additional block support prior to installing the second course.


2.8.4 – THE SECOND COURSE

STEP 1: Starting at the original corner, place appropriate corner block. When possible, alternate between left- and right-hand corners between courses. The blocks are reversible so flipping the blocks over for every course will alternate the orientation of the corner blocks and create a 16-inch (406 mm) offset.


NOTE: It is necessary to firmly seat every block to the block below to minimize interlock settling. The Zip Tabs at the top and bottom of each block, and interlock system, is designed to secure blocks between courses, which helps minimize block settling and movement during installation and concrete placement.

STEP 2: Continue placing blocks around the wall, working in the same direction as the first course.

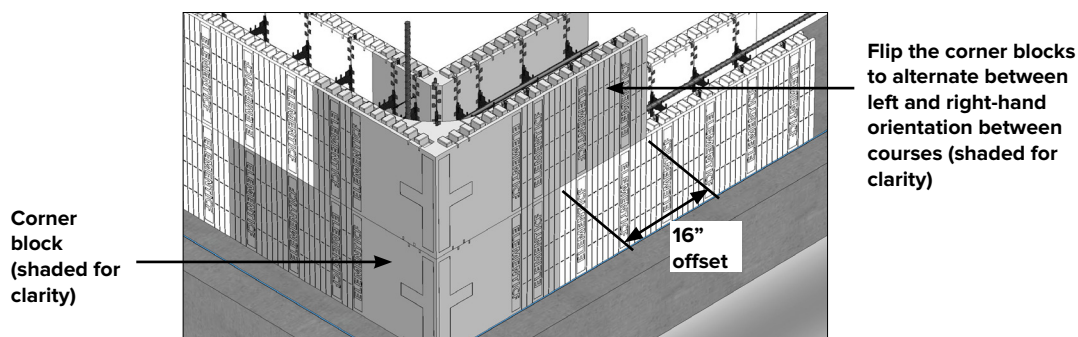

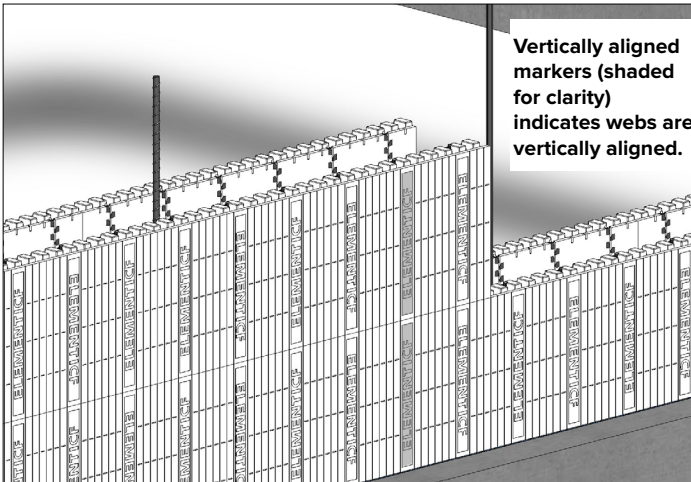


STEP 3: All webs should line up vertically, except where building dimensions are other than 8 -inch (203 mm) increments. In this case, special cuts may be required to allow vertical alignment of webs. Webs are aligned when markers on the face of the block are vertically aligned.

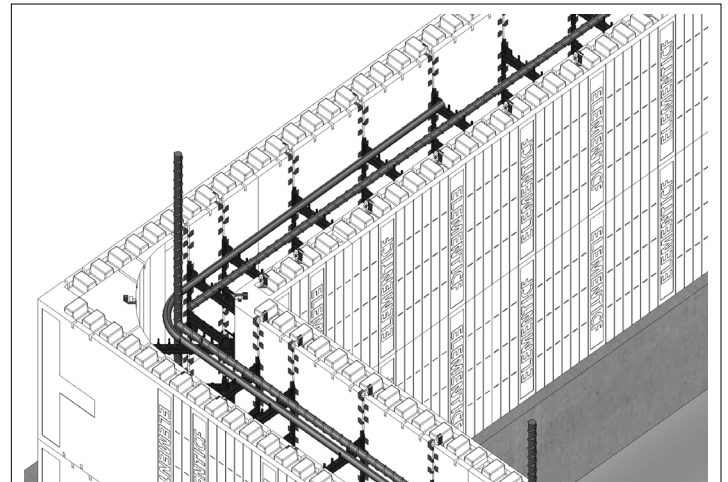

STEP 4: Place necessary rebar after completion of second course.

NOTE: Web ties are designed with 'rebar slots' to provide secure placement of horizontal rebar, and allows for non-contact lap splices.

STEP 5: Use foam adhesive to fasten the straightened and leveled wall to the footing or slab. Insert the nozzle 1-inch (25 mm) at the base of every other web along the chalk line, and shimmed and trimmed locations, and inject foam between the block and the footing.

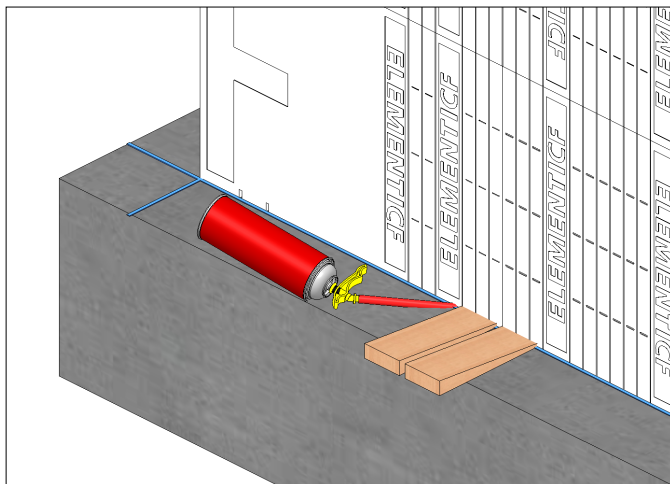

When vertical joints are less than 8-inches (203 mm) apart, additional block support is required.

It is important to note that at this point the wall pattern has been established. Course number 1 will be the pattern for all odd numbered courses (3, 5, 7, etc.). Course number 2 will be the pattern for all even numbered courses.

Wall alignment system to be installed at some point between the second and fourth courses, at no more than 7-ft (2134 mm) intervals. See “2.12 – WALL BRACING & ALIGNMENT SYSTEM” on page 71.

2.8.5 – ADDITIONAL COURSES

Subsequent courses install just like the second course. Element's built-in Zip Tabs lock the blocks together so extra zip-ties or hooks are only needed:

- on the first (bottom) course and the top course, and
- at rough openings, beam pockets, or any block that's been cut vertically.


Zip Tabs also help keep the walls straight, so Form-Lock is optional—use it only if you want extra peace of mind.

For more information on securing blocks or courses, refer to “2.8.1 – SECURING ELEMENT ICF COURSES” on page 19.


STEP 1: After completion of each course, place necessary rebar as specified and according to local code.

STEP 2: Secure blocks end-to-end in the top course to maintain building dimensions.

STEP 3: Secure the top course to the blocks below on both sides to prevent tipping during concrete placement.

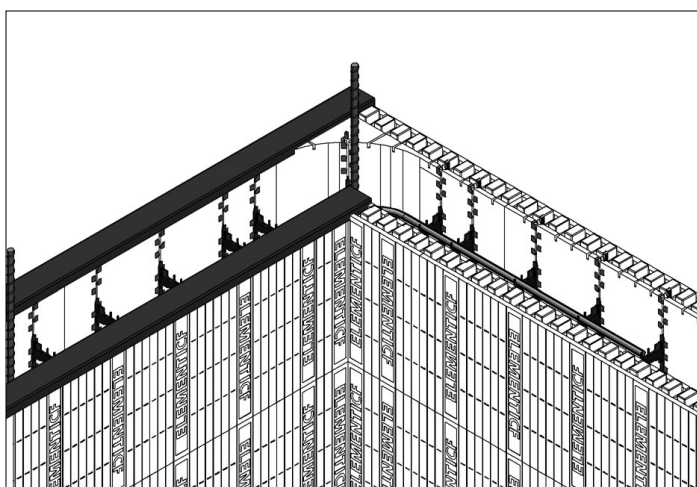

STEP 4: If additional stories are planned, the interlock needs to be protected prior to concrete placement.

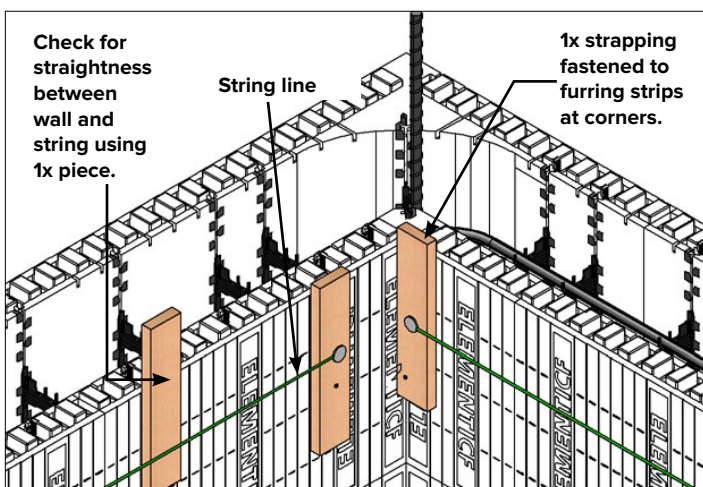


STEP 5: Check building dimensions. Check corners for plumb.

Ensure straight walls by placing a string at the top course set off from the wall using 3/4-inch (19 mm) pieces of wood placed in the corners. Check for straightness by running another 3/4-inch (19 mm) piece of wood between the string and wall.

2.8.6 – COURSE HEIGHTS

Element walls will primarily utilize 16-inch (406 mm) tall blocks. However, to efficiently match design wall heights with minimal cutting, Element blocks are also offered in 4- and 8-inch (102 and 203 mm) heights with Height Adjusters and Half-height blocks, respectively. This flexibility enables constructing Element wall heights in increments as small as 4-inches (102 mm).



Additionally, 16-inch (406 mm) tall blocks can be cut down to 4-, 8- or 12-inch (102, 203 or 305 mm) tall blocks by following the cut lines marked on the block panels.

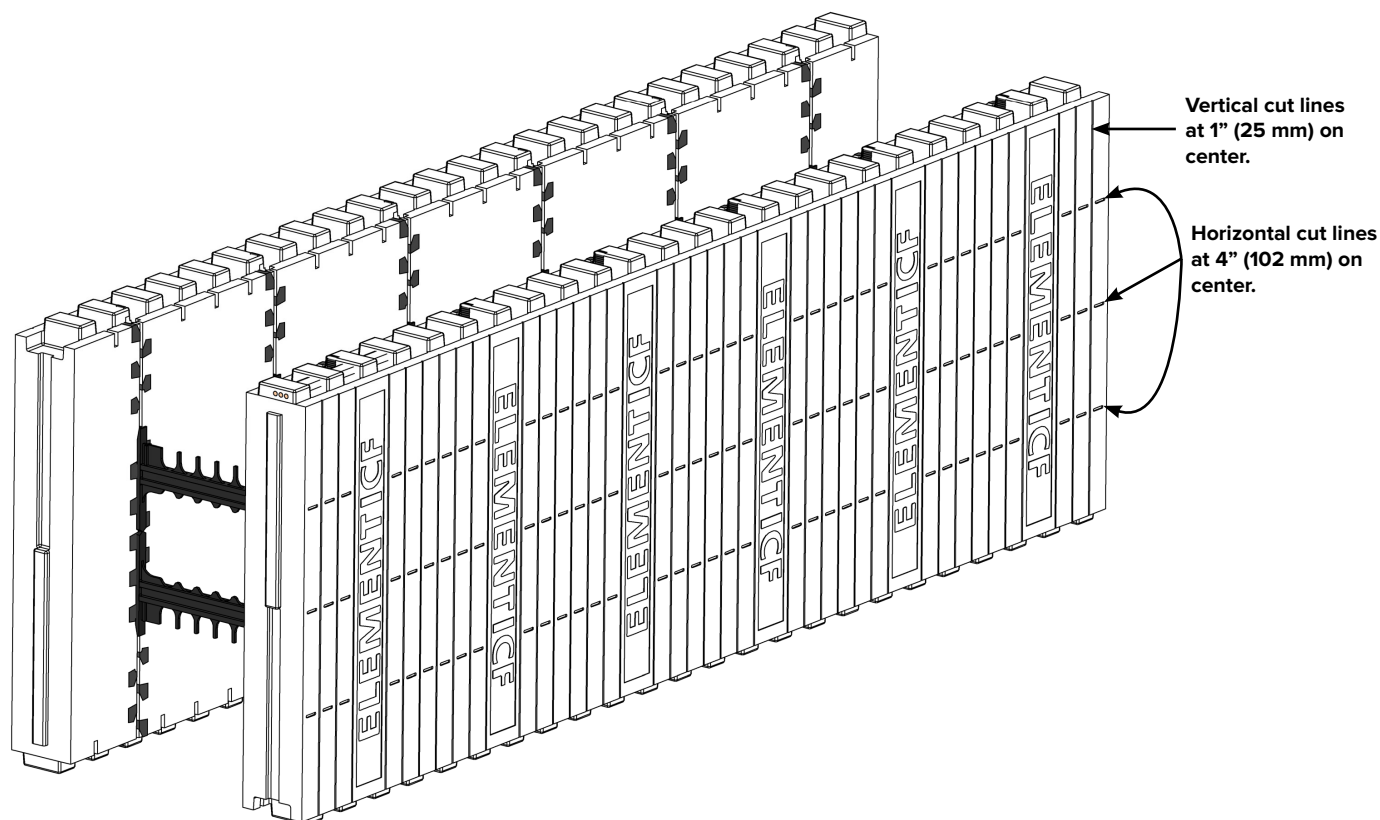


Element Standard 16-inch (406 mm) tall blocks are equipped with cut lines for faster cutting on site.

2.8.6.1 – HEIGHT ADJUSTERS WITH SITE-ASSEMBLED BLOCKS


Element Height Adjusters are 4-inch tall by 4-ft long x 2.75-inch thick (102 x 1220 x 70 mm thick) panels and can be used with both Preformed and Site-assembled blocks. While not depicted in the following illustrations, it is recommended to offset the vertical joints of the Height Adjusters with the courses above and below for best practice.

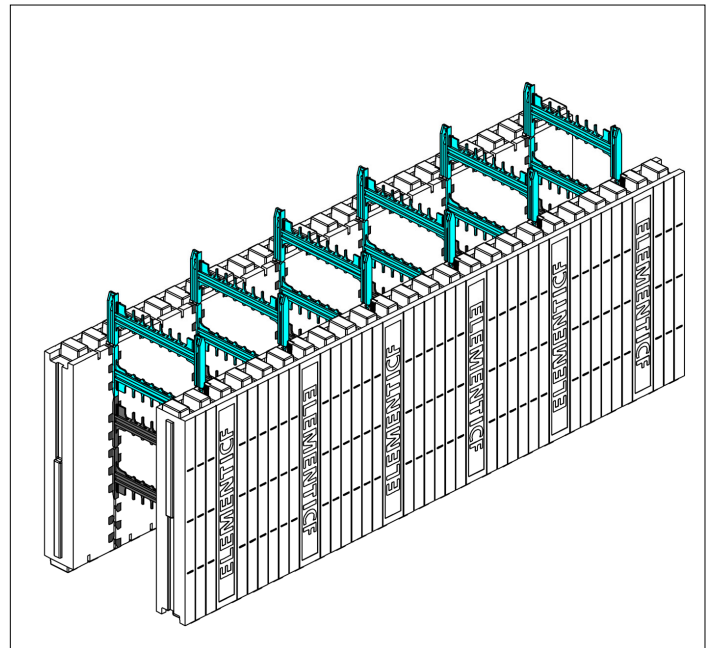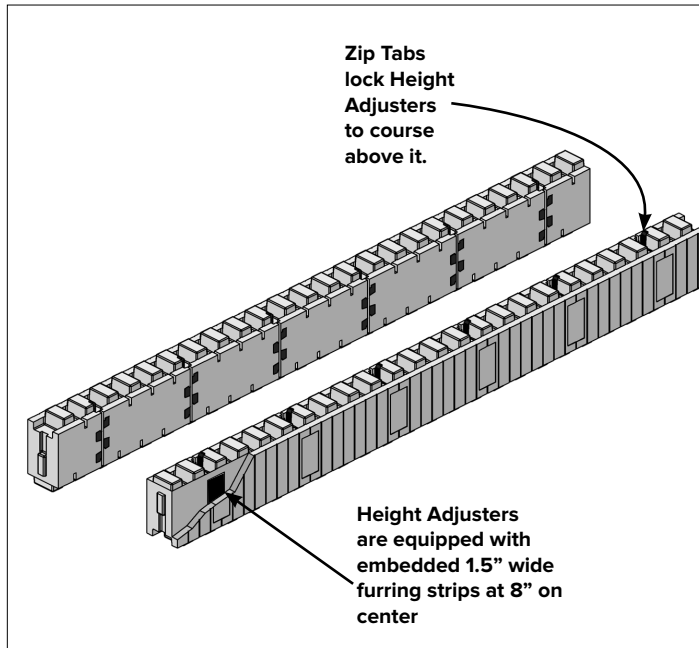

STEP 1: Insert Flexities™ (shown in blue for clarity).


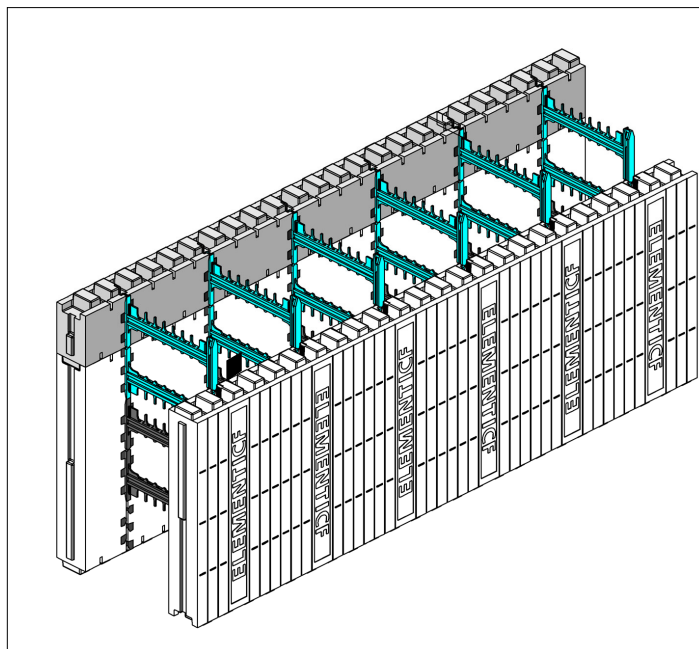


STEP 2: Place the Height Adjusters.

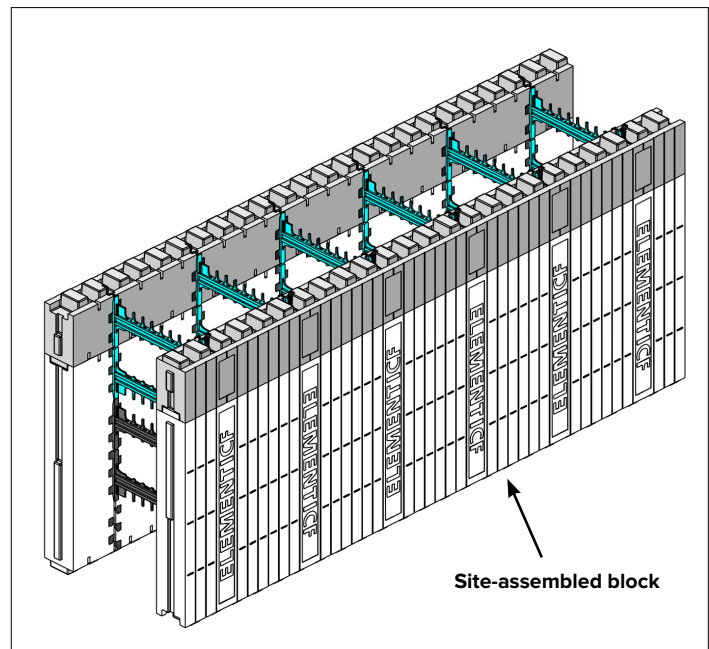


Completed assembly of Height Adjusters with Site-assembled block.


2.8.6.2 – HEIGHT ADJUSTERS WITH PREFORMED BLOCKS

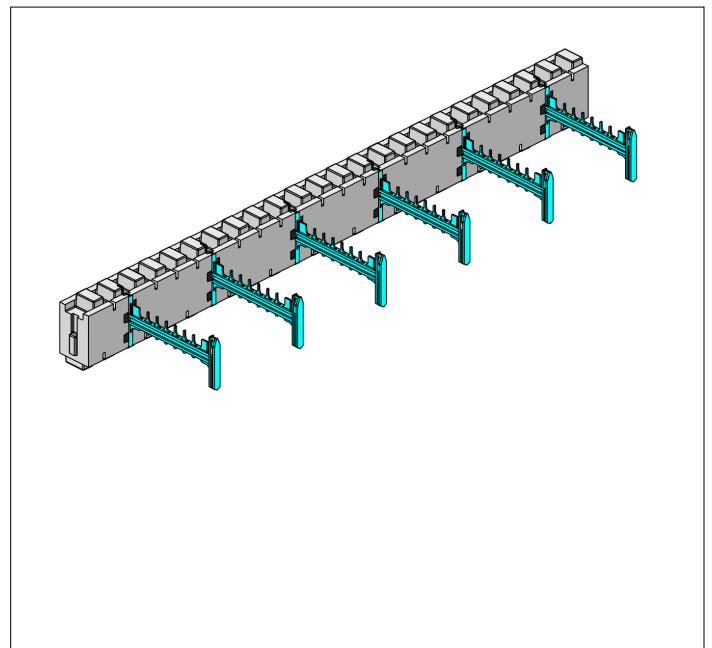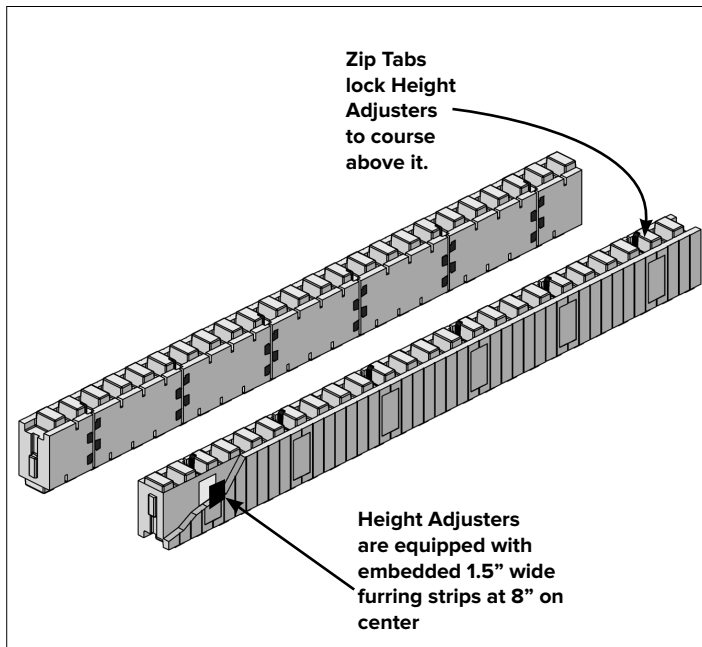

STEP 1: Insert Flexities™ snapped in half (shown in blue for clarity).

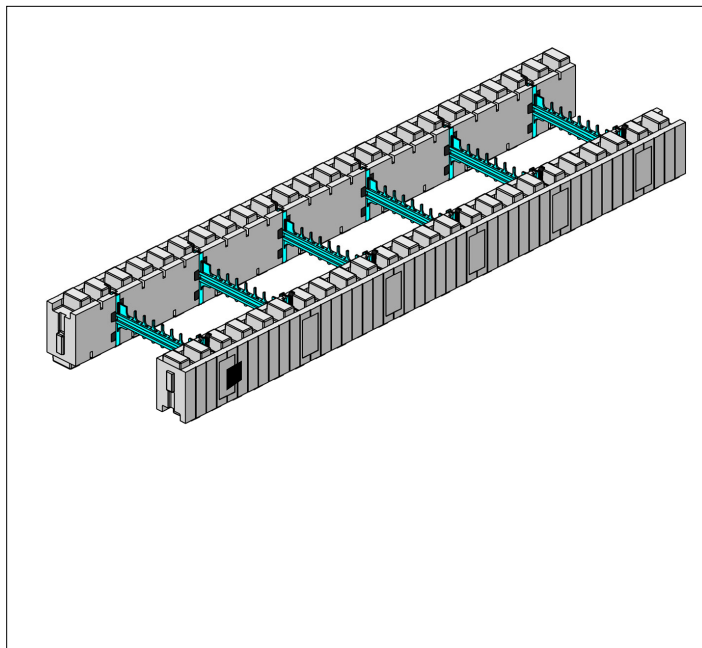


STEP 2: Place the Height Adjusters.

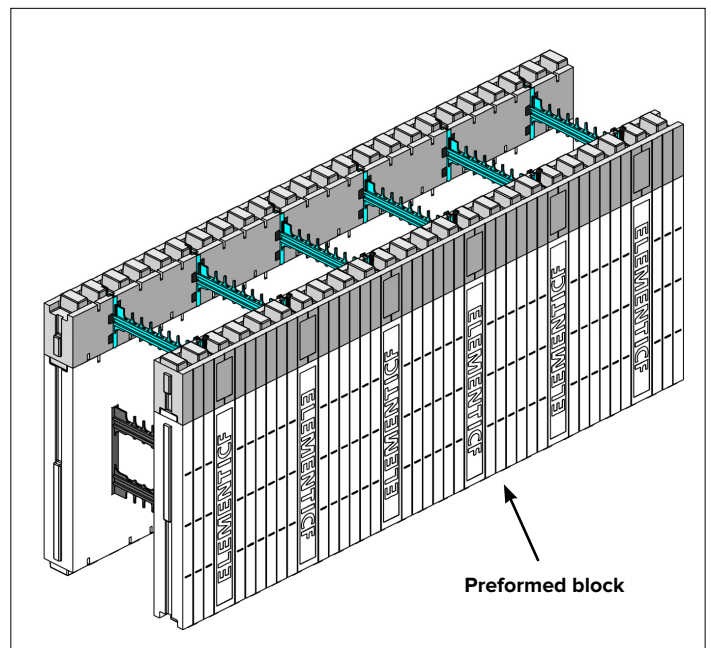


Completed assembly of Height Adjusters with Preformed blocks.

2.8.6.3 – HALF-HEIGHTS


Half-height blocks are not factory made, but can be fabricated on-site from both Preformed and Site-assembled blocks. With Preformed blocks, simply cut along the center cut line of a 16-inch (406 mm) tall block to create two Half-height blocks. Below is the procedure to create two Half-height blocks using a Site-assembled block, and six additional Flexties™.

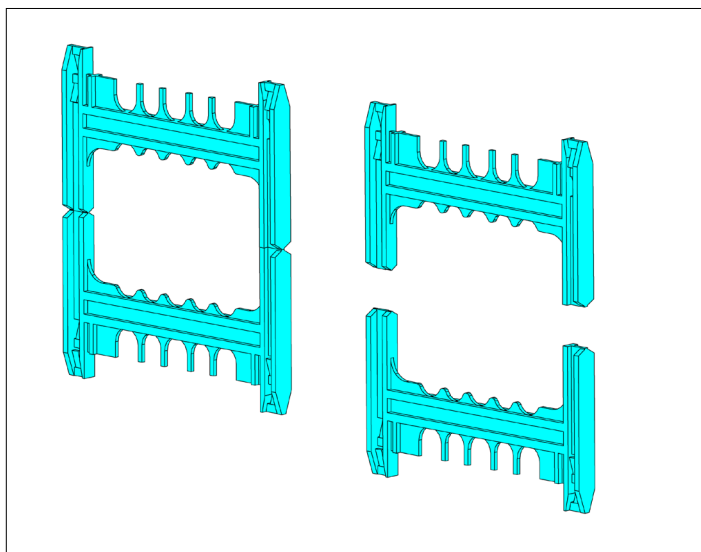


STEP 1: Snap Flexties™ in half (shown in blue for clarity).

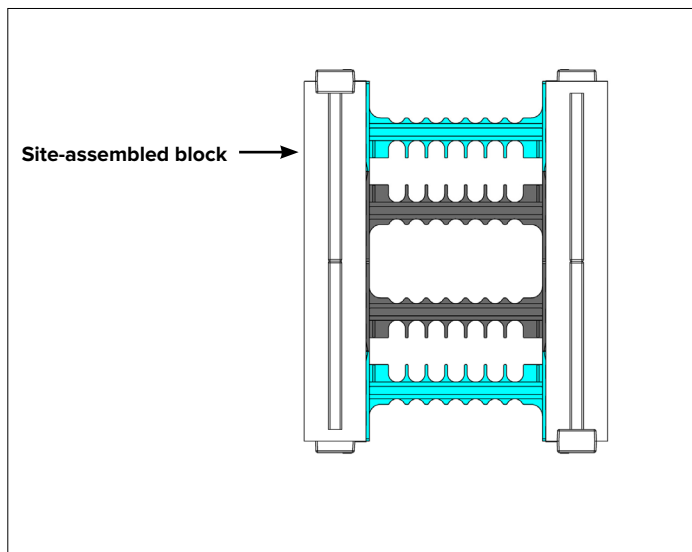

STEP 2: Slide the snapped Flexties™ into the top and bottom of the Site-assembled block.

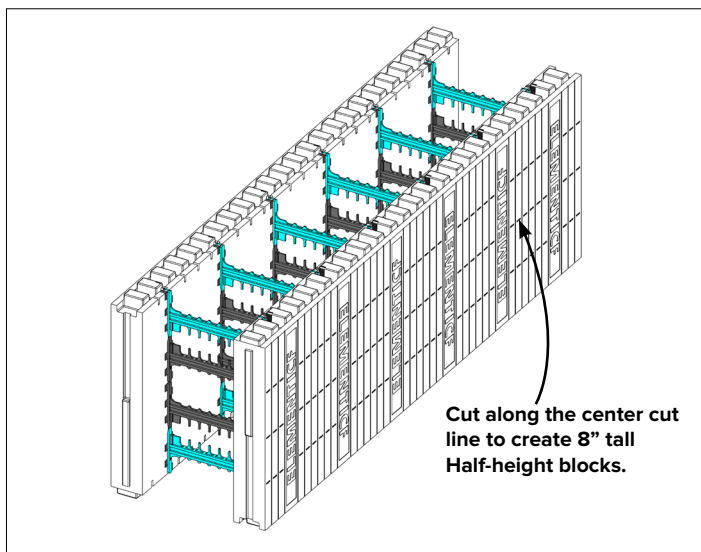


STEP 3: Cut the block in half.

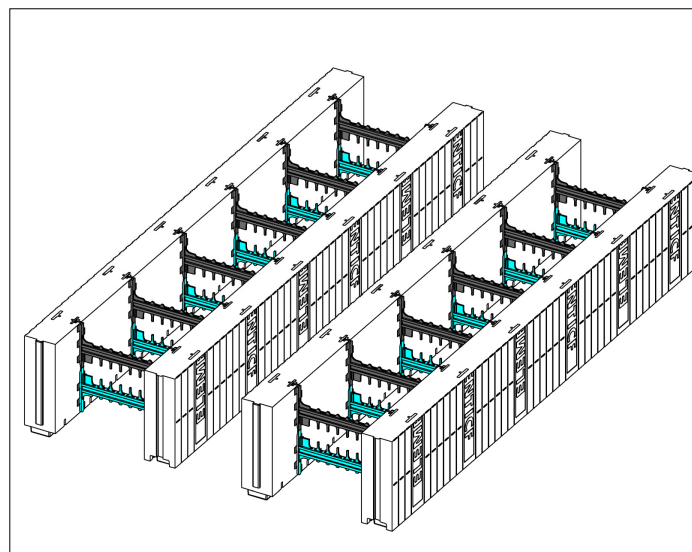


STEP 4: Two Half-height blocks are produced.


Alternatively, Half-height blocks can be made with Height Adjusters.

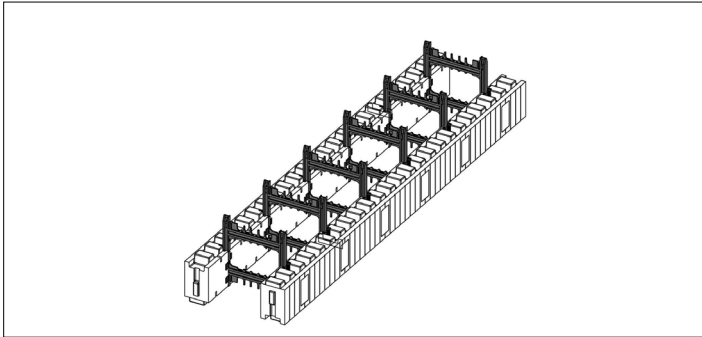

STEP 1: Insert Flexties™ into the Height Adjusters.

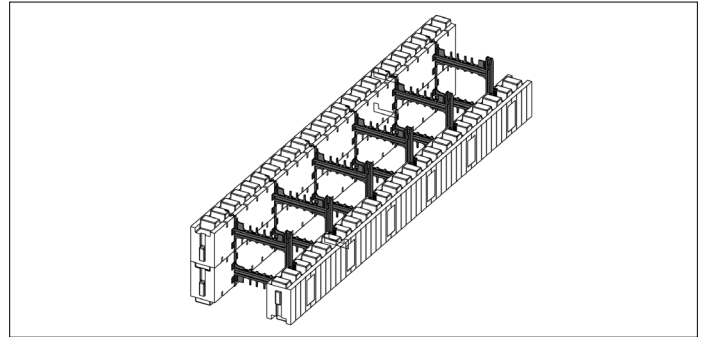

STEP 2: Slide additional Height Adjusters in place.

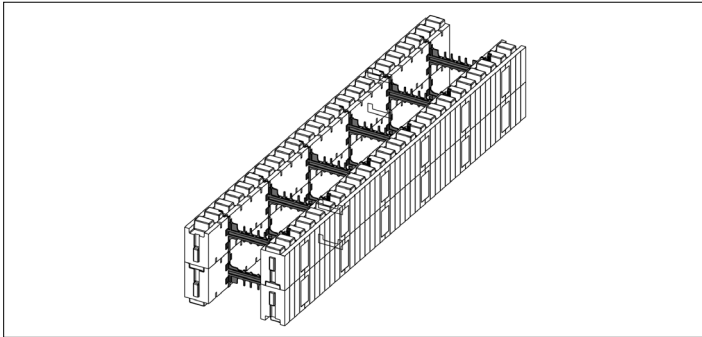


Half-height blocks assembled from Height Adjusters.

2.8.7 – FIELD-FABRICATED ICF CORNERS


Brick Ledge and Taper Top blocks are available only as straight units, so corners must be created on site using mitered cuts. Element Standard blocks may also be field-cut to create corners where required. Miter cuts can be made freehand or with the use of a template to help ensure accurate alignment.

2.8.7.1 – BRICK LEDGE CORNERS


Making a mitre when a Brick Ledge block is at least one web and 4.5 bars beyond the corner block will ensure the webs align vertically between courses. Extending at least two webs and 4.5 bars and making the cut will create a remaining piece that can be used for an inside corner elsewhere in the layout.

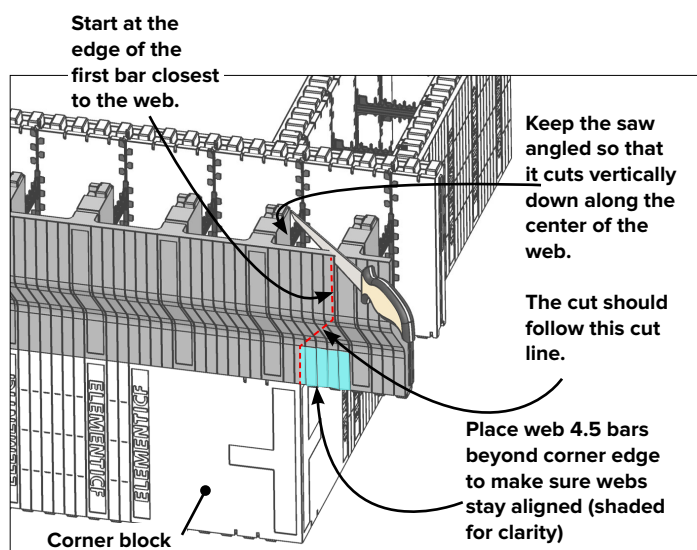


STEP 1: With the first Brick Ledge block, make a miter cut on the Brick Ledge panel.

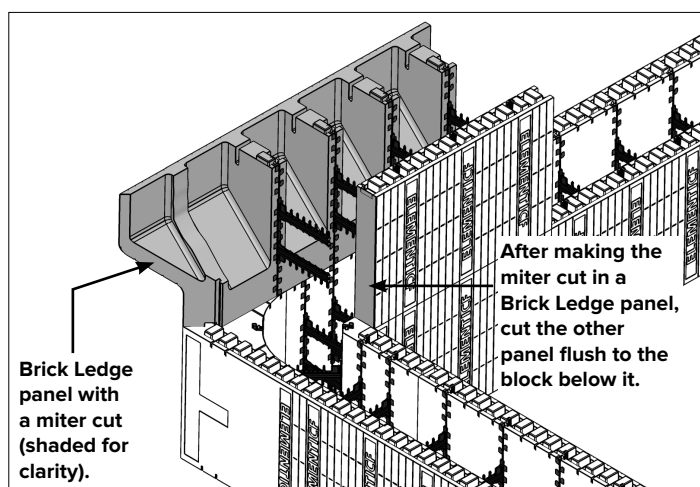


STEP 2: With the first Brick Ledge block, make a butt-joint cut flush to the block below.

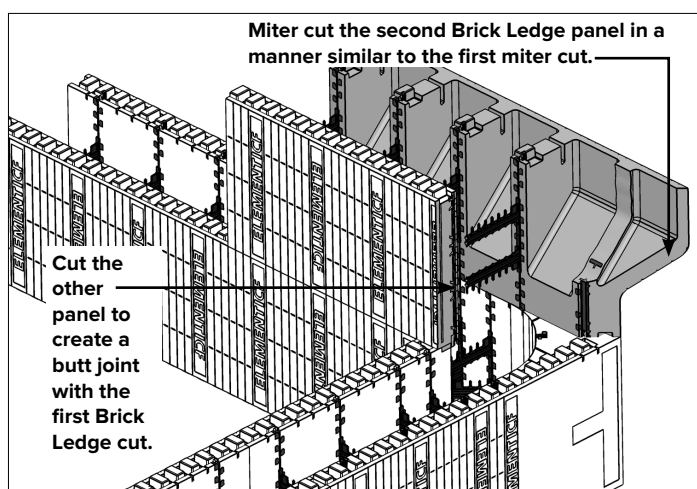


STEP 3: With the second Brick Ledge block, make similar miter and butt-joint cuts.

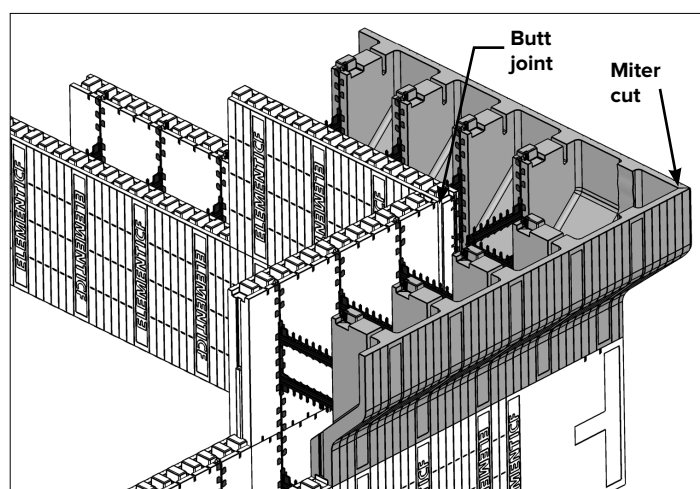


STEP 4: Place both cut Brick Ledge blocks to create the Brick Ledge 90° corner.

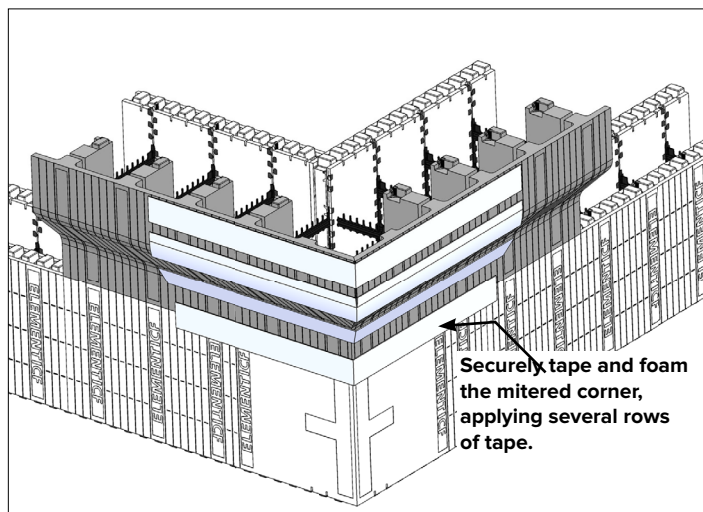

STEP 5: Secure the corner Brick Ledge with tape and foam.

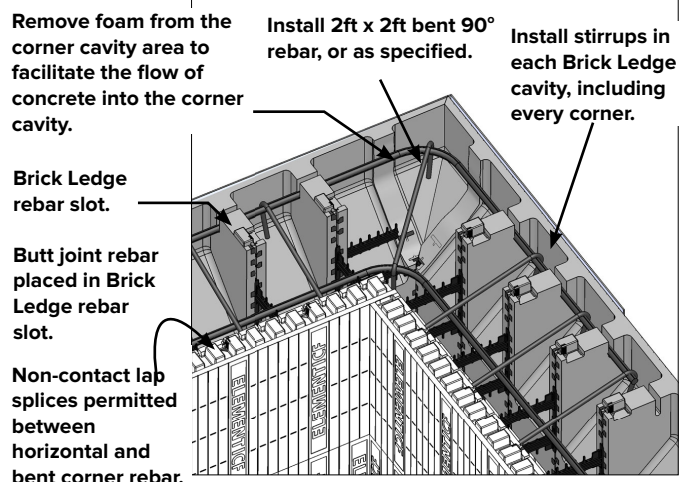

STEP 6: Place rebar, as required, and remove foam from cavity where necessary.

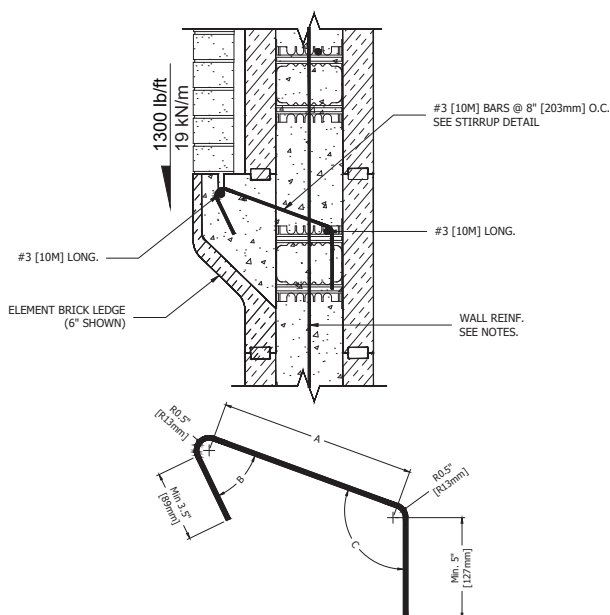**STIRRUP DETAILS**

(Refer to Element Brick Ledge Stirrup Dimensions Table)

ELEMENT BRICK LEDGE STIRRUP DIMENSIONS

	BRICK LEDGE SIZE				
	4"	6"	8"	10"	12"
A	8" [203mm]	9.7" [246mm]	11.6" [295mm]	13.4" [340mm]	15.25" [387mm]
B	40°	44°	48°	50°	52°
C	115°	110°	106°	104°	103°

Standard Brick Ledge reinforcement shown. For heavier reinforcement see "2.19.8 – BRICK VENEER" on page 100


NOTE: Use of the Element ICF Brick Ledge requires steel stirrups to transfer loads safely into the wall structure. Failure to install the stirrup reinforcement will significantly reduce load capacity and may result in cracking, deformation, or structural failure of the ledge. Always install stirrups as shown in Element ICF standard reinforcing details to achieve rated performance.

Where a licensed professional engineer provides project-specific design details for the Element Brick Ledge, those details shall govern and supersede the requirements and warnings on this label. The builder remains responsible for implementing the engineer's design and providing all required support.


2.8.7.2 – TAPER TOP CORNERS FROM MITRE CUTS

Just like Brick Ledge, Taper Top blocks come only in straight units, so mitered cuts on site must be made to create corners with these blocks. Or alternatively, Taper Top corners can be made with Standard corners.


Making a mitre when a Brick Ledge block is at least one web and 4.5 bars beyond the corner block will ensure the webs align vertically between courses.

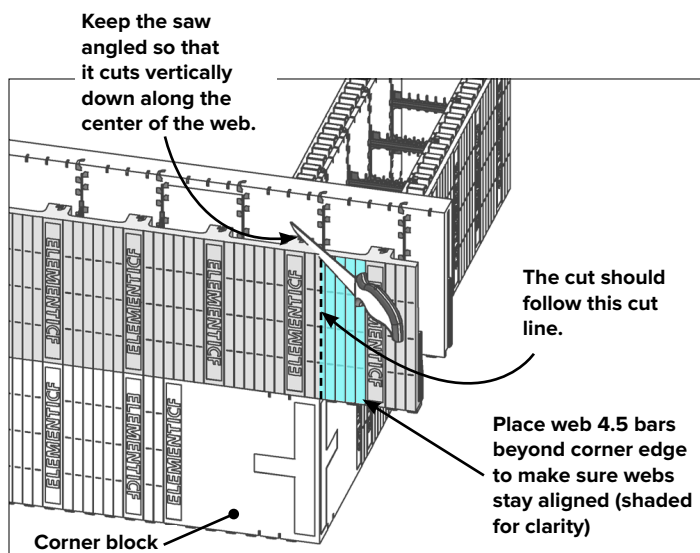


STEP 1: With the first Taper Top block, make a miter cut on the Taper Top panel.

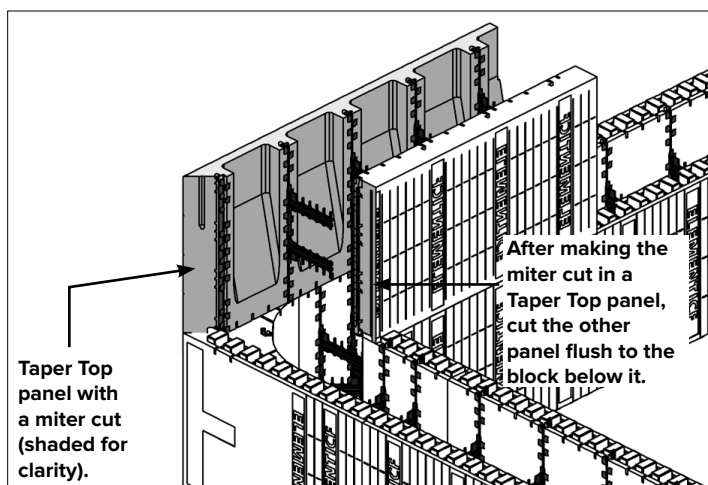


STEP 2: With the first Taper Top block, make a butt-joint cut flush to the block below.

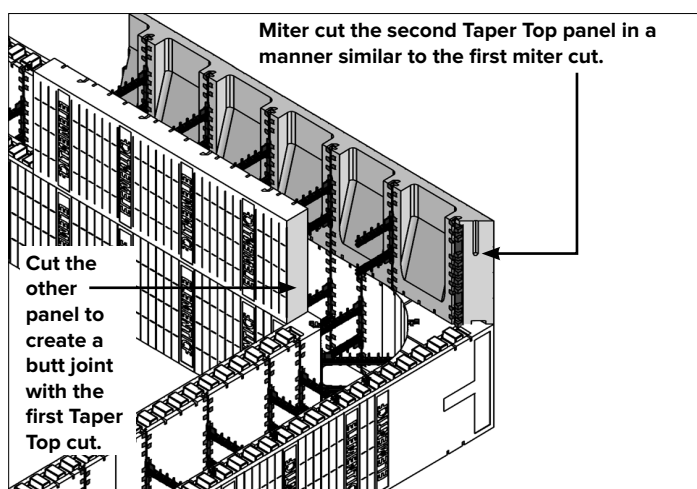


STEP 3: With the second Taper Top block, make similar miter and butt-joint cuts.

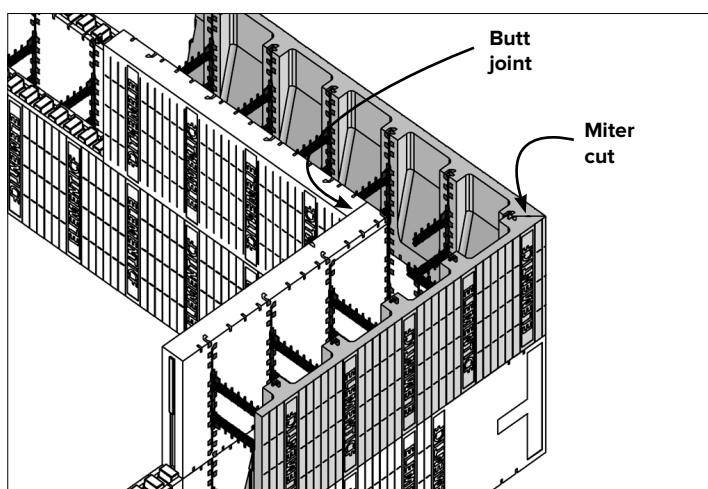

STEP 4: Place both cut Taper Top blocks to create the Taper Top 90° corner.

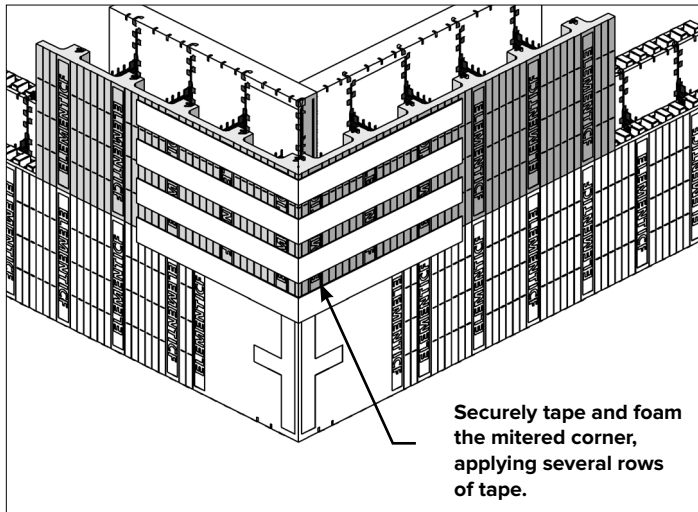


STEP 5: Secure the corner Taper Top with tape and foam.

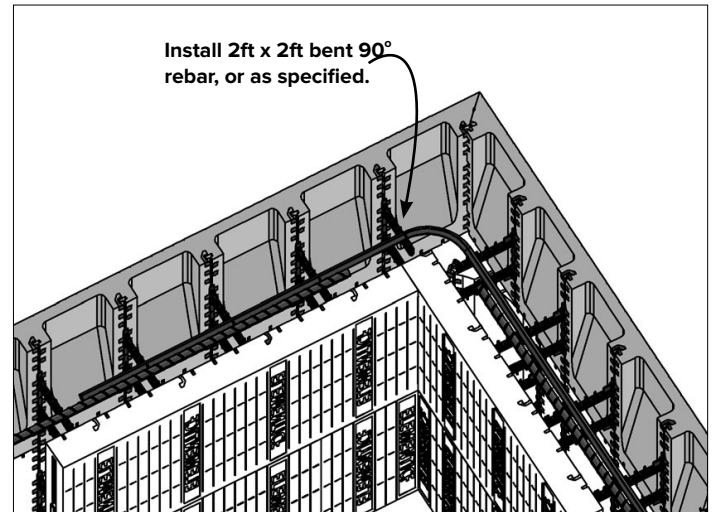


STEP 6: Place rebar, as required.

2.8.7.3 – TAPER TOP CORNERS FROM STANDARD CORNERS


Taper Top corners can be made with Standard Corner blocks. This would require carving out the excess foam in the Standard Corners to create the tapered profile. To avoid dropping discarded foam into the ICF wall cavity, remove excess foam prior to installing in place.

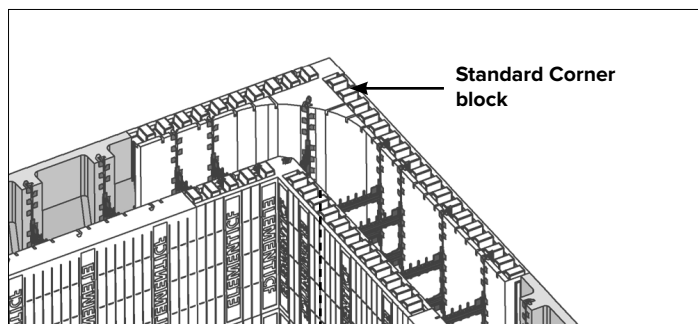


STEP 1: A Standard Corner block can be used at the corners.

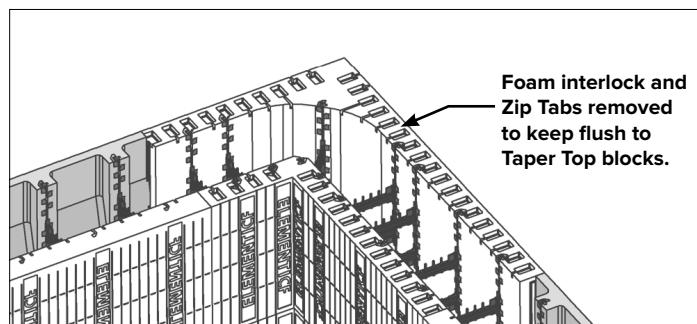


STEP 2: Remove interlock and Zip Tabs.

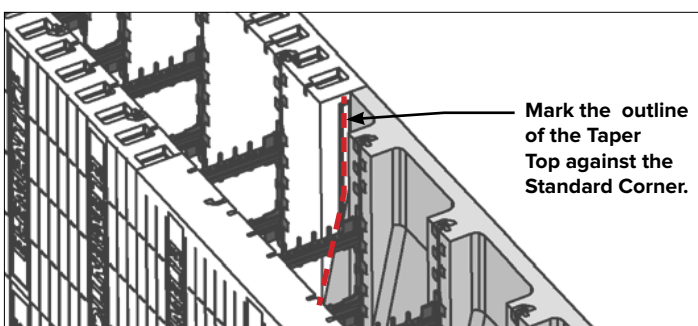

STEP 3: Trace the outline of the Taper Top side profile against the Standard Corner block.

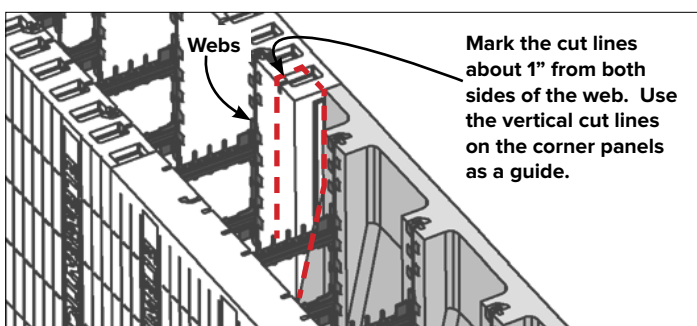

STEP 4: Mark the Standard Corner block to match the Taper Top top profile between all the webs.

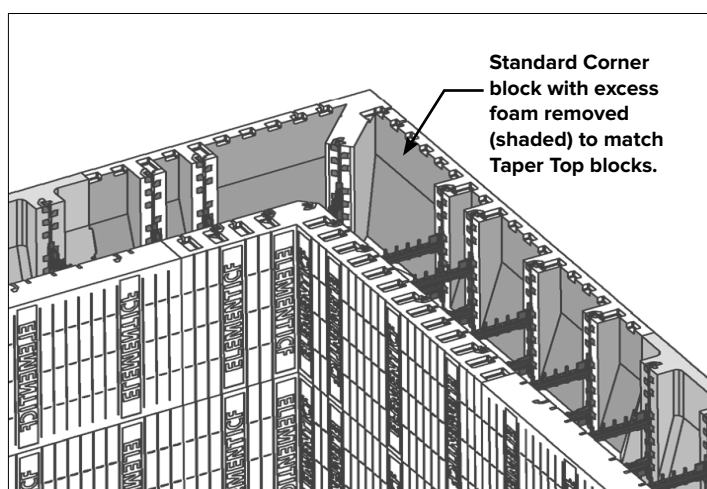


STEP 5: Cut the foam following the cut lines prior to installing in place with a drywall or pruning saw.



2.8.7.4 – CORNERS FROM STANDARD BLOCKS



In cases where corner blocks run short near the completion of an ICF wall, 90° corners can be created using two Element Standard Preformed or Site-Assembled blocks instead of waiting for an additional shipment of corner blocks.

Referring to the illustrations below, cut the foam panels according to the dimensions shown for the applicable 4, 6, 8, 10, or 12 in. block. These dimensions help minimize waste and position the furring tabs as close as practical to both the inside and outside corners, providing suitable nailing surfaces for interior and exterior finishes.

After assembling the corner, confirm that it is square, the concrete core remains continuous and unobstructed, the foam panels fit tightly, and the furring tabs are positioned close to both sides of the corner.

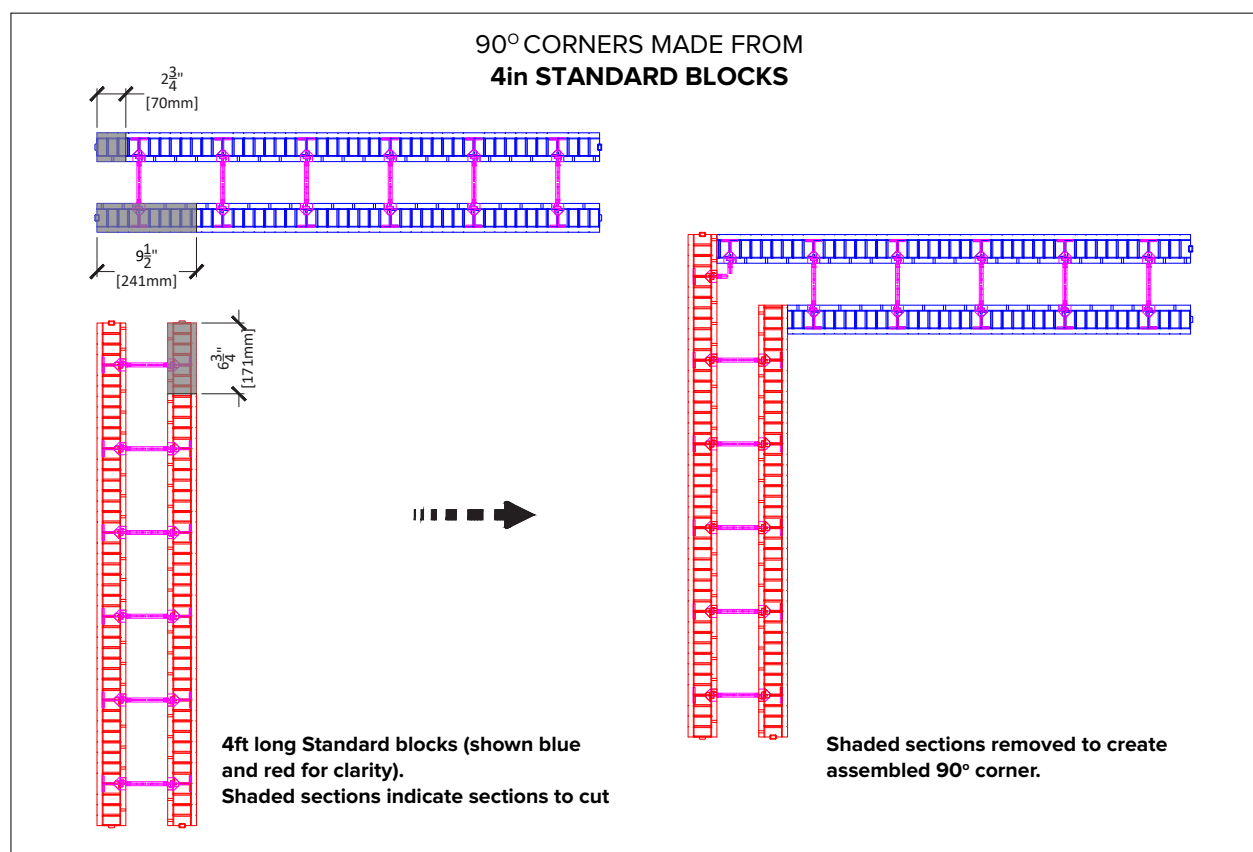


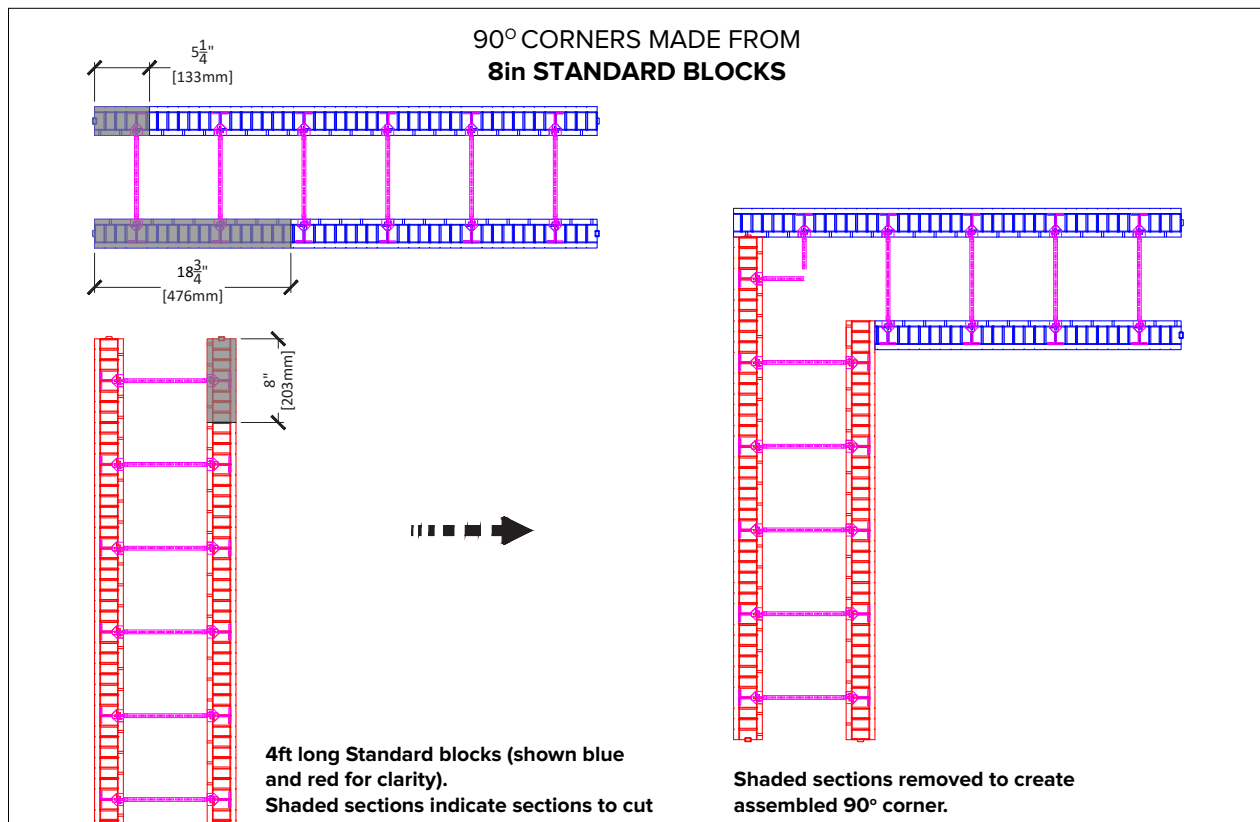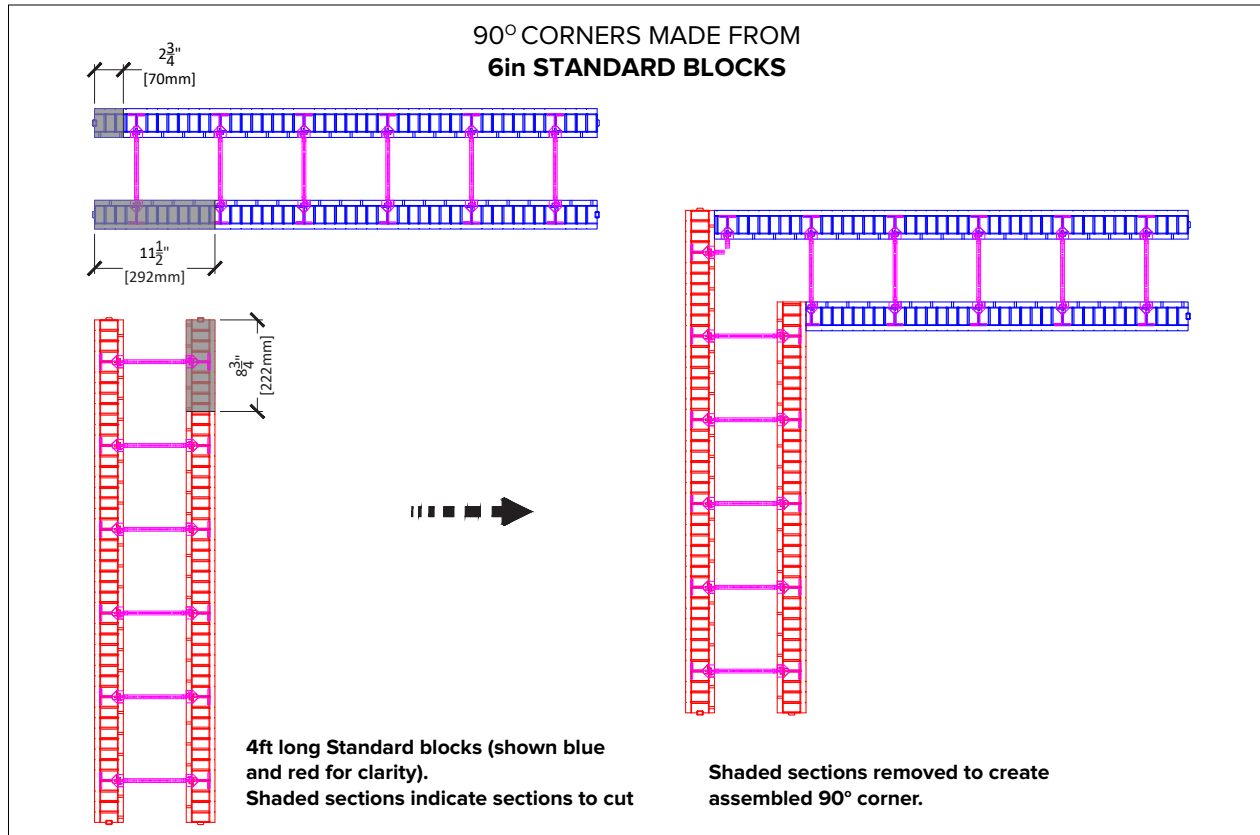

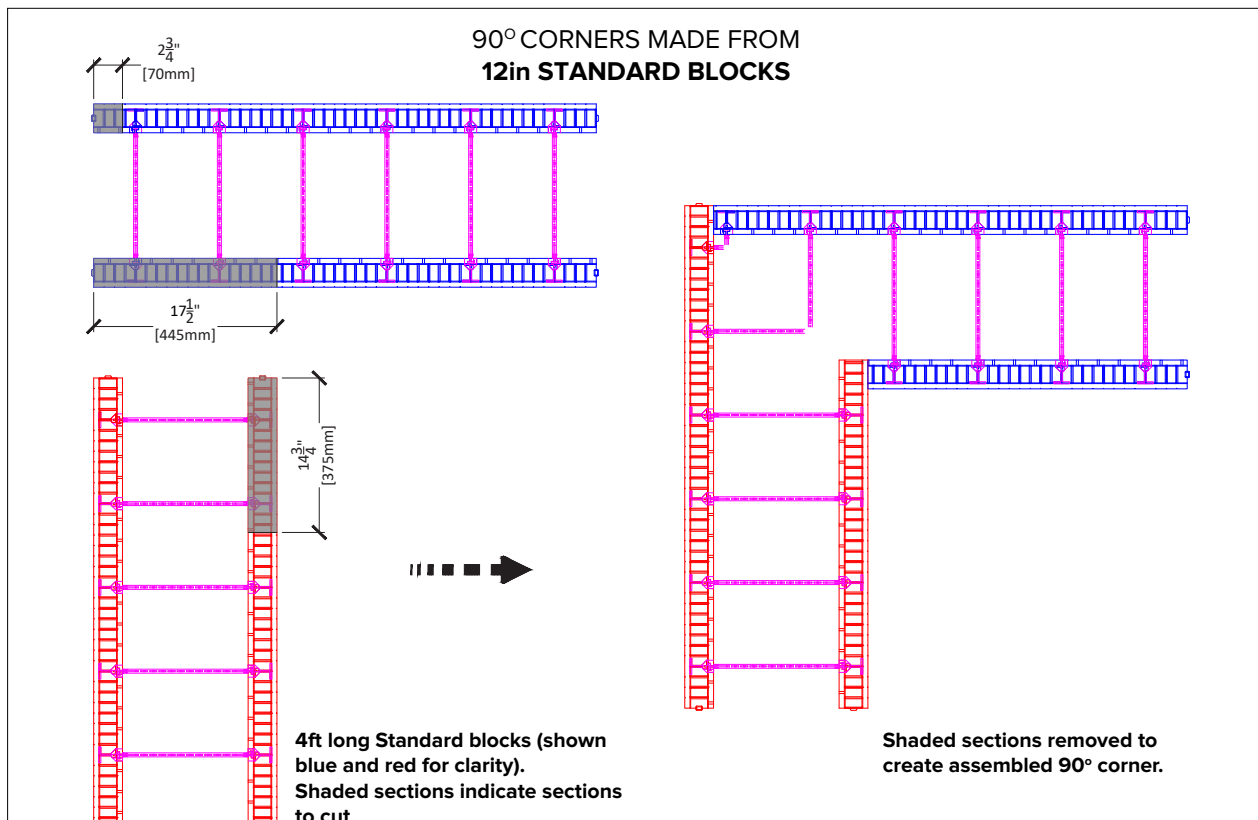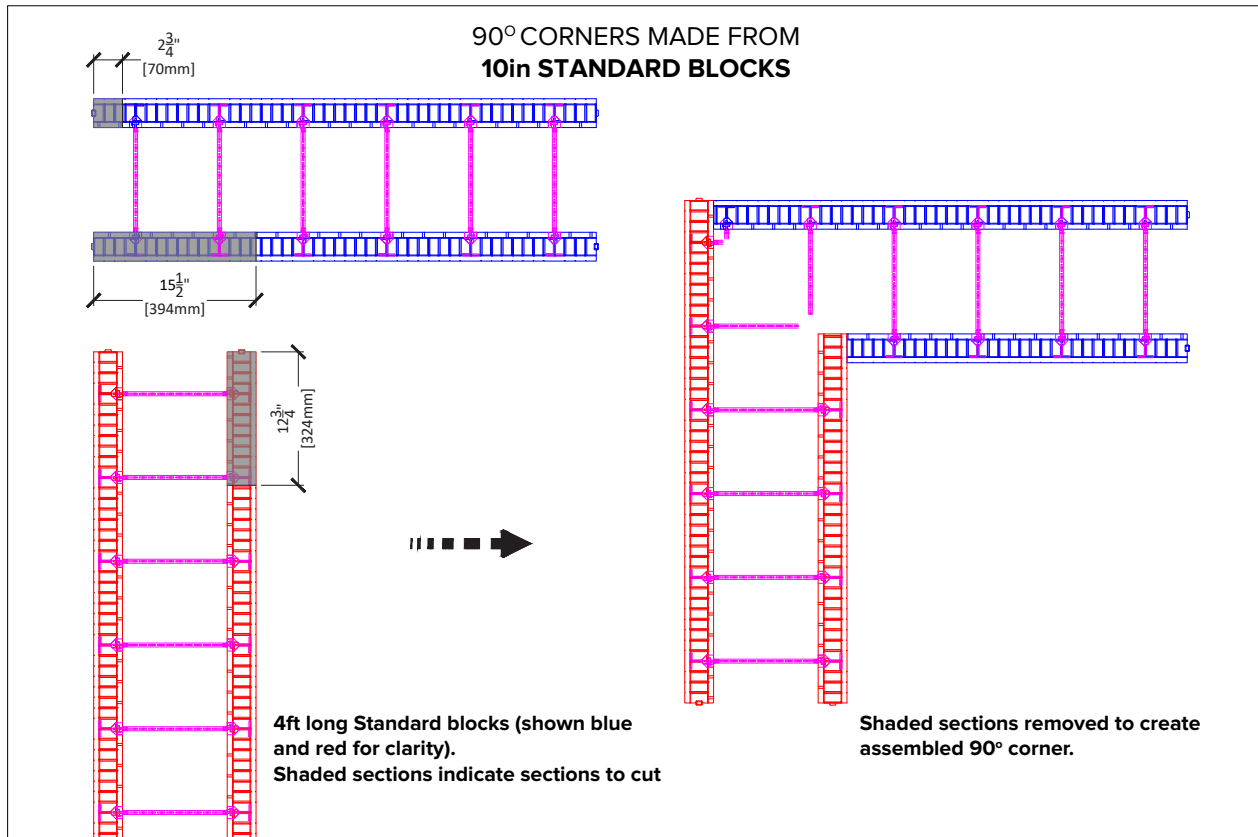

With Element Site-assembled blocks using bridging Flexties™ between courses will help strengthen the joints. Place as many bridging Flexties as needed. For more information on bridging Flexties see “2.8.2 – BRIDGING FLEXTIES™” on page 20.

After installing the bracing and alignment system, provide additional support for the corner blocks. The illustration below demonstrates form support for a full-height wall. If corner blocks made with Standard blocks are only needed for the last few courses, wood strapping may be sufficient.

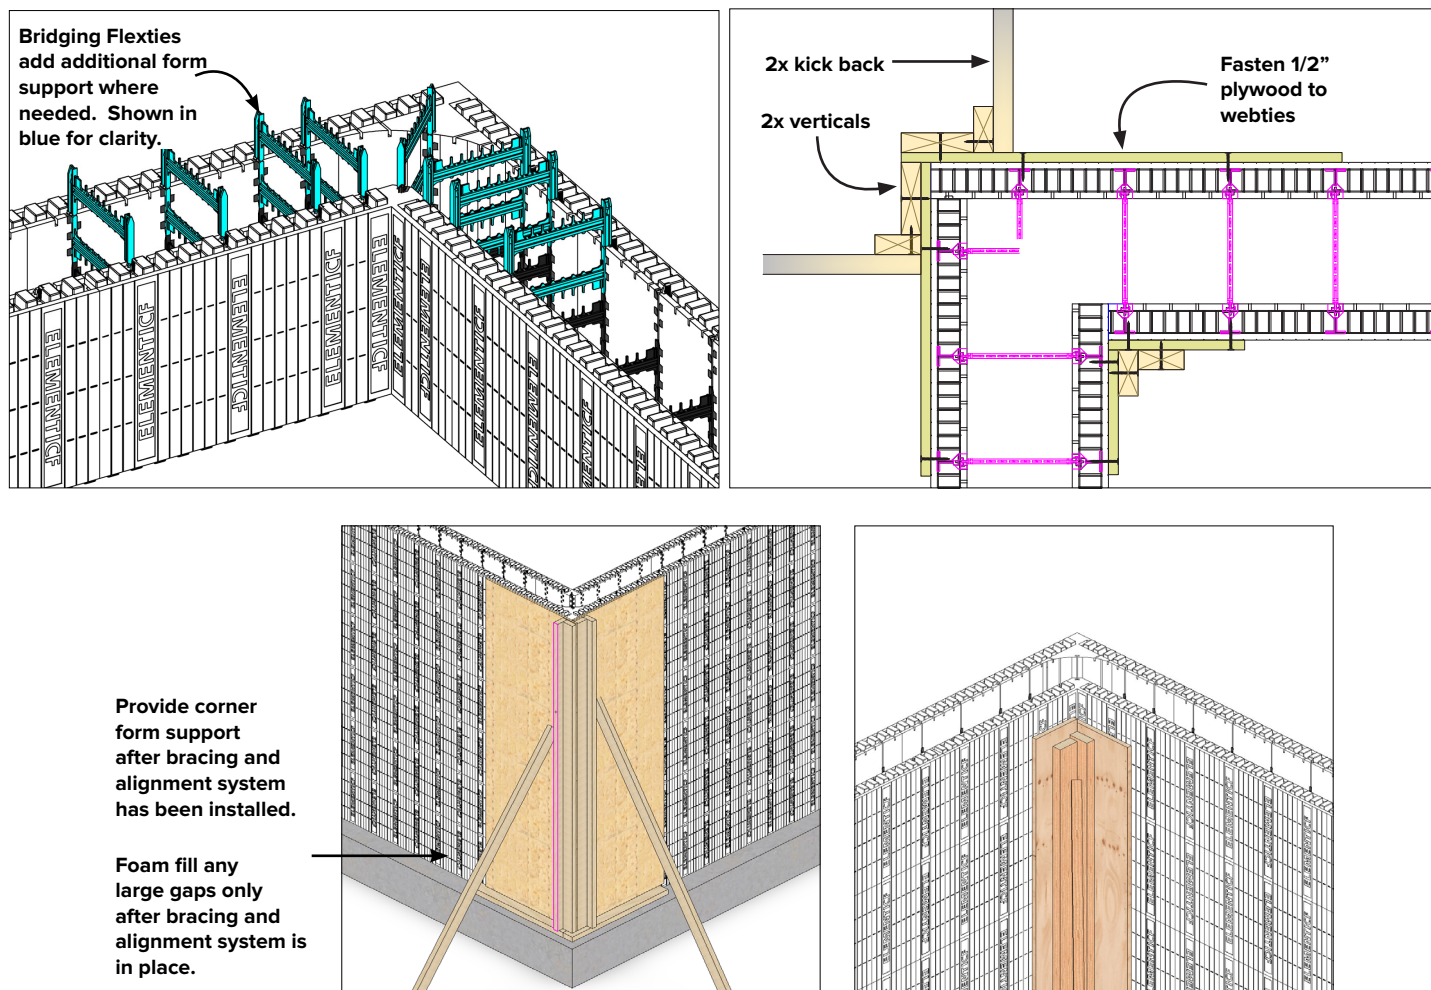


NOTES:


1. The above drawings illustrate an example of wall bracing. The builder should use sound judgment based on wall structure, pouring sequence and other site conditions, to determine if additional form support and bracing is required.
2. Avoid placing concrete directly into the corners.
3. Follow all required national and local wall brace safety regulations.

2.8.7.5 – UNCOMMON WALL ANGLES FROM STANDARD BLOCKS


Element 90-degree corner blocks are available to quickly form ICF wall corners. When uncommon wall angles are required, angled wall corners can be created on site using miter cuts with Element Standard blocks.

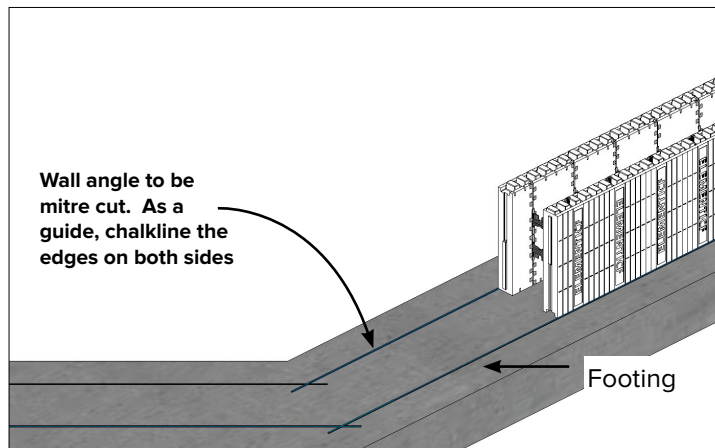


STEP 1: Start by laying the blocks from a typical 90 or 45 degree corner towards the wall angle to be mitre cut.

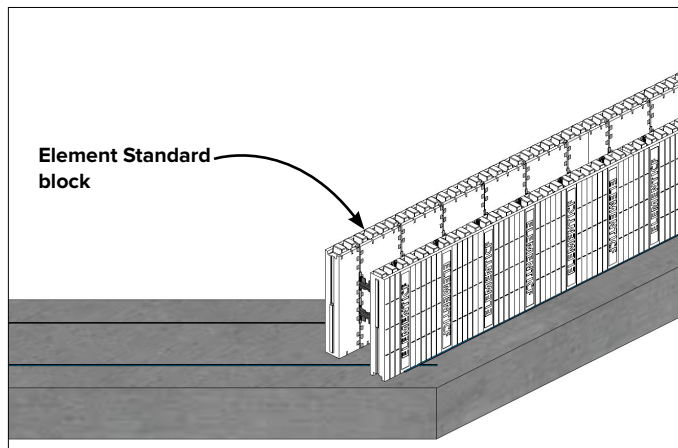


STEP 2: Using a Standard block, mark the angle on the standard block on both sides, and cut along the marks to create the mitre cut.

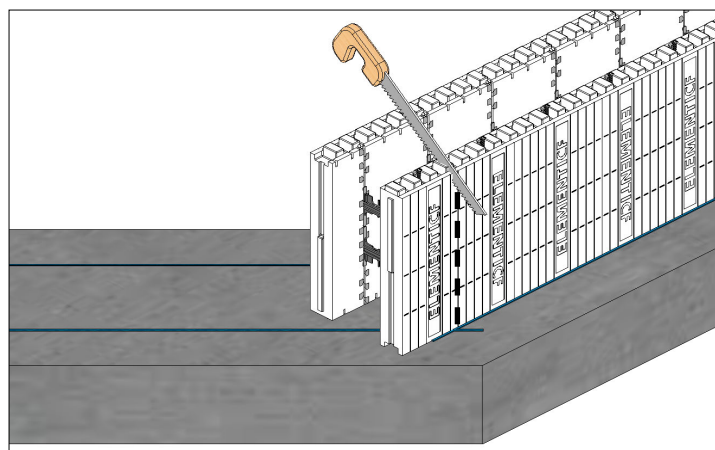


STEP 3: Cut along the marks to create the mitre cut.

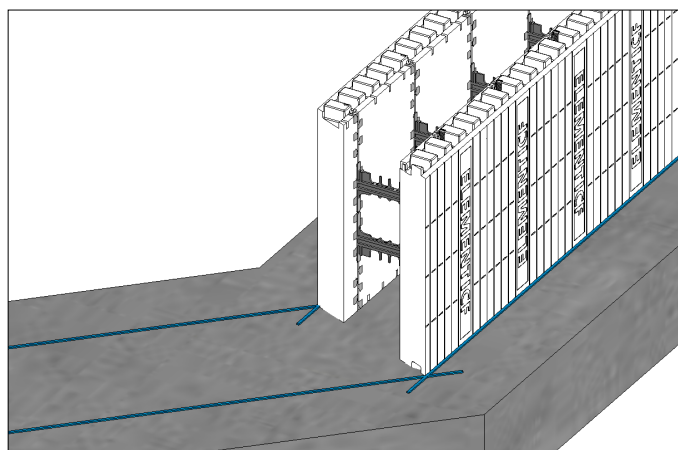

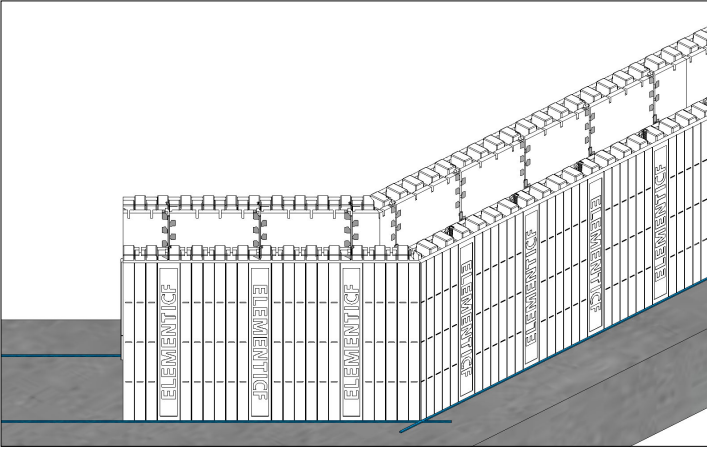



STEP 4: Flip the cut section of block and join the two ends to complete the angled corner.

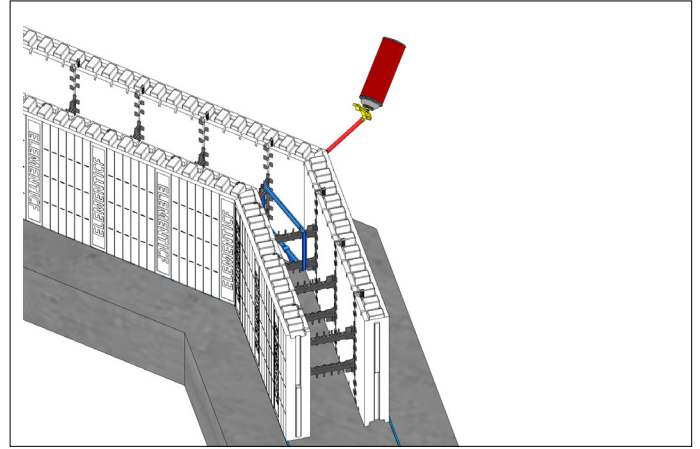

STEP 5: To secure the mitre joint, use zip ties, and apply foam adhesive.


2.8.8 – TEE WALLS

Wall T-junctions can be constructed by field-cutting Element Standard blocks and providing proper form support.

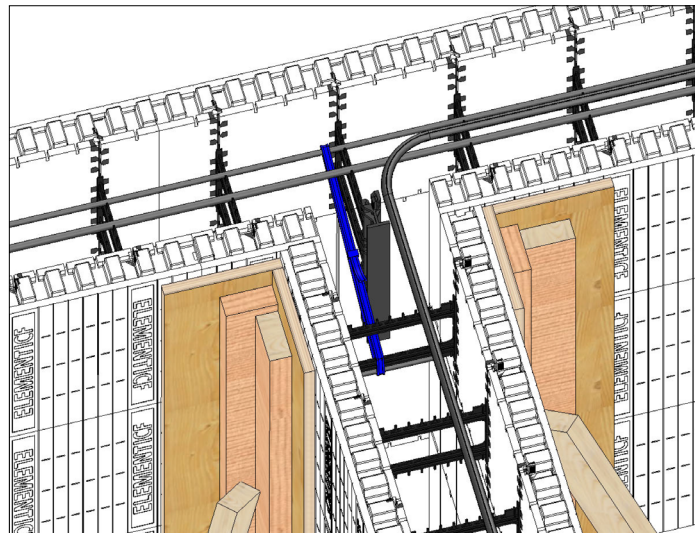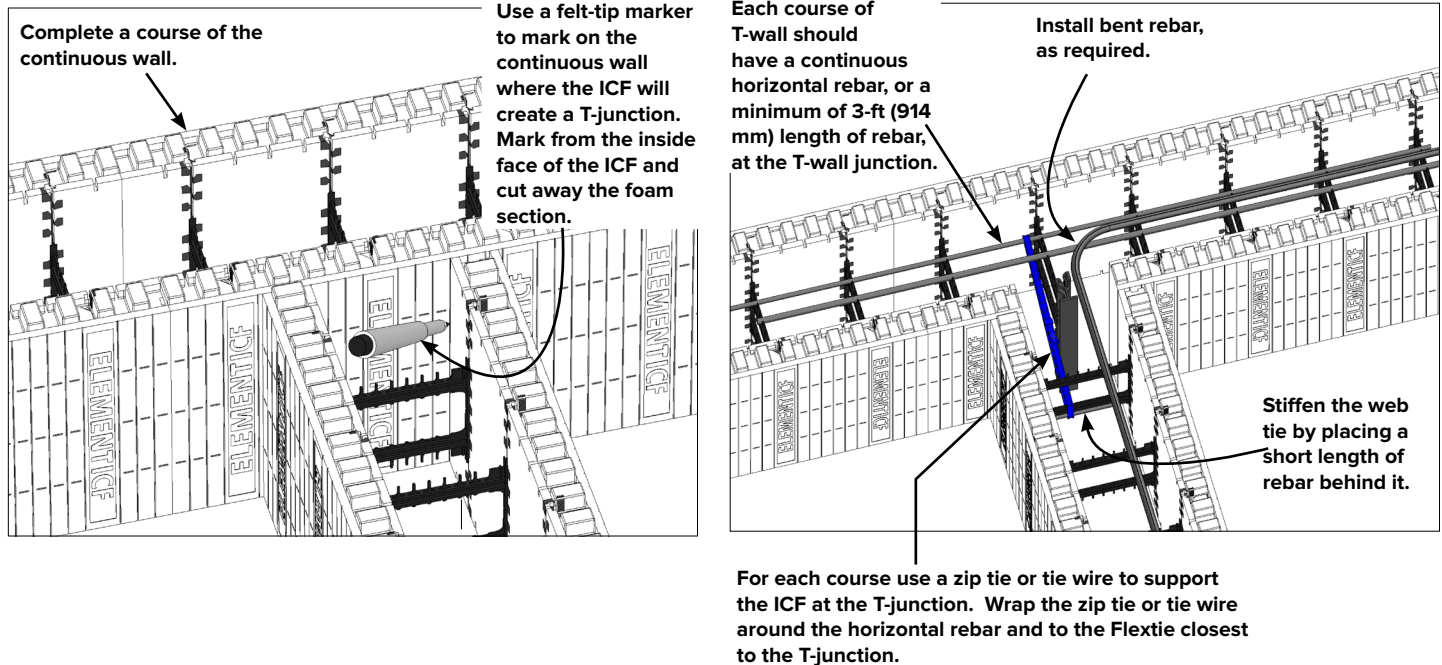


When the entire wall has been checked for plumb and square, apply foam adhesive to the butt joints, and install additional block support, as required. Using Bridge Ties can help potentially reduce the amount of block support required. See “2.8.2 – BRIDGING FLEXTIES” on page 20.


As an option, the Element Buck Brace can also be used to brace and support a fabricated T-wall. The Element Buck Brace is reusable, and its durable design allows for easy installation and positioning to help ensure a square, secure junction.

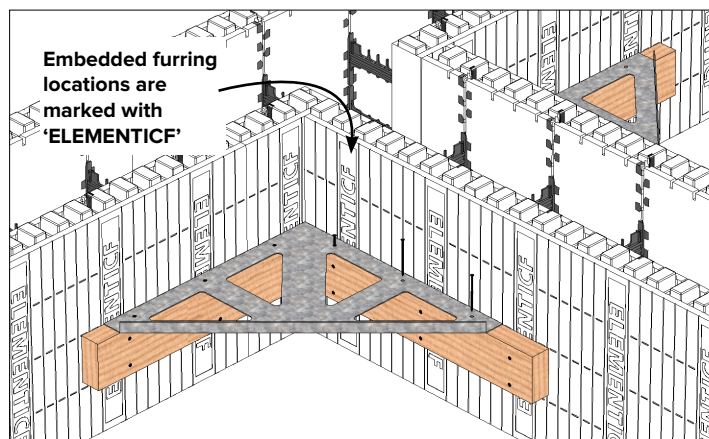


Attach intersecting wall to flanking wall. Screw 2x4 strapping to the embedded furring tabs within the block panels. The 2x4s should be long enough so that it is fastened to a minimum 3 furring tabs. Fasten the Element Buck Brace to the 2x4s making sure the Buck Brace is tight against the ICF. The Buck Brace should be installed on both sides of the t-wall.

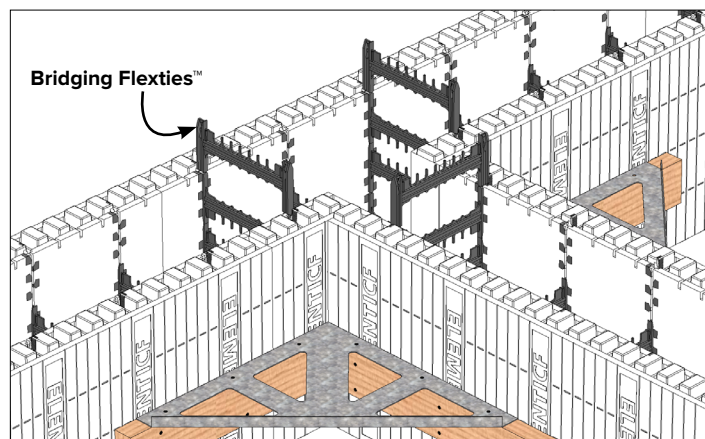

If the t-junction is built with Element Site-assembled blocks, bridging Flexties™ can be used to provide additional form support between courses. For more information on bridging Flexties refer to the Element Installation Guide.

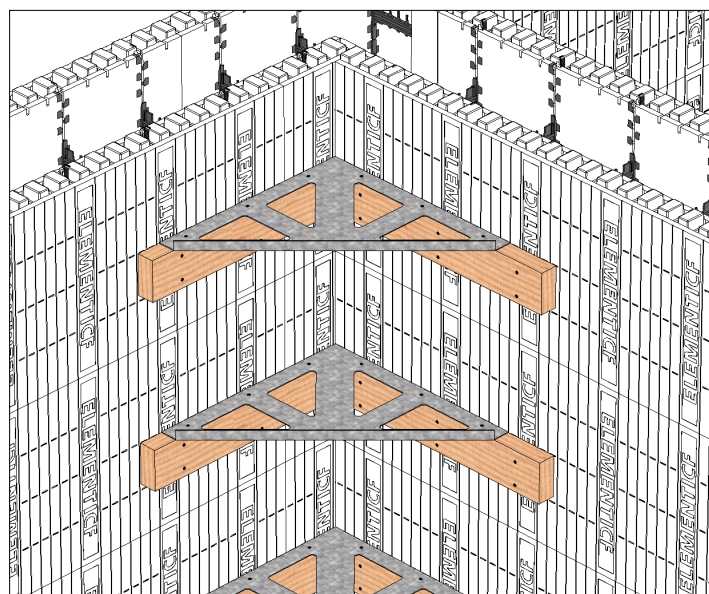

2x4 strapping and Buck Braces should be attached at every course of ICF installed. Make sure to add the required reinforcement as each course is installed.

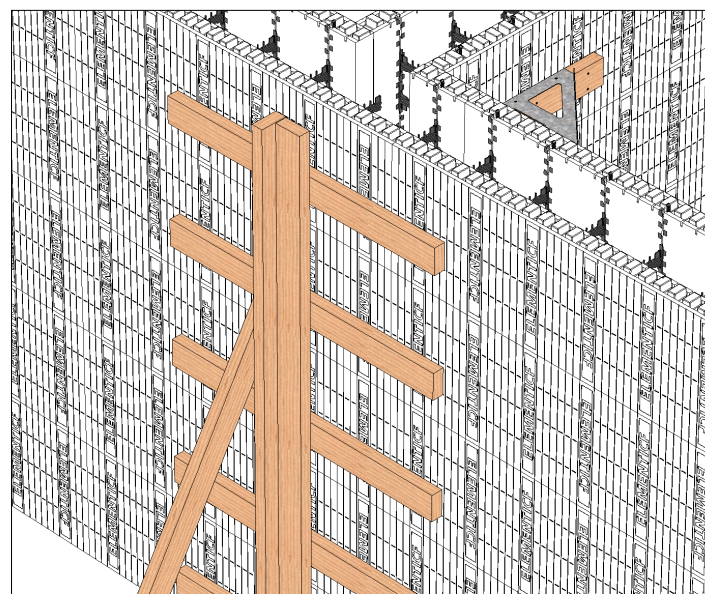


Additional form support should be added to the back side of the t-wall junction.

Another option for constructing a T-wall is to build the continuous wall first, then remove the foam sections where the T-wall junction occurs and install the blocks required to complete the T-wall. This method requires pre-planning to ensure adequate reinforcement is provided at each course so the T-wall can be securely attached. All other applicable steps noted above should also be followed.

2.8.9 – GABLE WALLS


The preferred method to construct a gable end is on the floor to be installed as a one-piece unit.

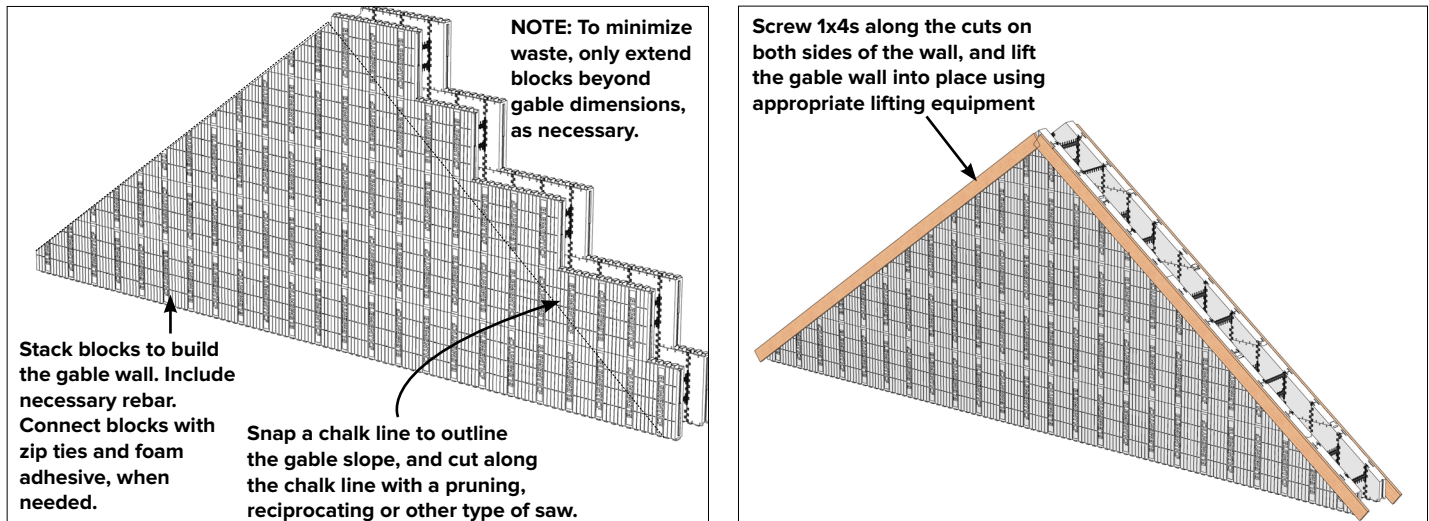

Make sure all necessary roof attachment hardware is available prior to concrete placement, as it must be installed during or immediately after the pour.

NOTE: Pieces of plywood can be screwed into the 1x4s during placement to help contain the concrete.

Another option for constructing a gable wall is to assemble the gable in place. Set the pitch for the gable by marking the first course appropriately. Subsequent courses should follow this pattern.

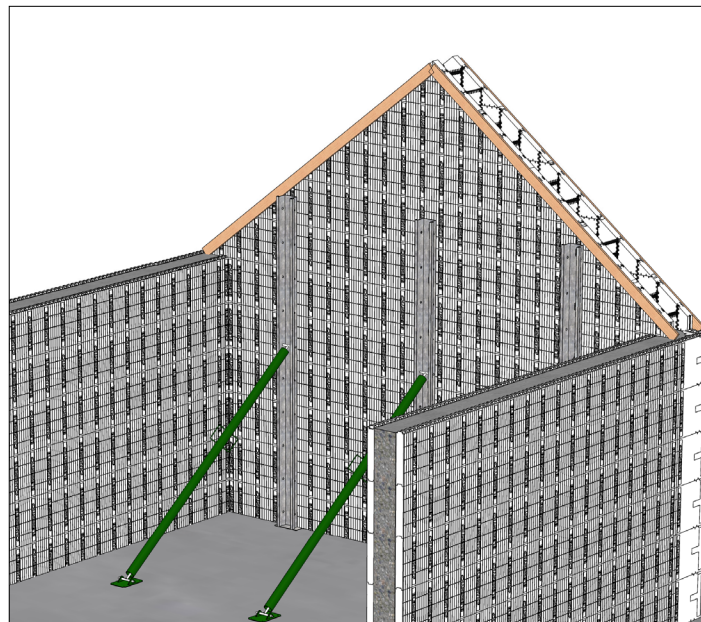


Prior to lifting the gable wall into place, ensure that appropriate wall alignments and scaffolding system is in place for safe installation.

2.8.10 – RADIUS WALLS


There are a number of different methods for creating radius walls with Element. Below, is a guide that will create radius walls based on 8-inch (203 mm) segments of Element.

See “APPENDIX B – RADIUS WALL TABLE” on page 113, for radius wall tables.


NOTE: This process will result in vertically stacked joints, and additional block support will be required prior to concrete placement.

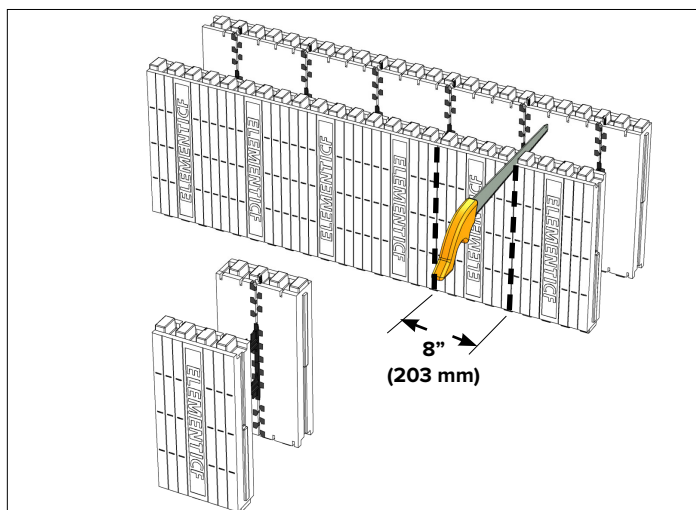


STEP 1: Cut blocks into 8” sections with web centered in each section.

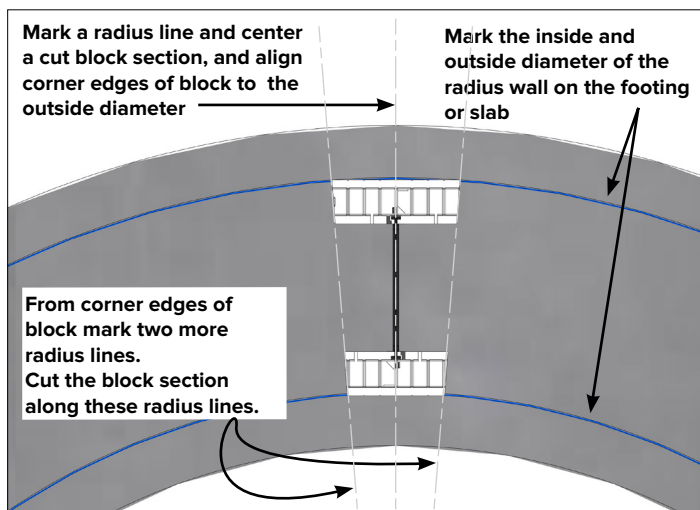

STEP 2: Mark radius lines for an 8” cut section.

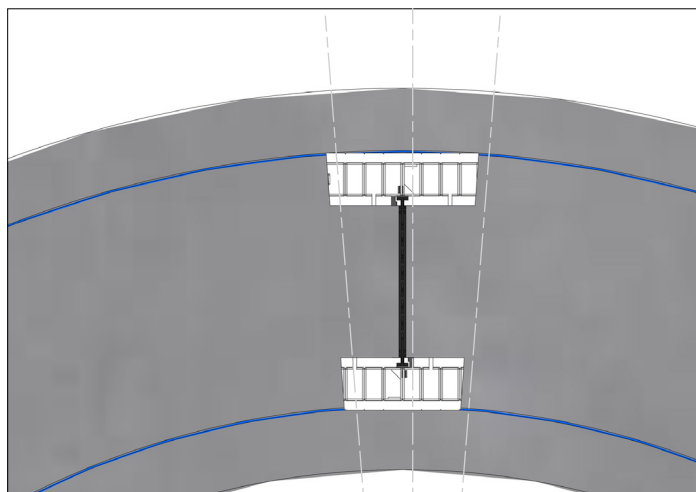

STEP 3: Cut the 8” section at the edges along the radius lines. Mark and cut all block sections using this template.

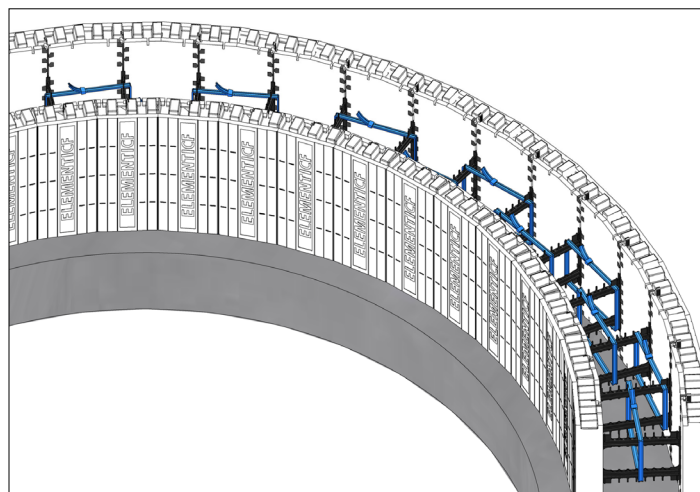

STEP 4: Connect and secure sections with zip-ties, tapes and foam to create the first course. Repeat the steps for each additional course, and connect each with zip ties or Element hooks.

2.8.11 – ELEMENT ICF INSERT

The Element ICF Insert is a 2-inch (51 mm) thick rigid insulation panel designed to slide into an Element ICF wall assembly to increase the thermal resistance of the wall system.

The insert is compatible with both Element Preformed and Site-assembled ICF blocks and is installed during block placement as the wall is constructed.

The insert is typically positioned against the exterior wall face, where it provides the greatest thermal benefit. Once installed, the insert mechanically engages with the ICF geometry and remains in position during concrete placement. No additional fastening is required.

To improve stability during concrete placement, vertical joints of the adjacent inserts can be offset from the vertical joints of the Element ICF blocks. Staggering insert joints relative to block joints increases wall rigidity and reduces movement under concrete pressure.


A 2-inch (51 mm) thick Element Insert provides the following thermal insulation values:

- R-8 (RSI 1.4) when made with standard EPS insulation - **Element ICF Insert**
- R-9.2 (RSI 1.6) when made from graphite-enhanced polystyrene - **Element ICF Chrome Insert**


When used in combination with Element ICF blocks, the Element ICF Insert increases the total effective thermal insulation value of the wall assembly as follows:

- R-31.5 (RSI 5.5): Element ICF with Element ICF Insert
- R-32.7 (RSI 5.8): Element ICF with Element ICF Chrome Insert
- R-34.8 (RSI 6.1): Element ICF Chrome with Element ICF Insert
- R-36 (RSI 6.3): Element ICF Chrome with Element ICF Chrome Insert

The stated wall assembly insulation values include contributions from the EPS ICF and insert panels, inside air film, 1/2-inch (13 mm) gypsum board, outside air film, and a 4-inch (102 mm) concrete core.

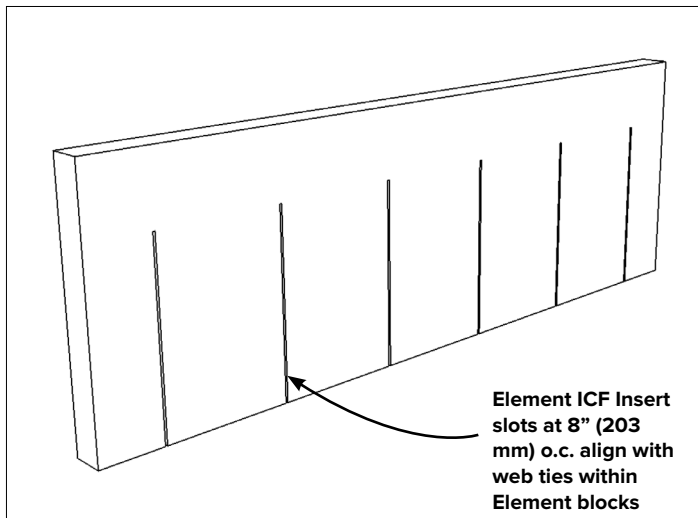

Element ICF Insert

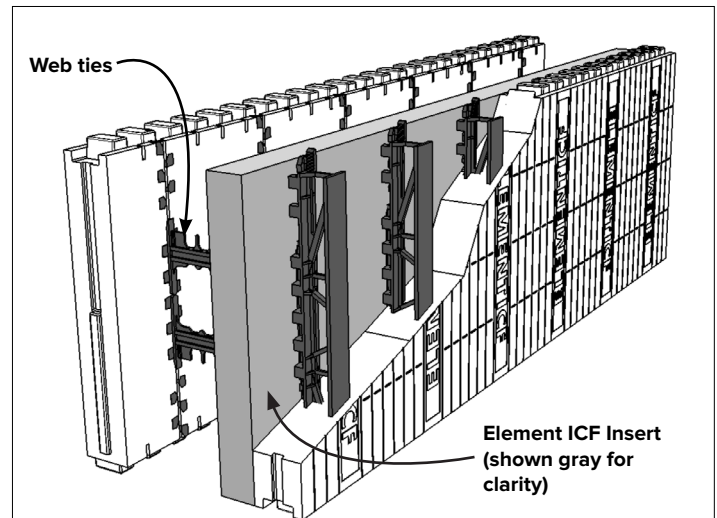


Element ICF Inserts fit securely against the inside face of the Element ICF form panel without the need for fasteners or adhesives.

2.9 – REINFORCEMENT

Reinforcing steel (rebar) strengthens concrete walls to help minimize cracking and buckling under load.

It is the responsibility of the installer to verify rebar specifications to comply with local building codes and engineering specifications.



Refer to the Element Prescriptive Engineering manual, and Section 5.14 for typical reinforcement details.

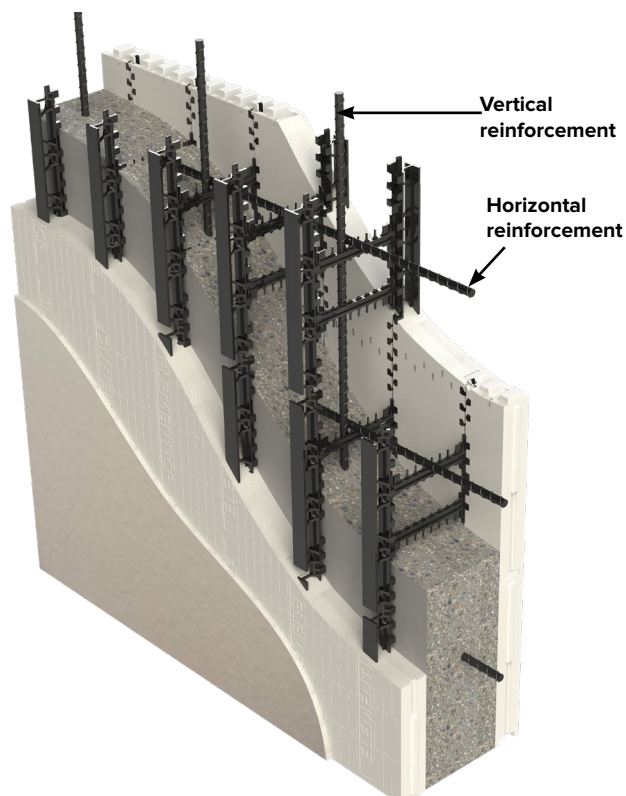


2.9.1 – BASIC REINFORCEMENT

- Reinforcing steel must meet:
 - Canada: CSA G30.18, Grade 400 (400 MPa minimum yield strength)
 - United States: ASTM A615, ASTM A996, or ASTM A706, Grade 40 (40 ksi minimum yield strength) or Grade 60 (60 ksi minimum yield strength)
- Reinforcing steel in an Element ICF wall must have minimum concrete cover outlined in the Element Prescriptive Engineering manual, or as specified by design.
- Hold the reinforcement back from door and window openings outlined in the Element Prescriptive Engineering manual, or as specified by design or local building codes.
- It is the responsibility of the installer to verify tabulated rebar specifications with local building codes and engineering specifications

2.9.2 – HORIZONTAL & VERTICAL REINFORCEMENT

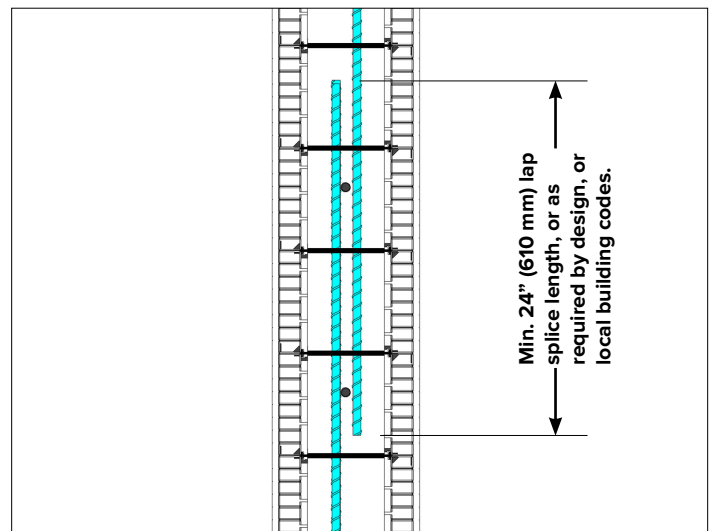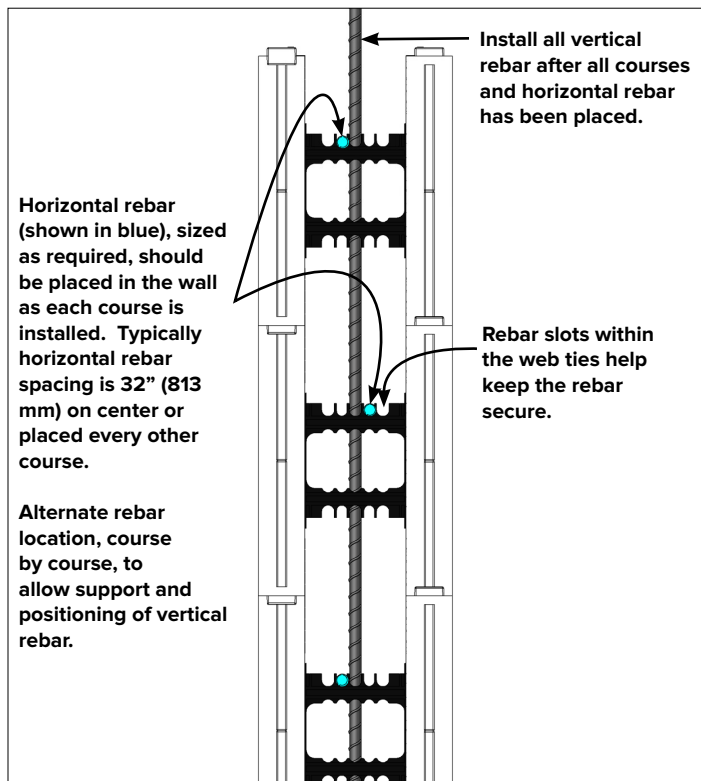


Rebar slots in the Side webs allow for non-contact lap splices of horizontal rebar, the preferred method when creating lap splices.

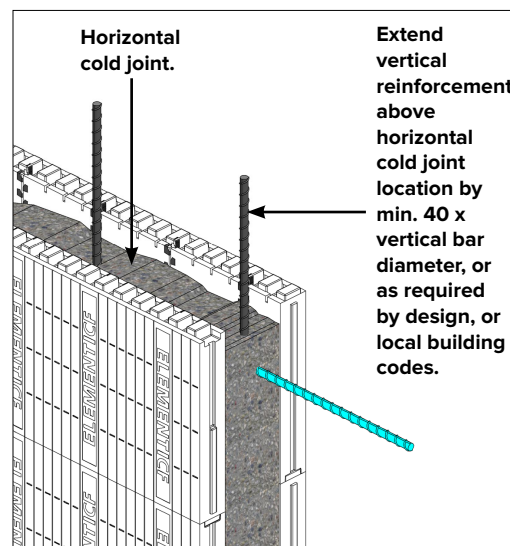


2.9.3 – HORIZONTAL REBAR SPACINGS

Horizontal rebar spacing is usually set at 16- or 18-inches (406 or 457 mm) vertically. However, if closer spacing is required, Element ICF can accommodate smaller intervals by incorporating extra Flexities™ as necessary. This flexibility in adjusting horizontal bar spacing offers several advantages, making it simpler to design and construct Element ICF walls for various purposes such as:


- safe rooms,
- shear walls,
- grade beams,
- bottom rebar closer to the footing or slab surface,
- or top rebar closer to the top of wall.

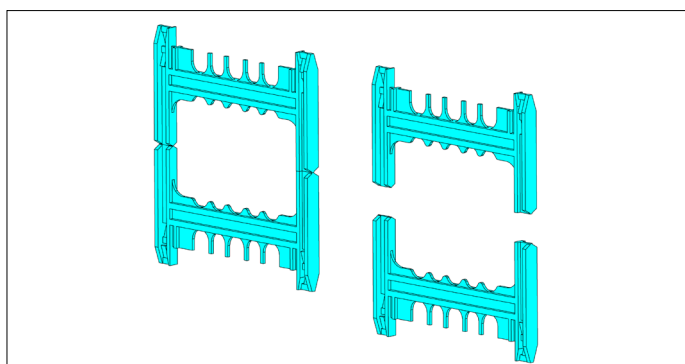


Snap Flexities™ in half.

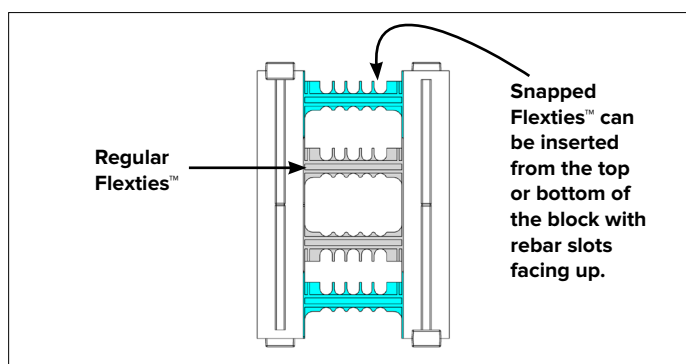


Flexities™ can be inserted into Site-assembled blocks.

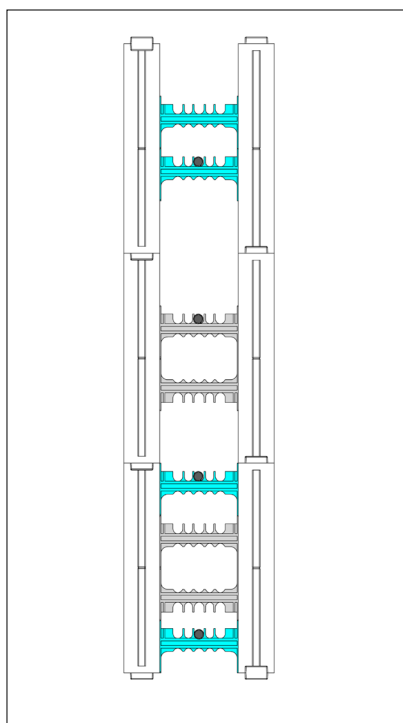

Snapped Flexities™ placed for 12" on center horizontal rebar spacing

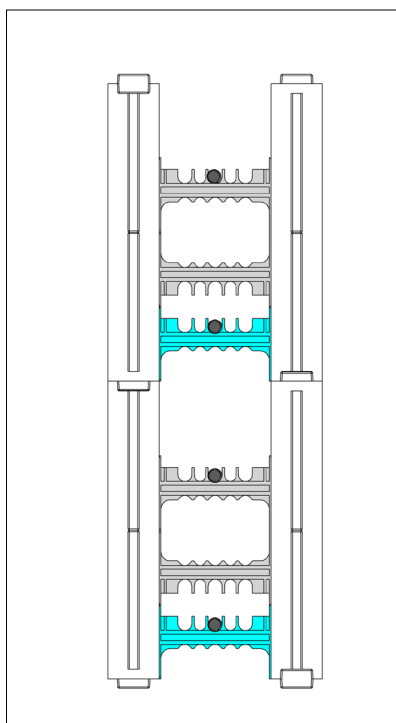


Snapped Flexities™ placed for 8" on center horizontal rebar spacing

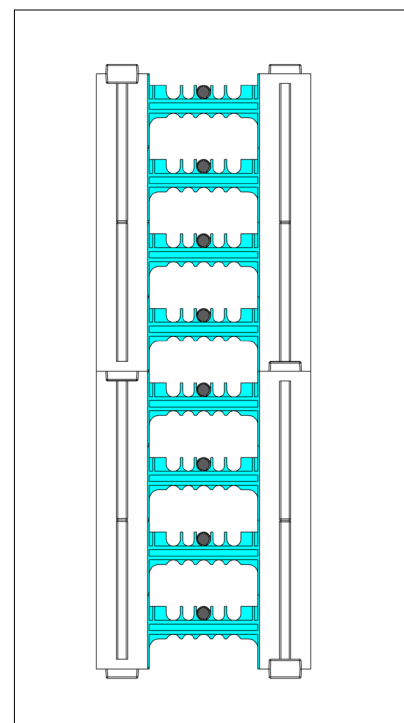

Snapped Flexities™ placed for 4" on center horizontal rebar spacing


2.9.4 – TYPICAL REINFORCEMENT AT OPENINGS

Hold all reinforcement back 2-inches (51 mm) from door and window buck material to ensure proper concrete coverage.

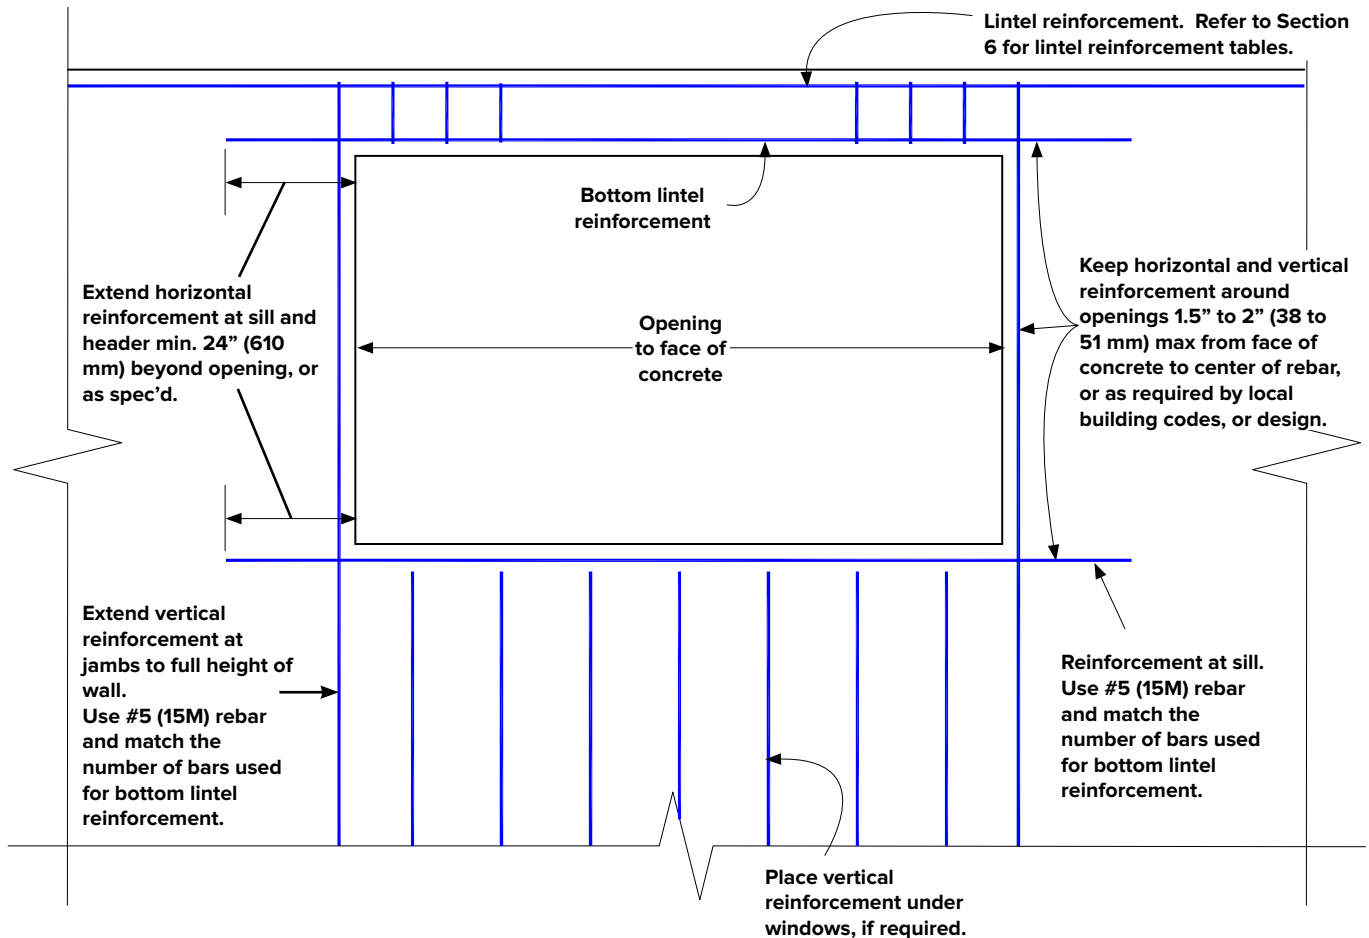


2.9.5 – LINTELS

Appropriate lintel rebar should be placed in the proper sequence directly above doors and windows to carry loads over these openings.

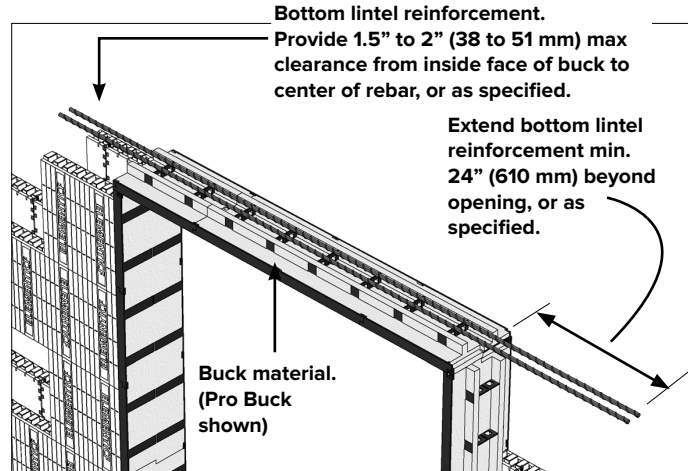

Before placing blocks across the top of door or window openings, rest the bottom lintel bar(s) on buck material.

NOTE: Block Lock can be installed across the entire length of the lintel span. In some cases it may be required to install top lintel rebar before installing Block Lock, in order to achieve necessary concrete cover.

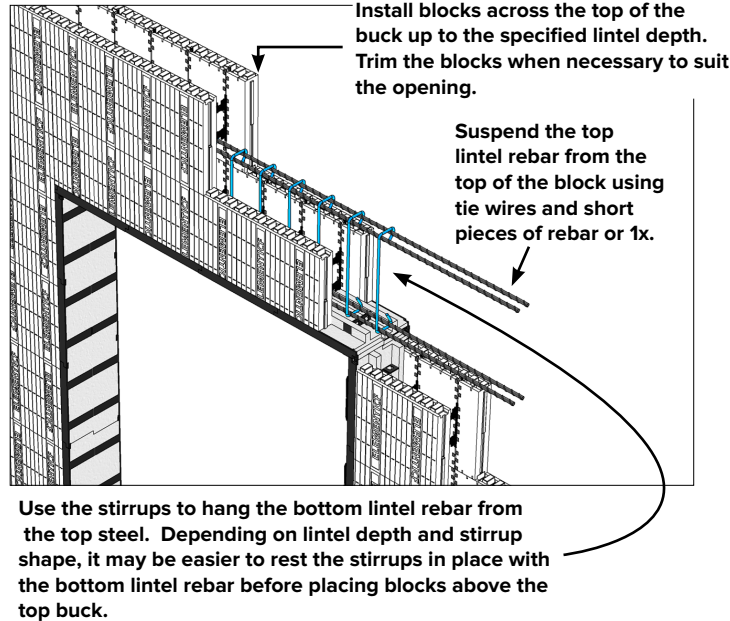

Refer to Element Prescriptive Engineering manual for lintel reinforcement tables, and lintel details.

2.10 – WINDOW & DOOR BUCKS

Bucks provide attachment surfaces for windows and doors while holding back concrete from these openings during concrete placement. Mark the center and edges of openings as you place courses and cut blocks as needed.

Refer to the rough opening (R/O) dimensions for windows and doors. Provide for openings in the wall taking into consideration the thickness of the chosen buck material. See window and door manufacturer info for R/O dimensions.

Cross bracing is required for all window and door bucks approximately 18-inches (457 mm) on center to help withstand the pressures of concrete placement.

Window and door openings within 4-ft (1220 mm) of corners require additional horizontal strapping from corner to across the opening.

Prior to placing window or door buck, confirm that bottom lintel rebar has been installed.

Bucks can be made from EPS foam, lumber or vinyl. Pro Buck, made of dense EPS foam, is recommended for use with Element ICF.

2.10.1 – PRO BUCK™

Recommended for use with Element ICF is the Pro Buck™ system. Designed for Element, Pro Buck creates a complete thermal break in window and door openings. And unlike wood and vinyl bucks, Pro Buck is light weight, faster and easier to install, while creating little job site waste. For more information refer to the Pro Buck Installation Guide.

For efficiency, a table long enough to accommodate connecting and cutting Pro Buck sections together is recommended. This can be done by simply using a pair of sawhorses and a section of plywood, or 2x lumber, such as 2x10 or 2x12 pieces.


Furring strips are molded with Tie-back Loops.

Anchors Pro Buck to concrete providing direct load path for fasteners to concrete.


Acts as rebar chair providing 1.5" (38 mm) concrete cover around openings.

Secures to Element ICF Flexities™ using zip-ties for additional support.


Exposed furring strips at 8" (203 mm) on center across width of Pro Buck for fastening window or door framing, and along the Pro Buck fins for picture framing.

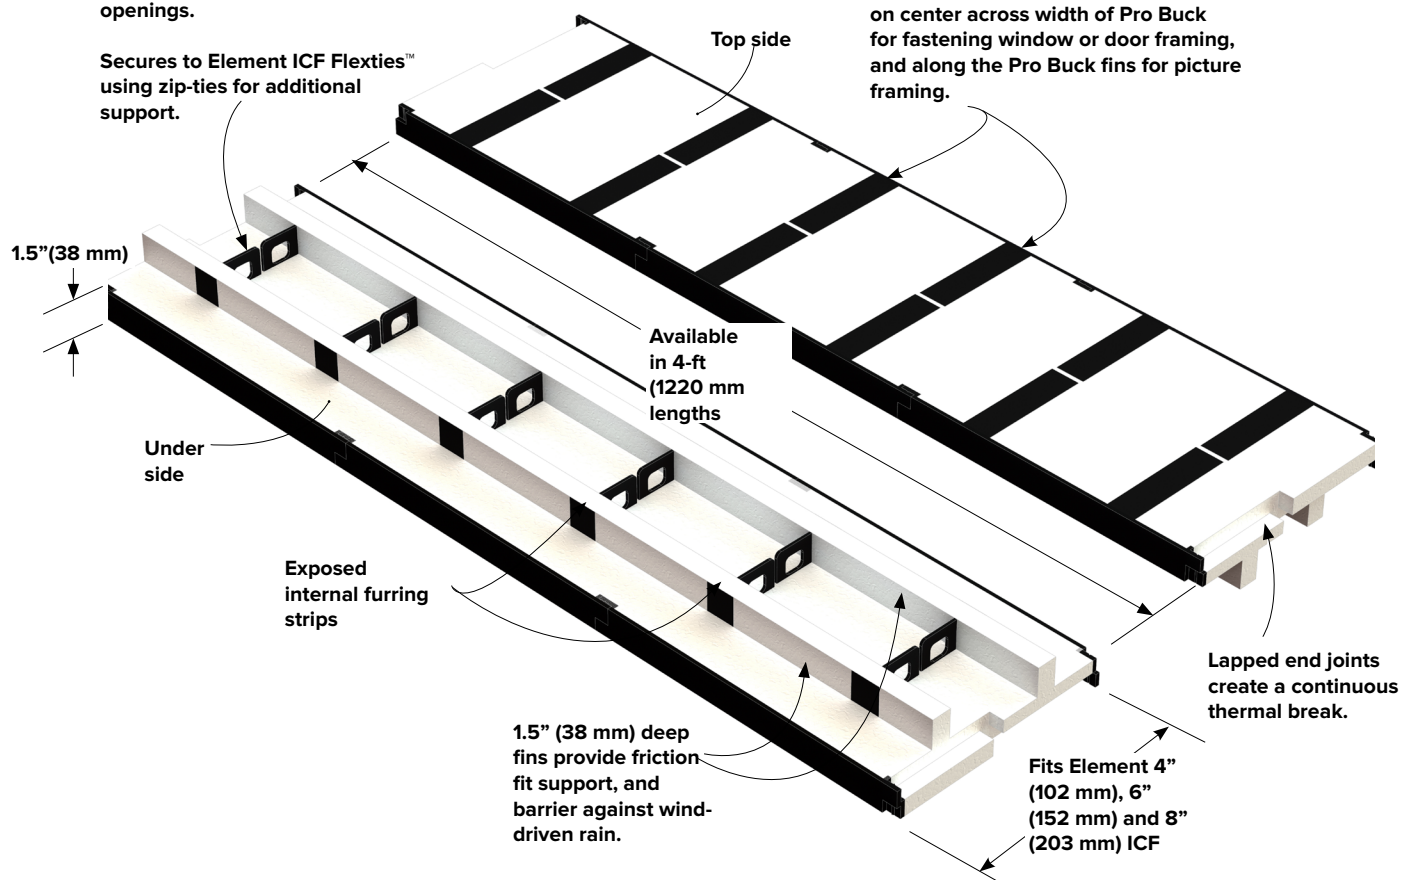


When the walls are built to the height of the opening installation of the Pro Buck can begin. The rough opening is measured between the Pro Bucks. Therefore, to account for the 1.5-inch (38 mm) thickness of Pro Buck, the opening in the Element ICF wall should be cut 3-inch (76 mm) wider and 3-inch (76 mm) taller than the rough opening.

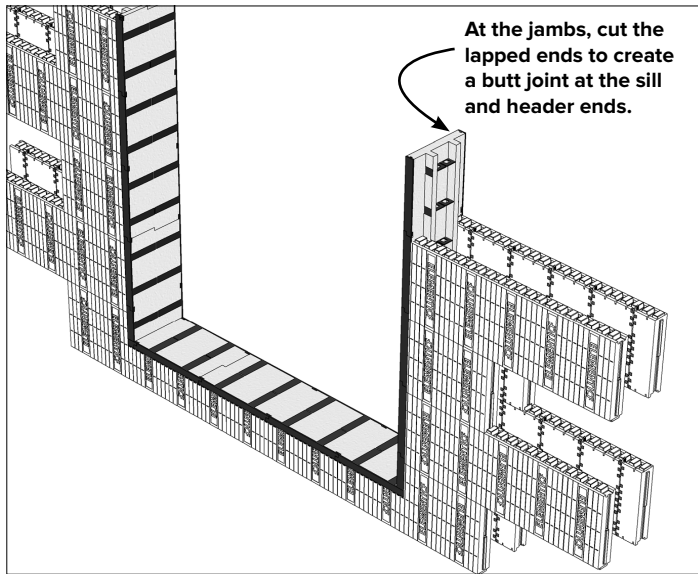


STEP 1: Assemble Pro Buck for the jambs, and cut the lapped ends to fit the height of the opening minus 1.5", which is the thickness of the Pro Buck at the header.

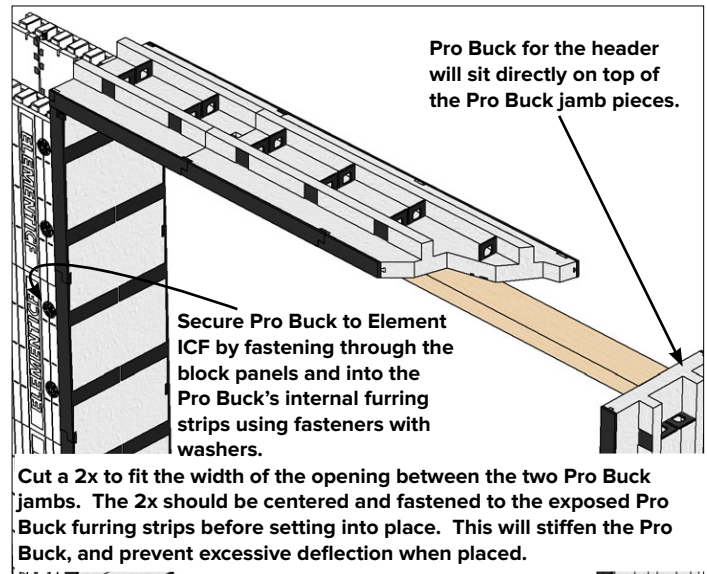

STEP 2: Install Pro Buck at the header. Cut the lapped ends to fit the entire width of the opening. The ends of Pro Buck will sit directly on the Pro Buck jamb pieces.

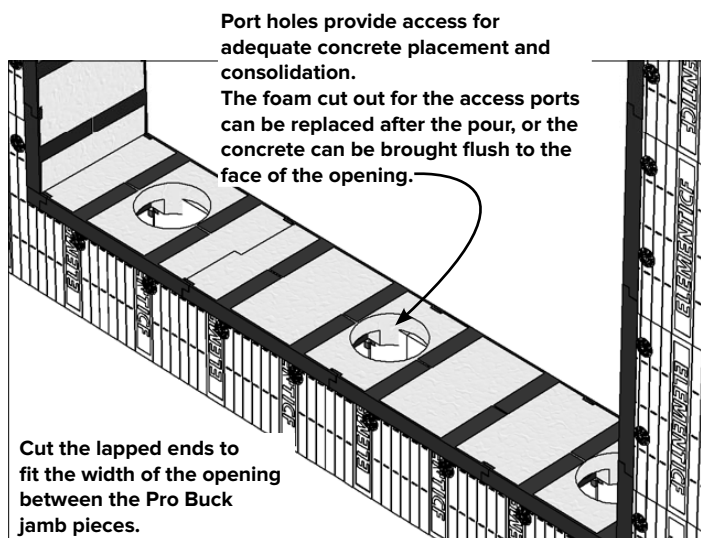

STEP 3: Install Pro Buck at the sill. To avoid debris in the wall cavity, cut min. 4" port holes at 16" on center before placing in the opening.

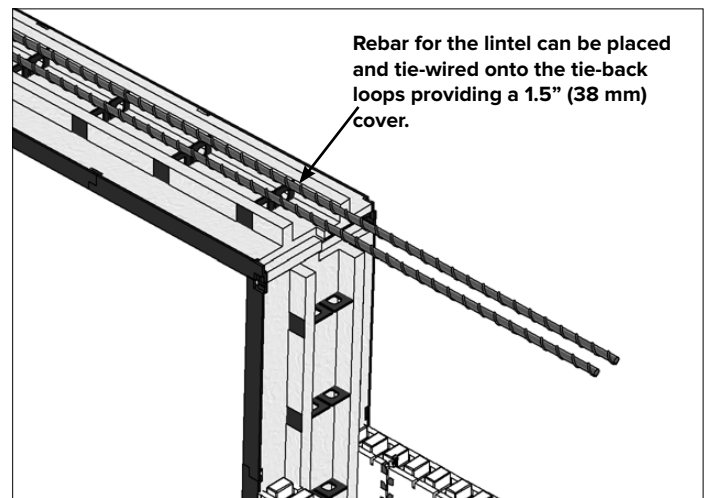

STEP 4: Continue installing blocks above the opening. Use zip ties around the tie-back loop to secure the Element blocks to the Pro Buck at the header.



Once the Pro Buck pieces are placed in the opening add 2x wood bracing, and Pro Buck Brackets, to secure the Pro Bucks during concrete placement. Wood screws are recommended when fastening wood bracing to Element Pro Buck.

NOTE: Using a membrane flashing is recommended to cover the joints between Pro Bucks and the Element blocks.


Provide picture framing every 8" (203 mm) at the sides to secure Pro Bucks if there are more than 3 foam bars unsupported by a web along the sides of the opening. Fasten to internal furring strips¹ with Wind Devils or equivalent².

Cut vert. 2x wood sections to fit snug between top horiz. 2 x wood piece and bottom 2 x wood sections. Toe-nail into place.

Cut horiz. 2x wood sections to fit snug between 2 x wood jamb pieces, and toe-nail into place. Fasten vertical bracing to horizontal bracing. Provide every 2-ft (610 mm).

Cut 2x wood sections at jambs to fit snug between top horiz. 2 x wood piece and bottom 2 x wood sections. Center and toe-nail into place and fasten to furring strips.

Cut 2x wood sections to support vertical bracing every 2ft (610 mm). Add additional wood sections at corners. Fasten to furring strips.

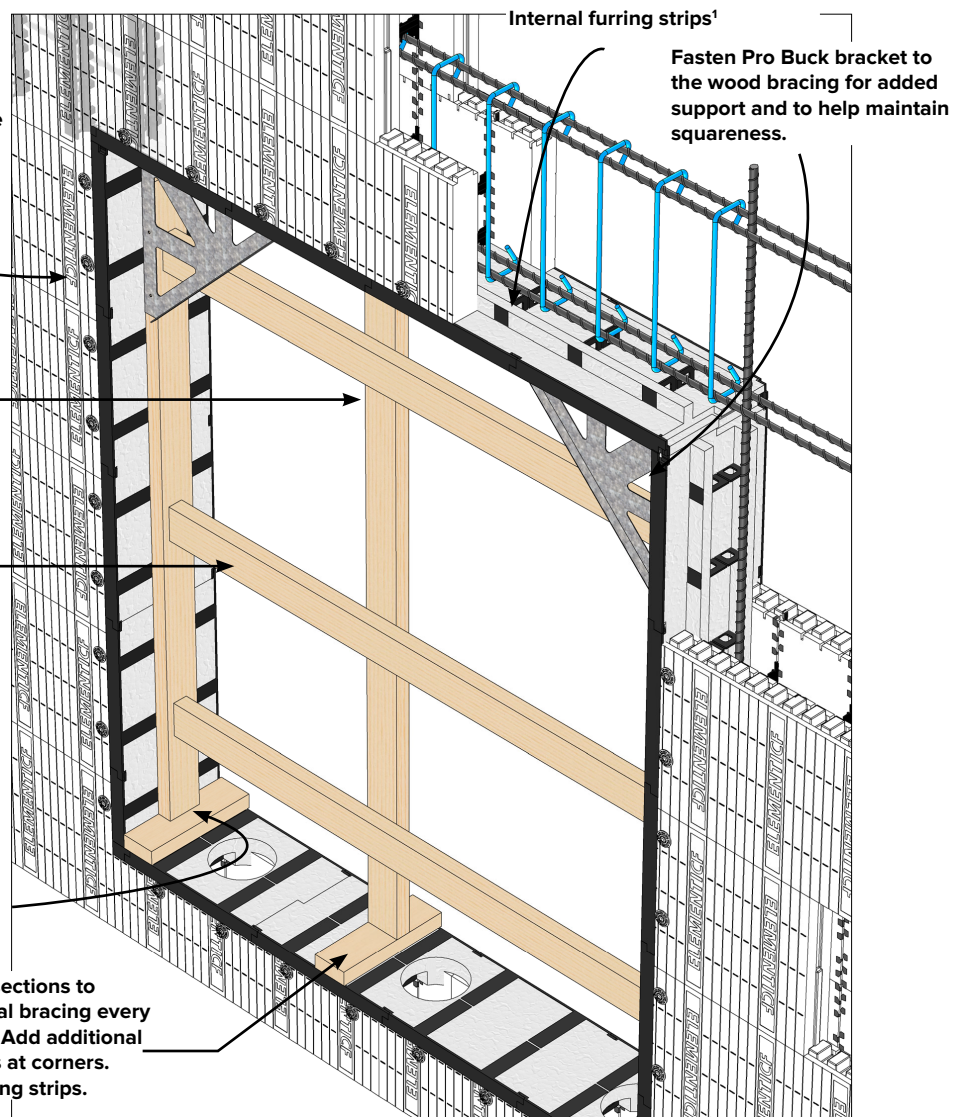

1. Internal furring strips are easy to locate as they are in the same spot as the exposed furring strips that run across the face of Pro Buck.

2. Wind Devil fasteners are available from www.wind-lock.com. Finishes such as stucco, or acrylic textured finishes can be applied directly over Wind Devil fasteners.

Non-corrosive wood screws are recommended for the attachment of window or door frames. Inset or flanged windows and doors are fastened to the furring strips molded into the Pro Buck. The furring strips are anchored into the concrete providing proper load transfer from the window/door to the concrete substrate.

To determine the fastener type and spacing for load rated windows and doors, withdrawal and lateral load resistance of specific fasteners are provided below.

Direct Fastening to Furring Strips

	Allowable Withdrawal ¹	Allowable Lateral ¹
#6 wood screw, min 1-inch (25 mm) long	30 lb	72 lb
#8 wood screw, min 1.25-inch (32 mm) long	38 lb	188 lb
#10 wood screw, min 1-inch (25 mm) long	34 lb	90 lb

1. Withdrawal factor of safety = 5, allowable lateral load based on the lesser of factor of safety of 3.2 or 75% of proportional limit. Based on independent fastener testing conducted by QAI Laboratories, in accordance with ASTM D1761, and ASTM E2634.


Use Element Wall Plates wherever higher-load fastening is required—for example, at window-mullion anchor points or at door hardware (hinges, closers, strikes) that do not line up with the furring strips. The Wall Plates provide additional fastening edges between Pro Buck furring strips, and provide stronger fastener resistance. Withdrawal and lateral load resistance of specific fasteners are provided below.


Direct Fastening of Wall Plate Inserts

	Allowable Withdrawal ¹	Allowable Lateral ¹
#8-18x1-inch(25 mm) long self-tapping screw	102 lb	142 lb
#10-16x1.5-inch (38 mm) long self-tapping screw	106 lb	171 lb

1. Withdrawal factor of safety = 5, lateral resistance factor = 0.5 & 0.53 for #8 and #10 screws, respectively. Based on independent fastener testing conducted by QAI Laboratories, in accordance with ASTM D1761, and ASTM E2634.

To insert Wall Plate cut a narrow slit on the face of Pro Buck.

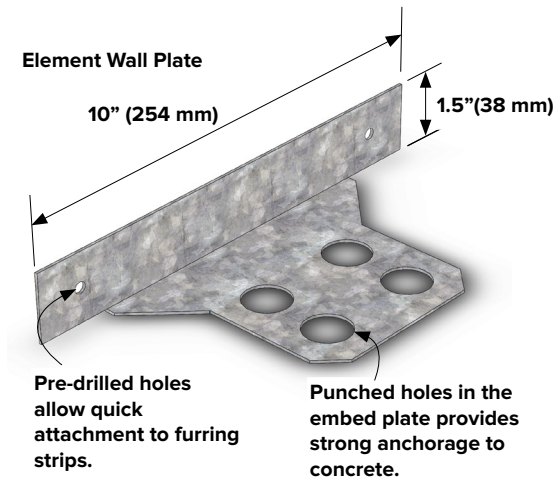


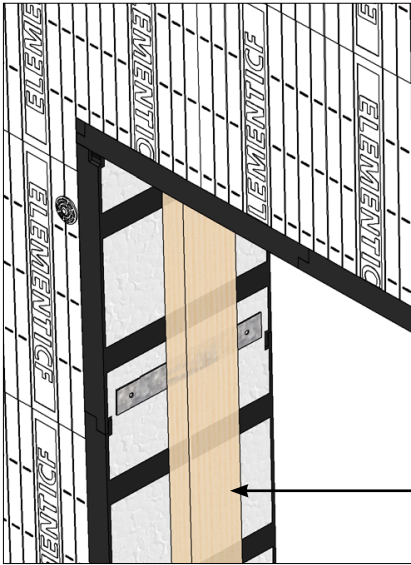

Wall Plate at front face of Pro Buck

Bracing support for opening can support the Wall Plate during concrete placement.

The Wall Plate securely anchors into the concrete core. When placed transversely to the opening holes punched in the Wall Plate allow for the placement of perimeter reinforcement.

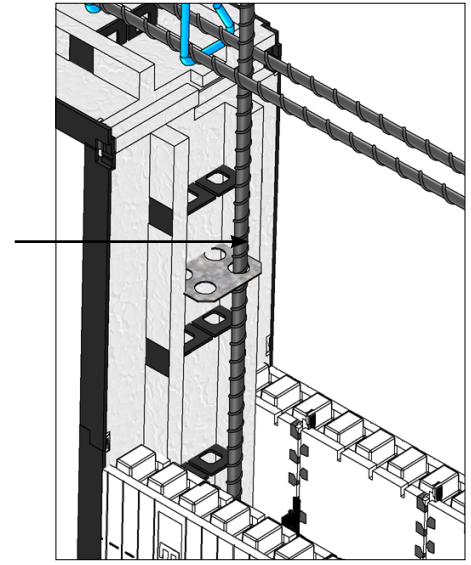

Wall Plate at back side of Pro Buck

Pro Buck can also be installed length wise along the opening and temporarily fastened to the furring strips at pre-drilled holes, if required.

2.10.2 – TREATED PLYWOOD BUCK

Following are several methods for building bucks. Regardless of the method chosen, pre-planning is required to optimize chosen finish materials.

STEP 1: Rip 3/4-inch (19 mm) treated plywood to full block width.

STEP 2: Rip treated 2x4 diagonally on a table saw to create a beveled edge.


STEP 3: Assemble buck with appropriate fasteners with 2x4s creating a dovetail detail.

STEP 4: Assemble buck sides and top with access holes cut in bottom piece for placement of concrete. Two 2x4s can also be used for the bottom to allow concrete placements.

STEP 5: Place pre-assembled buck in opening and fasten in place with foam adhesive. The buck can also be installed in opening as separate pieces.

STEP 6: Install temporary cross bracing to withstand concrete pressure. Attaching screws through the buck and into closest webs can provide additional buck support.

NOTE: Pressure treated wood for window bucks are normally required only if the bottom of the window buck frame is located at or below ground level. Check with local building codes to determine if your area requires pressure treated window bucks.

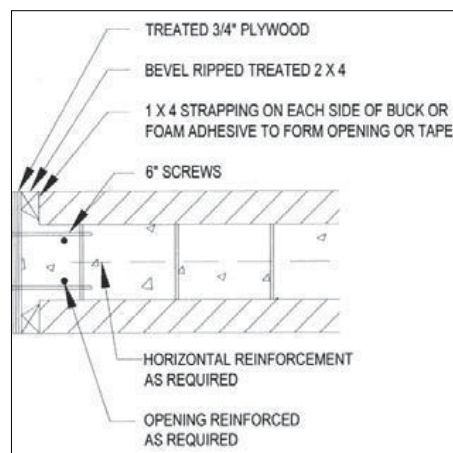

2.10.3 – SOLID WOOD BUCK

STEP 1: Choose appropriate wood product based on the dimension of the blocks:

- 4-inch (102 mm) block: 9.5-inch (241 mm)
- 6-inch (152 mm) block: 11.5-inch (292 mm)
- 8-inch (203 mm) block: 13.5-inch (343 mm)
- 10-inch (254 mm) block: 15.5-inch (394 mm)

STEP 2: Cut top piece of buck to fit the width of the opening.



STEP 3: Cut sides of buck, remembering that the top piece rests on the side pieces.

STEP 4: Cut two 2x4s for the bottom to allow concrete placement.

STEP 5: Assemble buck and place in opening.

STEP 6: Once the buck is in place, it must be centered and secured. This can be done by attaching 1x4s to the edges of the buck, extending the edge of the 1x4 over the foam to hold the buck firmly in place. Alternately, the buck can be secured with foam adhesive and tape.

STEP 7: Solid wood bucks will require additional concrete anchors to create a permanent attachment to the concrete.

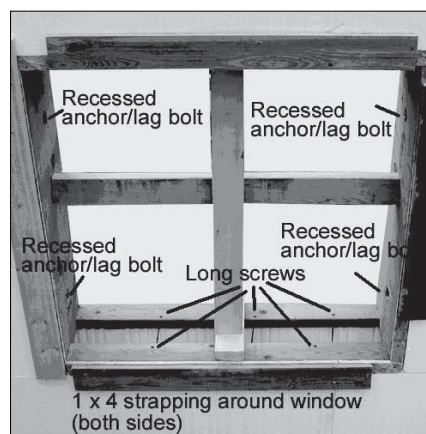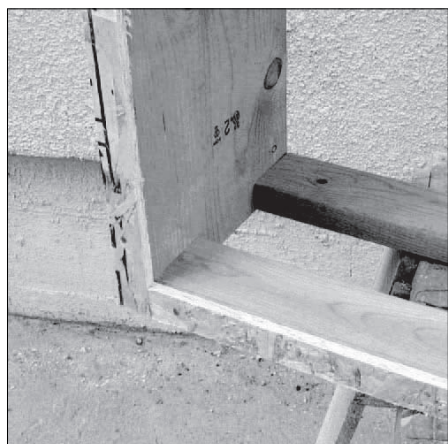



2.10.4 – RADIUS OPENINGS

Radius windows and doors can be assembled at the site with shortened pieces of Pro Buck or lumber buck material.

STEP 1: Create the template for the radius opening with OSB or plywood that matches door or window rough opening.

STEP 2: Using template, draw outline of radius on wall, allowing for buck material thickness. Cut accordingly.

STEP 3: Cut buck material into approximately 4-inch (102 mm) widths to create radius buck.

STEP 4: Cut side and bottom buck pieces. Leave openings in the bottom piece for concrete placement and consolidation.

STEP 5: Assemble buck pieces in the opening in the following order:


- bottom
- sides
- radius top

STEP 6: Once the buck is in place, it must be centered and secured. This can be done by attaching 1x4s to the edges of the buck, extending the edge of the 1x4 over the foam to hold the buck firmly in place. Alternately, the buck can be secured with foam adhesive and tape. Insert the radius template in opening to provide additional support.

STEP 7: Solid wood bucks will require additional concrete anchors to create a permanent attachment to the concrete.

2.10.5 – METAL JAMB SYSTEMS

Metal jamb systems are typically used in commercial applications. Many metal jamb companies will pre-bend jambs to fit Element blocks. Contact your local Element representative for more details.

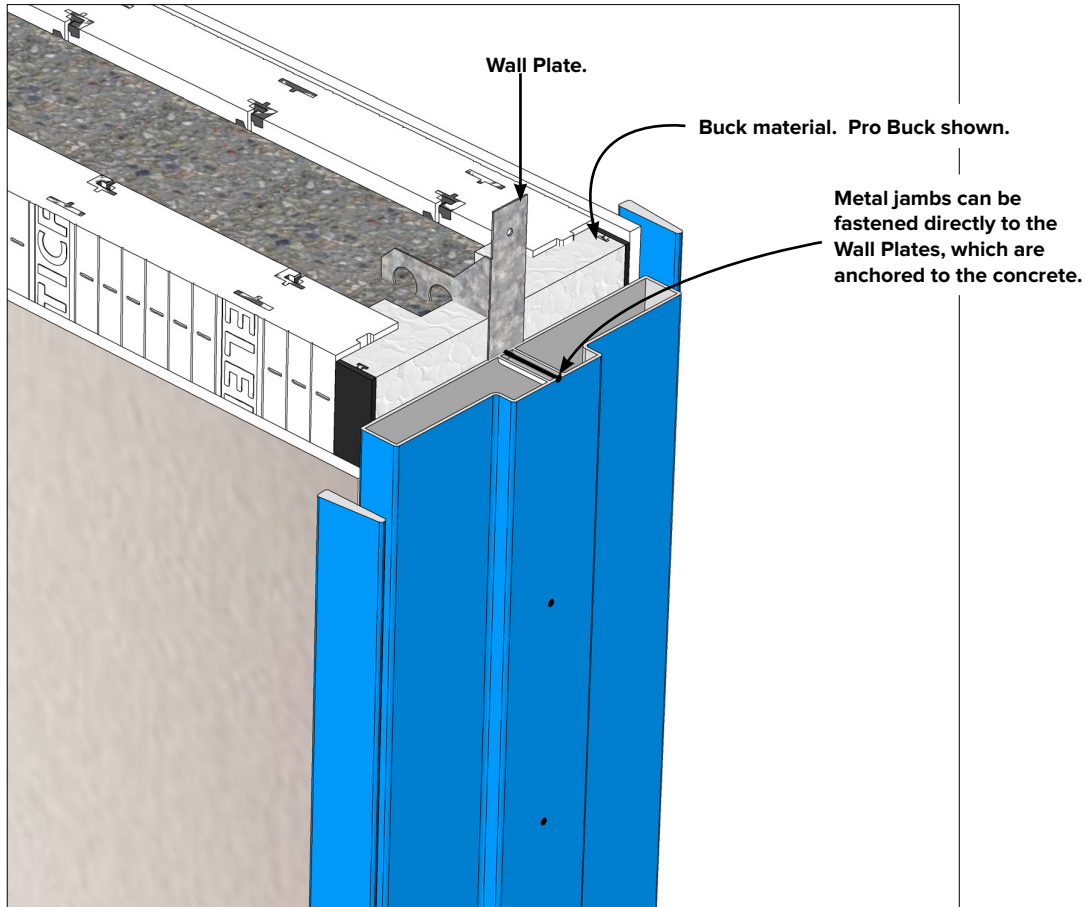


2.10.11 – FLASHING OPENINGS

Properly detailed and installed window flashing is the primary means of preventing water ingress at ICF window openings. When standard flashing practices are followed, additional measures are typically unnecessary. A variety of window flashing methods and materials may be used, provided they are compatible with expanded polystyrene foam, installed in accordance with the window manufacturer's instructions and applicable building code requirements.

The flashing details for a flanged window are presented herein, and reflect generally accepted good building practice and illustrate one acceptable approach, which includes an optional kerf cut detail. Independent industry research¹ has shown that kerf cuts can provide additional protection against water ingress and improved drainage performance when incorporated into the window-to-wall interface.


A kerf cut is considered a redundancy, not a requirement, in a properly flashed window installation. Its use is optional and may be considered where additional conservatism is desired by the designer or installer.

CAD details of additional flashing details, including kerf cuts, are available for download in the [Element ICF Technical Library](#).

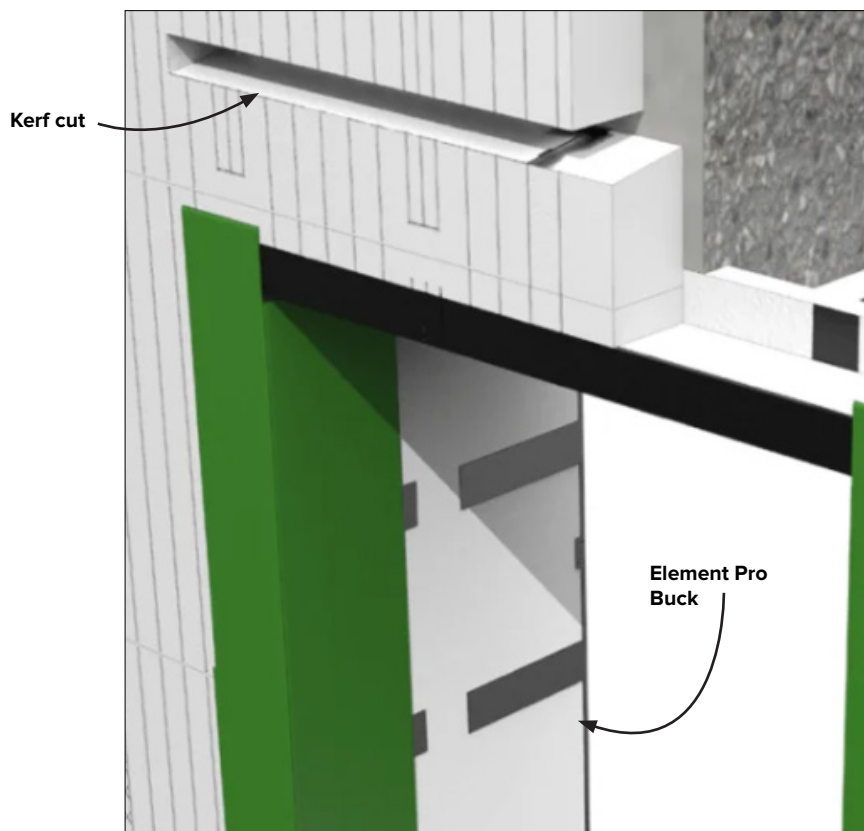


STEP 1: Cut out a kerf in the exterior ICF panel by cutting a horizontally in the ICF form above the window header. The cut should have a 15-degree slope, and it must extend to the concrete wall beyond the insulation panel.


1. RDH Building Science, *ICF Field Testing Report*, prepared for BC Housing and BC Ready Mix Concrete Association, Vancouver, British Columbia, Canada.

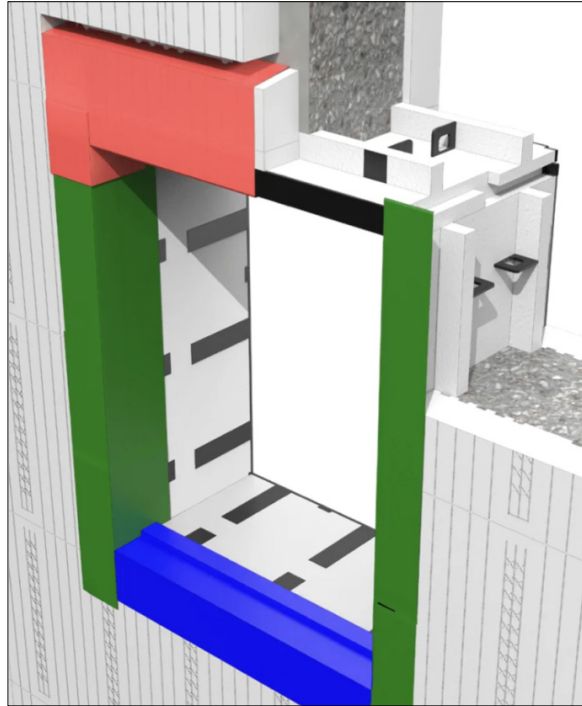


STEP 2: Apply flashing to the header and extend the flashing into the kerf, so that it terminates at the surface of the concrete core. A liquid-applied or self-adhering membrane will suit this application.

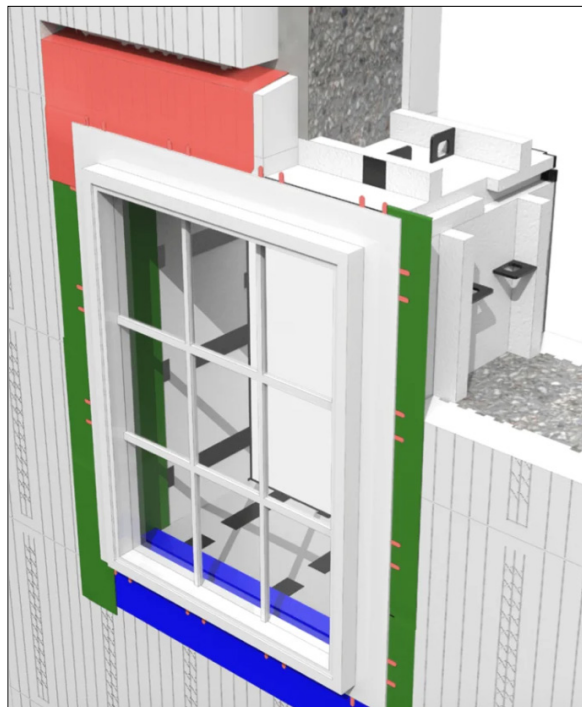


STEP 3: The window opening is now ready, and you can proceed to install the window unit. Once the window is in place, remember to shim it properly.

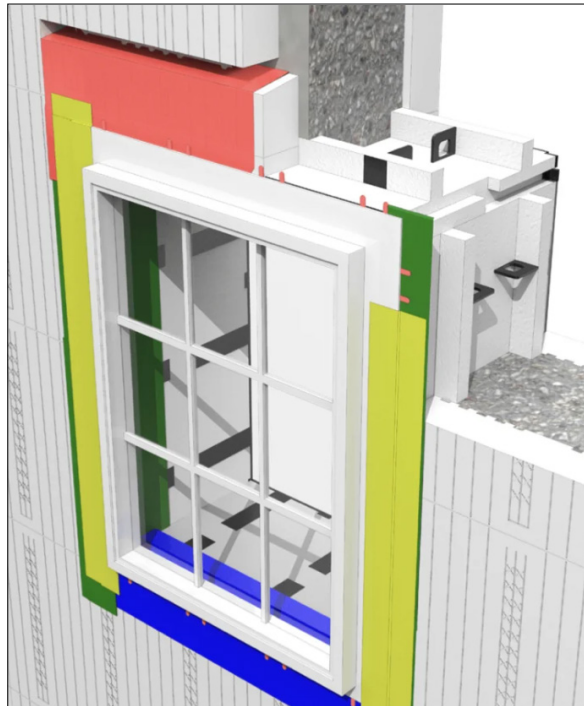

STEP 4: With the window set in place and shimmed, flash the sides of the window flange. Make sure that the flashing overlaps the entire flange side and the jamb flashing beyond. Again, a self-adhering or liquid-applied membrane will do.

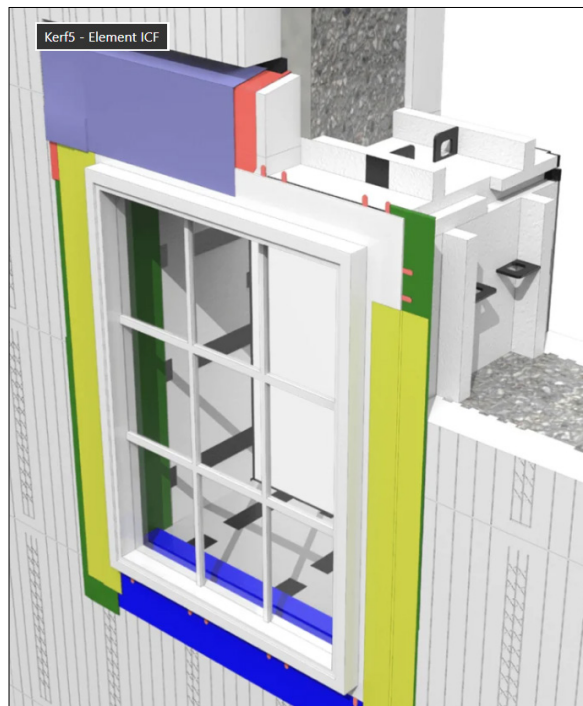

STEP 5: Apply flashing at the header flange. Use a self-adhering or liquid-applied membrane, and extend it from the header all the way into the kerf above, such that the flashing terminates at the concrete surface. Seal the flashing-concrete interface with a polymer sealant.

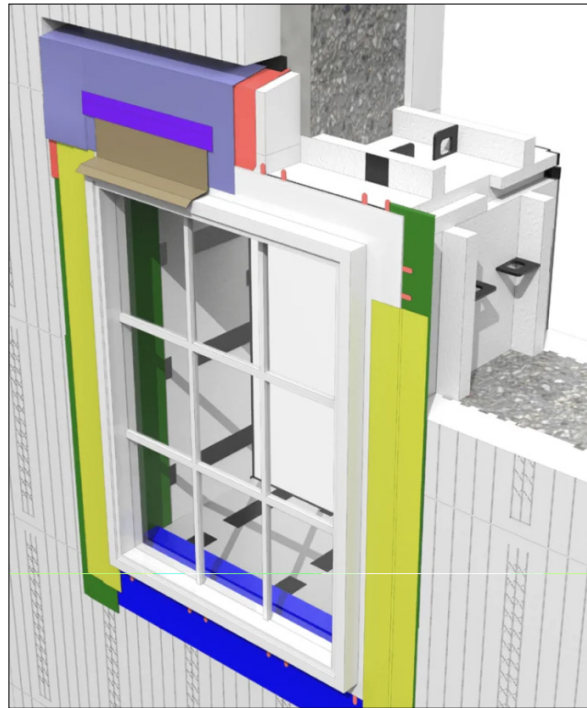

STEP 6: install the cap flashing so that it overlaps the header flange of the window, sitting directly on the membrane you've applied in the previous step.


2.11 – ADDITIONAL BLOCK SUPPORT

For added strength, bridging Flexties™ can be used to permanently lock blocks together, top to bottom, potentially lessening the need for additional form support or bracing in your wall. See “2.8.2 – BRIDGING FLEXTIES™” on page 20.

2.11.1 – STRAPPING AND BRACING


Vertical joint
between Element blocks
(shown as a dark line)

More than 3 bars from
web (shown shaded).

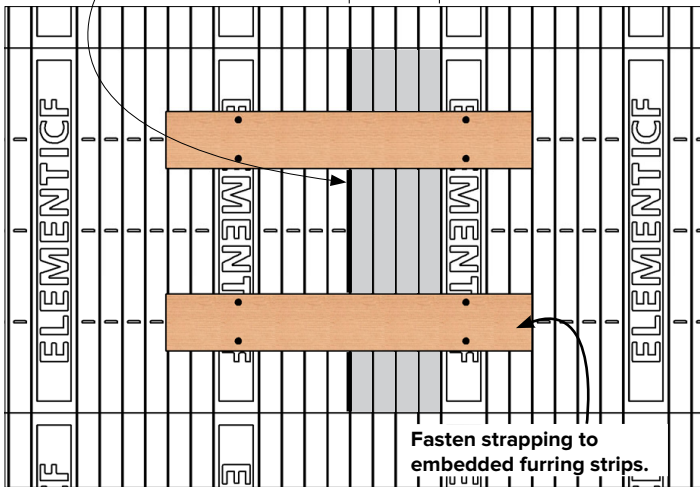


Provide wood strapping on both sides of Element when there are more than 3 bars beyond a web.


Vertical joint (shown as
dark line for clarity)

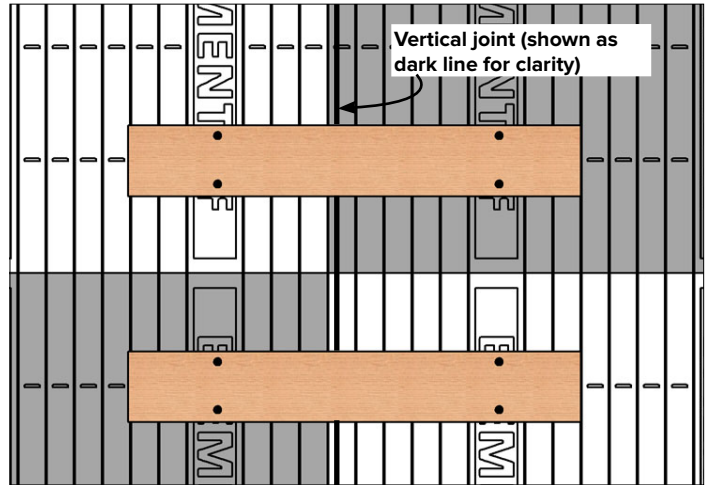


Provide wood strapping on both sides of Element when vertical joints are directly on top of each other, or offset between joints is less than 8" between courses.

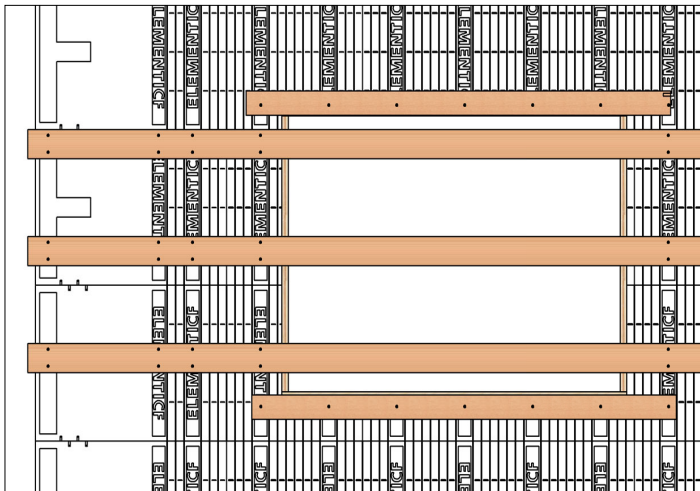

Provide wood strapping on both sides of Element at window and door openings less than 4-ft (1220 mm) from a corner. Run strapping across opening. Fasten to embedded furring strips, and bracing around openings.

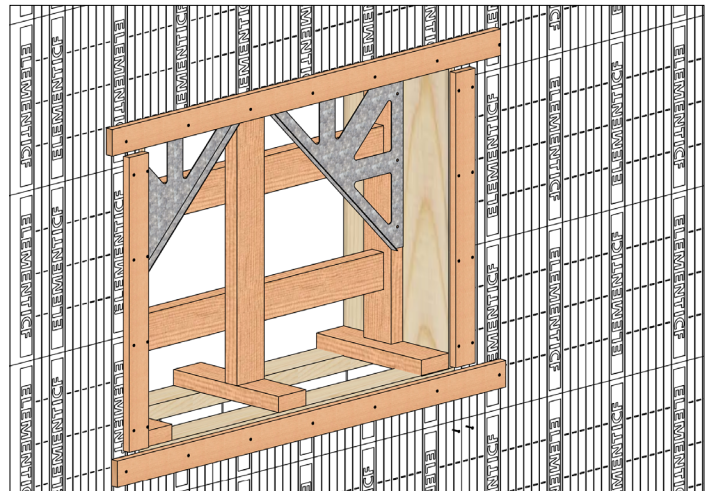


Wood strapping is required around window and door openings to maintain straightness. In addition, cross bracing with 2x4 supports is required inside window and door bucks to hold bucks in place and prevent sagging. Use foam adhesive on bucks to provide additional buck support.

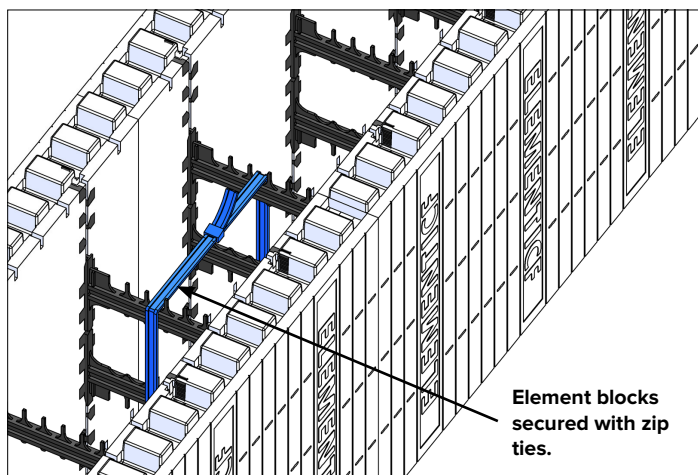


Element blocks secured with zip ties.

The top course and lintels should be secured with adhesive foam, zip ties, or Horizontal Hooks.

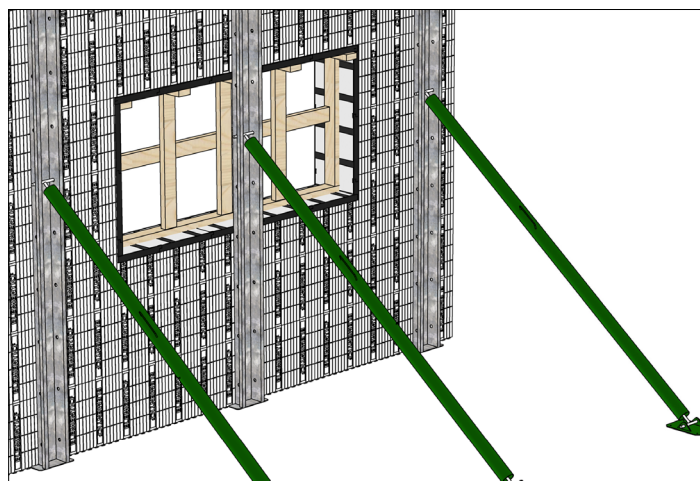

The middle of large openings should be vertically braced to prevent tipping.

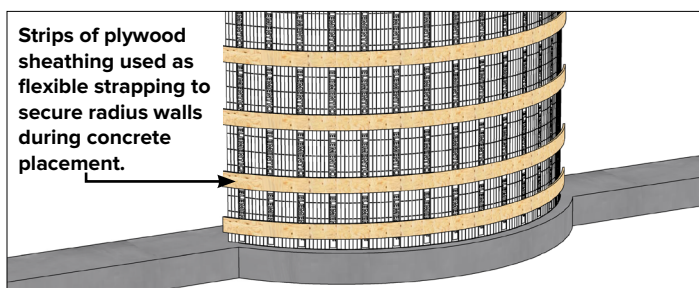

Strips of plywood sheathing used as flexible strapping to secure radius walls during concrete placement.

Radius walls should be secured with foam adhesive and flexible strapping material.


NOTE: All blocks should be firmly seated to prevent settling.

2.11.2 – CORNER BLOCK SUPPORT


For any type of ICF system it is good practice to provide additional block support at the corners. To ensure a safe and proper concrete pour the following corner block support is recommended:

- Using 2.5-inch (64 mm) wood screws to fasten 2x6 vertically to the embedded furring strips on both sides of the corner.
- For inside corners apply typical bracing as required.


Alternatively, bridging Flexties™ can be used to reduce the amount of block support required. See “2.8.2 – BRIDGING FLEXTIES™” on page 20

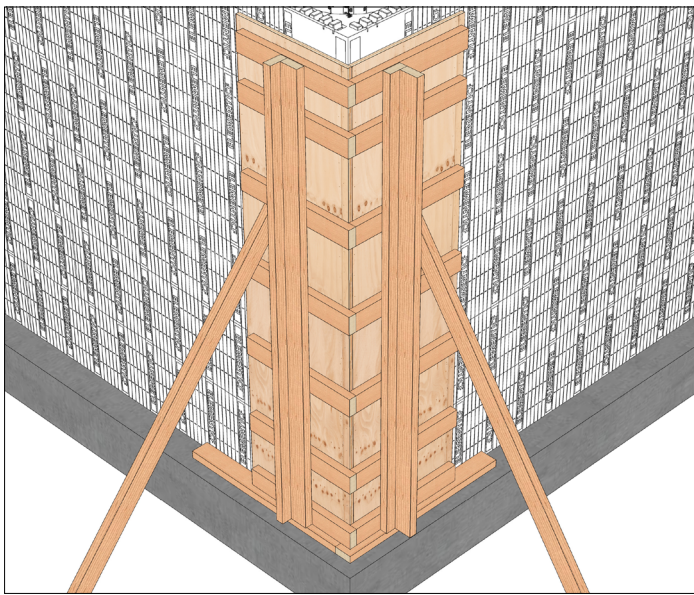

Example of outside corner block support.

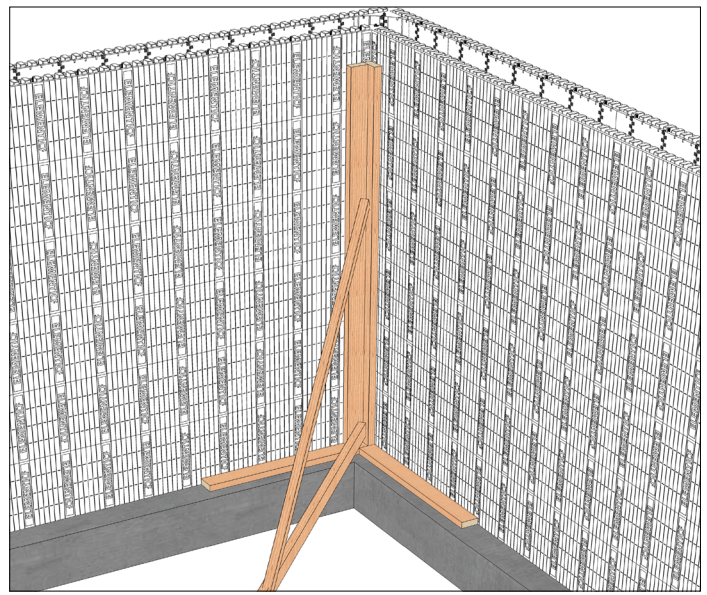

Example of inside corner block support.

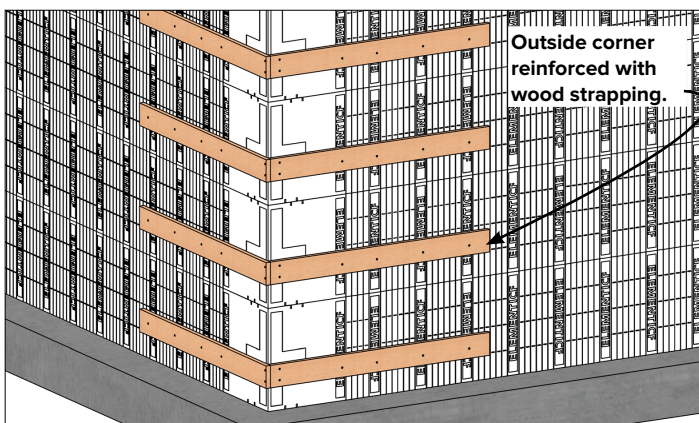


Outside corner reinforced with wood strapping.

All outside corners can be reinforced with tape, or wood strapping, and zip ties.

NOTE: To ensure proper alignment bracing is recommended at the corner locations. See “2.12 – WALL BRACING & ALIGNMENT SYSTEM” on page 71

If you need to stack identical corners in subsequent courses, you will need to provide additional block support where the stacked joints are created.

Example of stacked identical corners - results in stacked vertical joint.

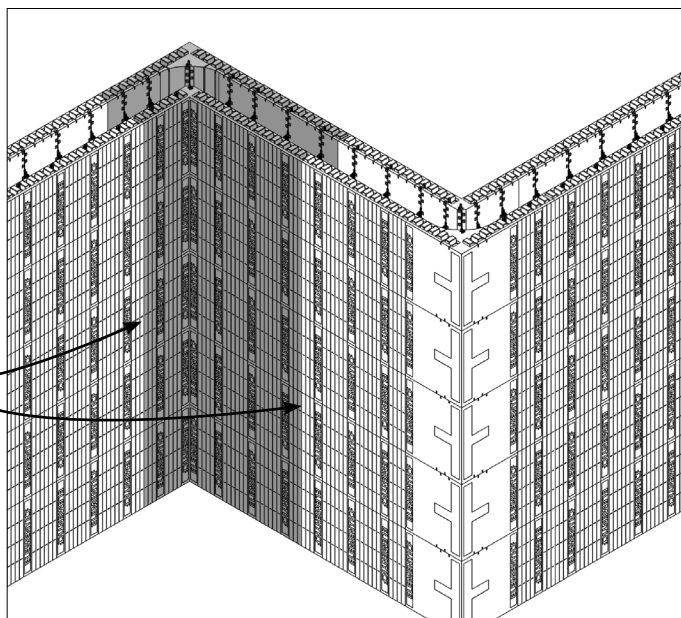


Vertical stacked joints requires additional block support.

2.12 – WALL BRACING & ALIGNMENT SYSTEM

A bracing system provides support for the wall and acts as an alignment system to keep the walls straight and plumb during concrete placement. Typically, the wall alignment system is installed on the inner side of the Element wall, and installed after placing 2 to 4 courses of Element blocks (depending on wind and other conditions).

STEP 4: Place appropriate scaffolding planks and rails according to safety regulations. For requirements on toe board and handrail configuration, consult OSHA/OHSA.

STEP 3: Insert scaffold bracket behind the top of the turnbuckle and secured at the bottom with an additional bolt.

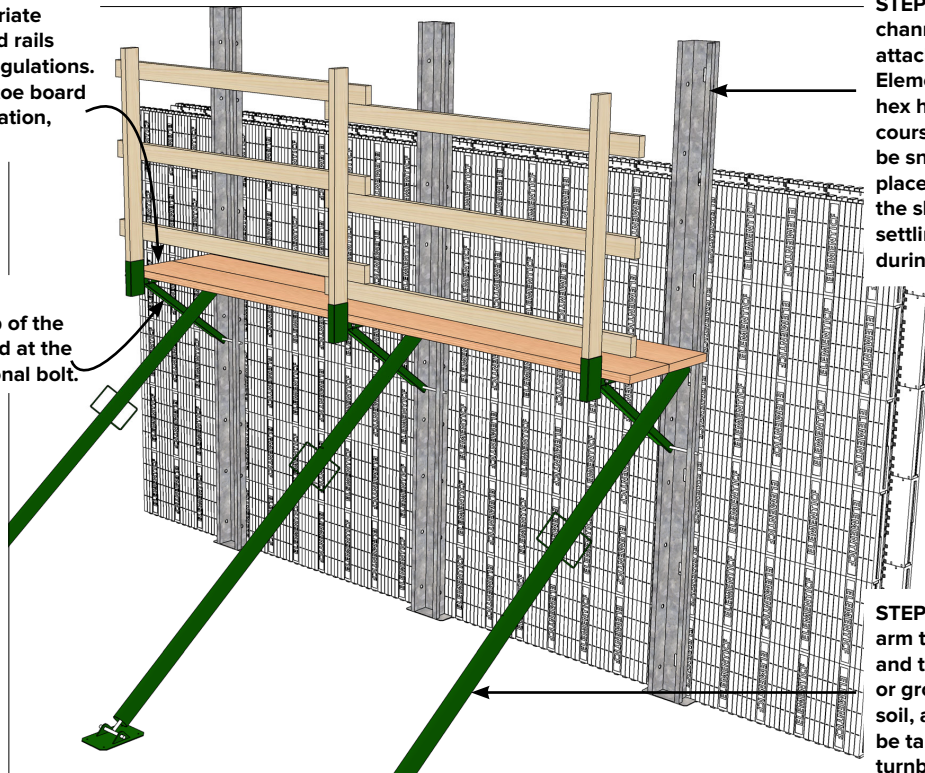

STEP 1: Upright steel channel with slots for screw attachments. Attach to the Element furring strips with a hex head #10 screw in each course. The screws should be snug but not tight. Always place screws near the top of the slots to accommodate settling at the interlock during concrete placement.

STEP 2: Attach turnbuckle arm to the upright with a bolt and then secure to the floor or ground. In light or sandy soil, additional care must be taken to secure diagonal turnbuckle.

Recommended minimum spacing and bracing locations:

- no more than 2-ft (610 mm) from each corner or wall end, and every 7-ft (2134 mm) or less thereafter, in accordance with OSHA/OHSA requirements.
- on either side of every door and window opening.
- along door and window openings that span more than 6-ft (1829 mm)

NOTE: Prior to concrete placement, make certain walls are aligned perfectly plumb, or leaning slightly inward. The wall must not lean out at all.

A string line must be used to achieve straight walls. See Section “2.8.5 – ADDITIONAL COURSES” on page 26.

Before, during and after concrete placement, the diagonal turnbuckle arm is used to adjust wall straightness to stringline.



Proprietary bracing systems are available through ICF dealers or bracing suppliers.

For tall wall bracing and alignment see Section 3.2, Tall Wall Bracing Systems.


2.13 – FLOOR CONNECTIONS

Any type of floor system can be easily integrated with Element. For any questions or assistance, please contact your local Element representative.


2.13.1 – LEDGER WITH ANCHOR BOLTS & JOIST HANGERS

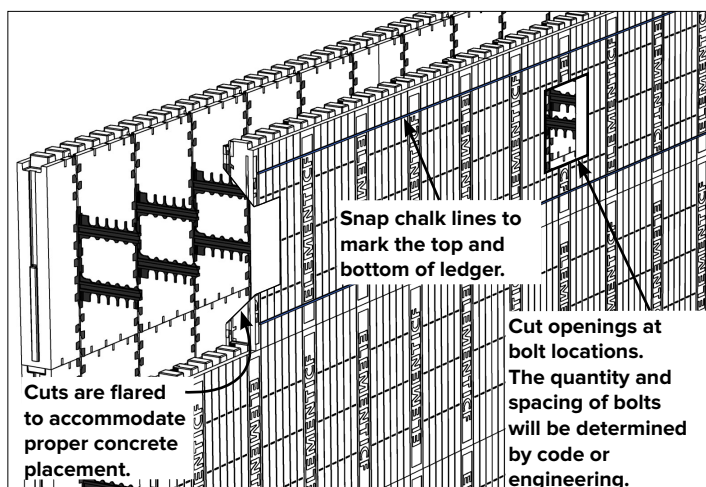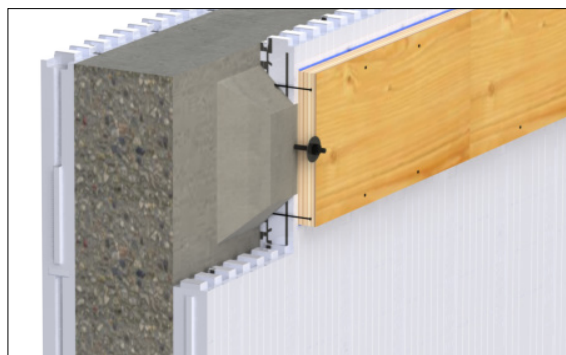


STEP 1: Snap chalk lines and cut openings for bolt locations.

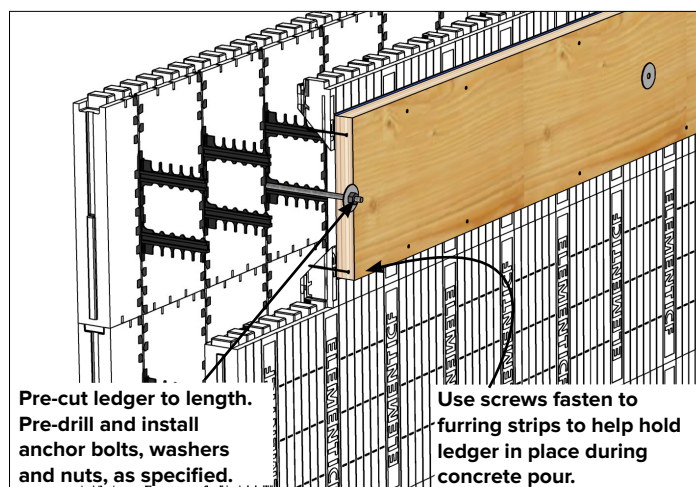

STEP 2: Install ledger with anchor bolts.

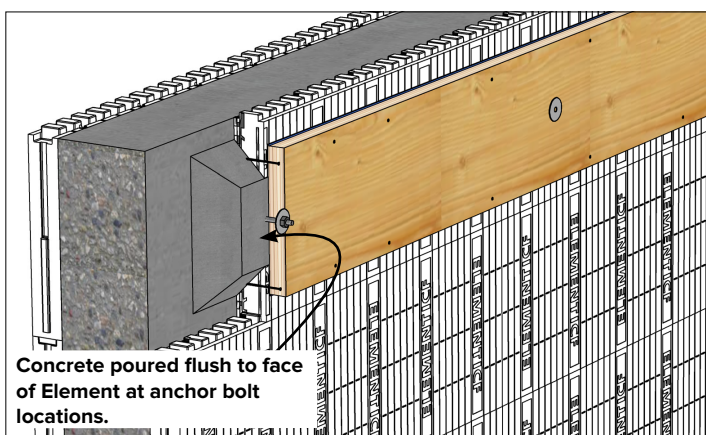

STEP 3: Place concrete.

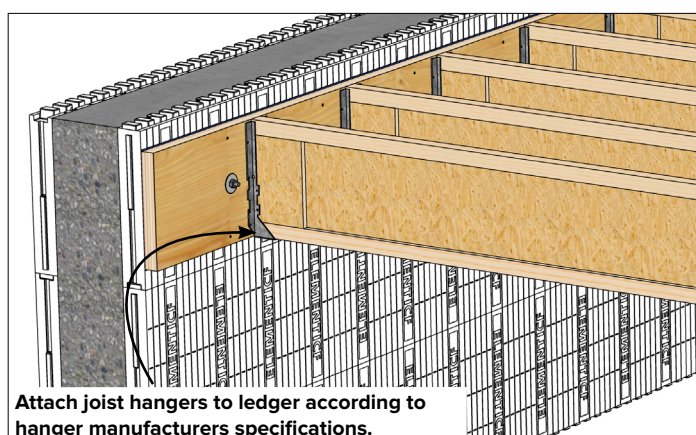




STEP 4: Install joist hangers.

2.13.2 – STEEL ANGLE IRON LEDGER


When floor spans become very long or concrete topping is applied to the floor, a wood ledger may not be adequate to support floor loads. In this case a steel angle iron can be used in place of a wood ledger. The angle iron can support much more weight and also eliminates the need for joist hangers, as the floor system sits right on the angle.

To install an angle iron ledger follow the steps in Section “2.13.1 – LEDGER WITH ANCHOR BOLTS & JOIST HANGERS” on page 72, but use pieces of plywood to temporarily hold the bolts in place. After the pour drill and bolt on the angle iron. Local steel fabricators may be able to pre-drill your angle iron.

Another alternative is to pre-fabricate an angle iron with anchor bolts or nelson studs welded directly to the angle. The entire assembly is then cast in place. This application is described below.

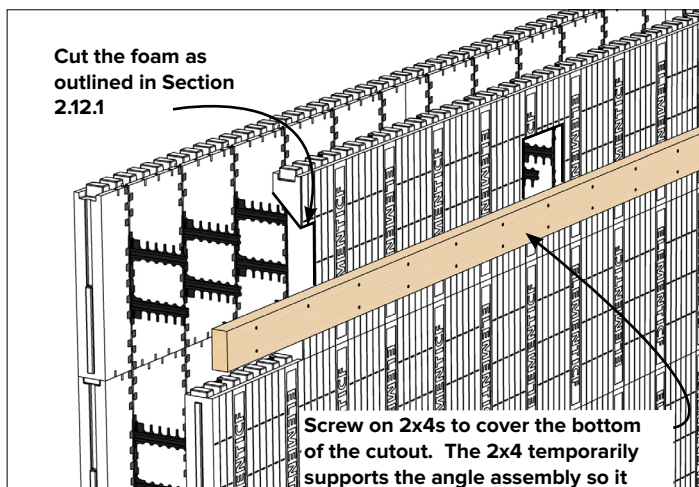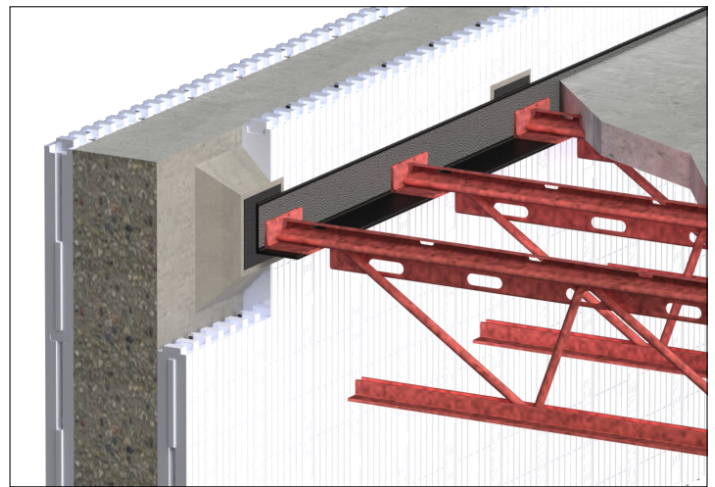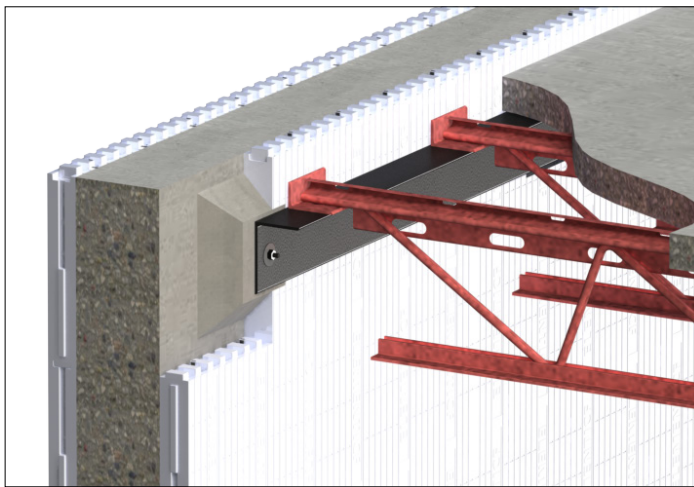


The 2x4s can be screwed to the embedded furring strips.

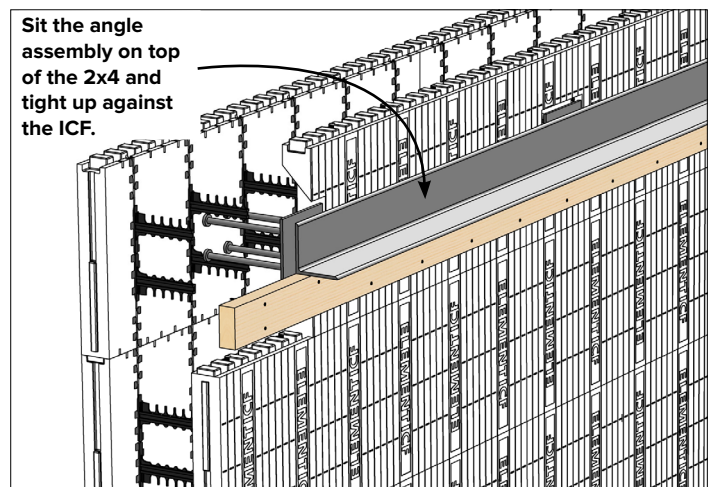


STEP 2: Install 2x4 to support angle assembly.

STEP 1: Cut foam to accommodate anchors, and install 2x4 to support angle assembly.

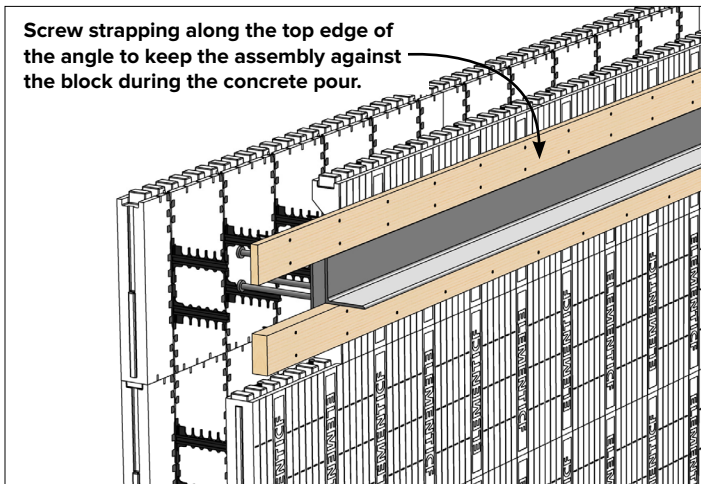


STEP 3: Install strapping to support angle assembly.

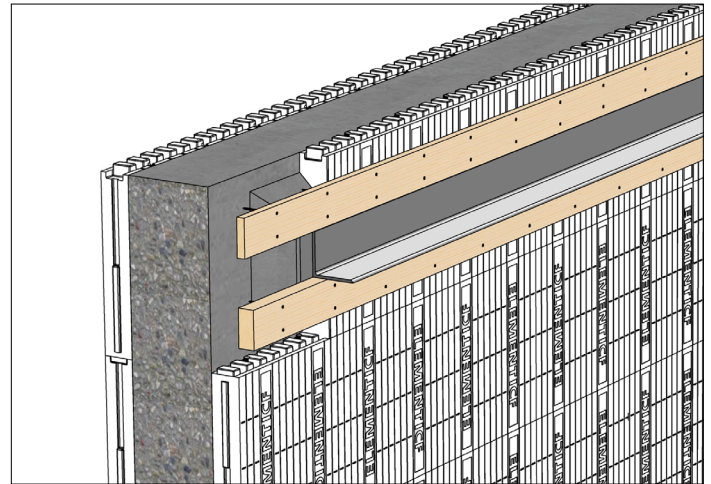

STEP 4: Pour concrete and cast the assembly in place.


NOTE: It is code in some areas for the angle assembly to be primed.

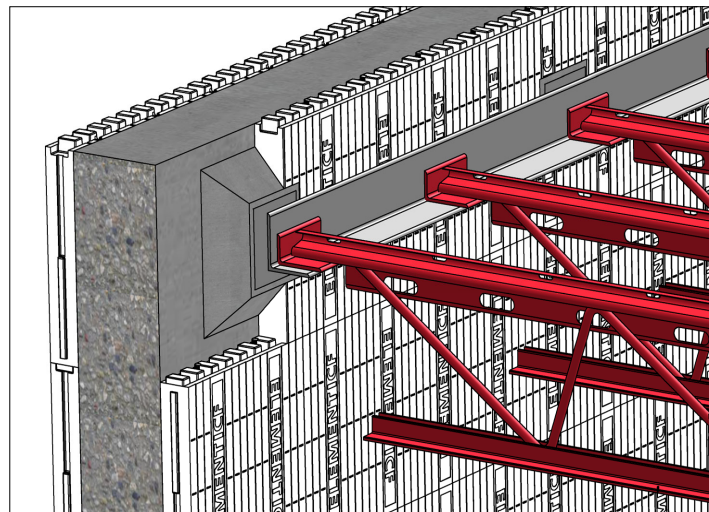


STEP 5: After some curing place floor systems on the angle and establish layout. Once layout is complete fasten the floor joist to the angle iron, as specified. You may decide to attach a nailing surface to the bottom leg of the angle iron to nail joists to.

2.13.3 – BRICK LEDGE FOR TOP & BOTTOM CHORD BEARING SYSTEMS


The Element Brick Ledge block can create a load bearing surface to support floor systems, including top and bottom chord bearing trusses or joists.

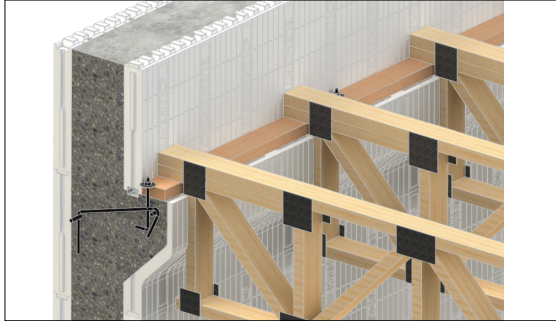


Top chord bearing on Element Brick Ledge.

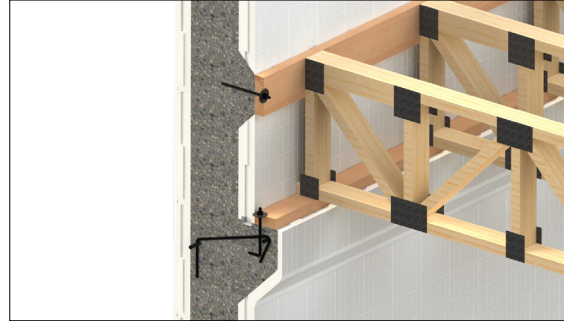


Bottom chord bearing on Element Brick Ledge.

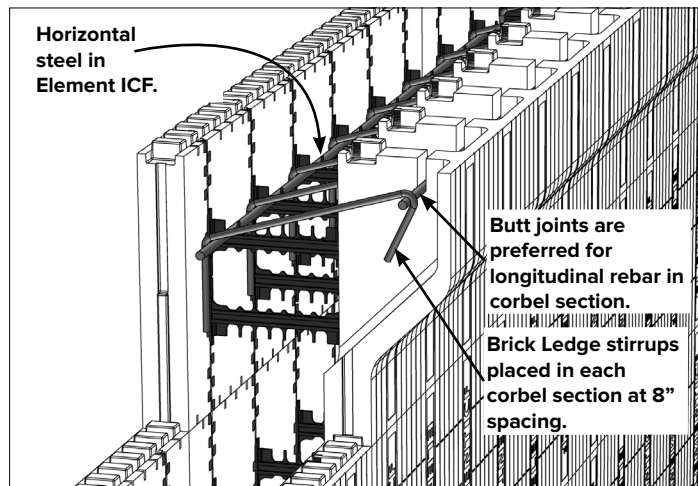

STEP 1: Install a course of Element Brick Ledge, and place required reinforcement.

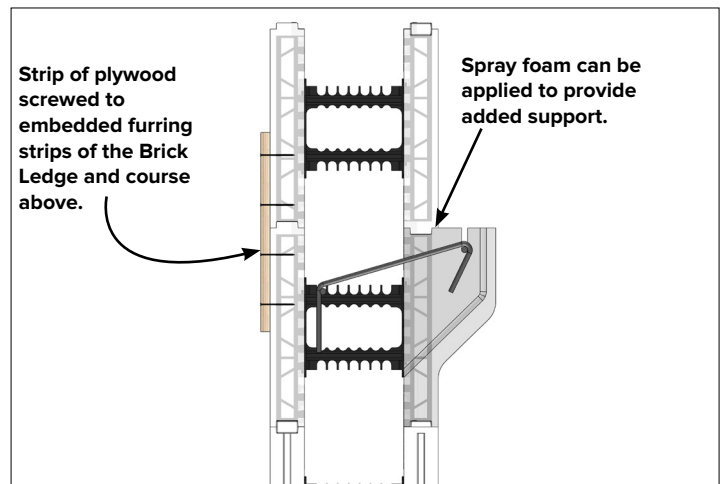

STEP 2: When installing a course above the Element Brick Ledge add additional block support to prevent tilting or separating.




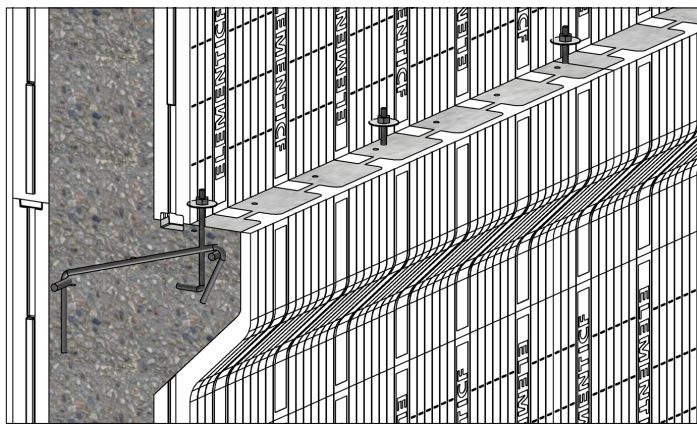


STEP 3: As concrete is placed, install embedments, as required.


NOTE: If the Element block in the course above the Brick Ledge is of a similar width than the Brick Ledge, additional form support will be required.

2.13.4 – LEDGER WITH SIMPSON BRACKET & JOIST HANGERS


The ICFVL & ICFVL-W ledger connector system from Simpson Strong-Tie is designed for mounting steel or wood ledgers on ICF walls. Complete technical data is available at www.strongtie.com

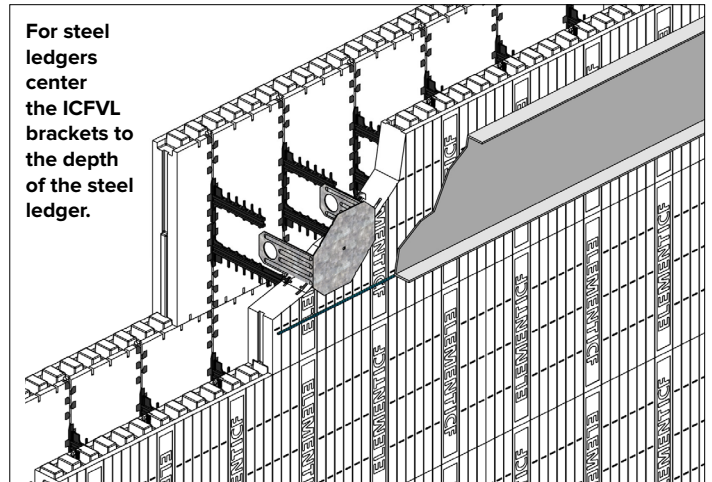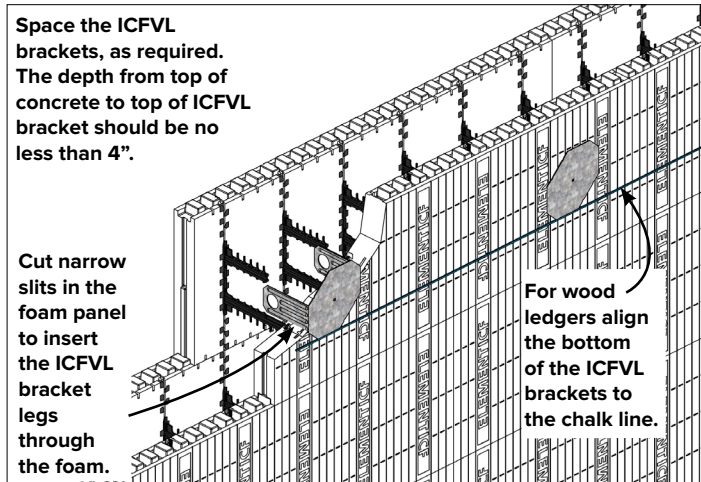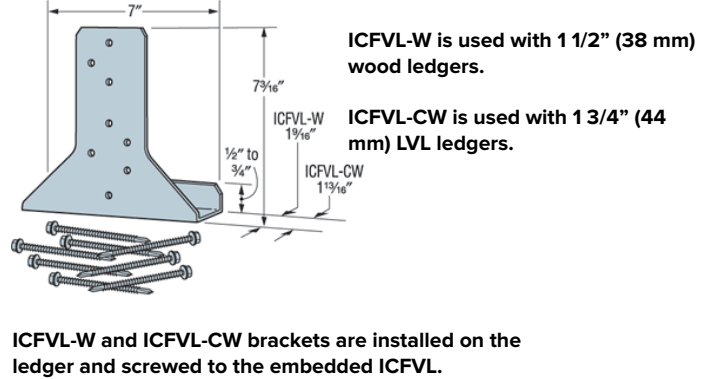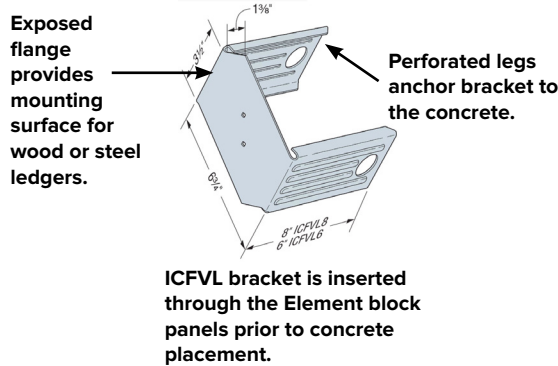

STEP 1: Snap a chalk line to mark the bottom of the ledger and insert ICFVL brackets, as specified.

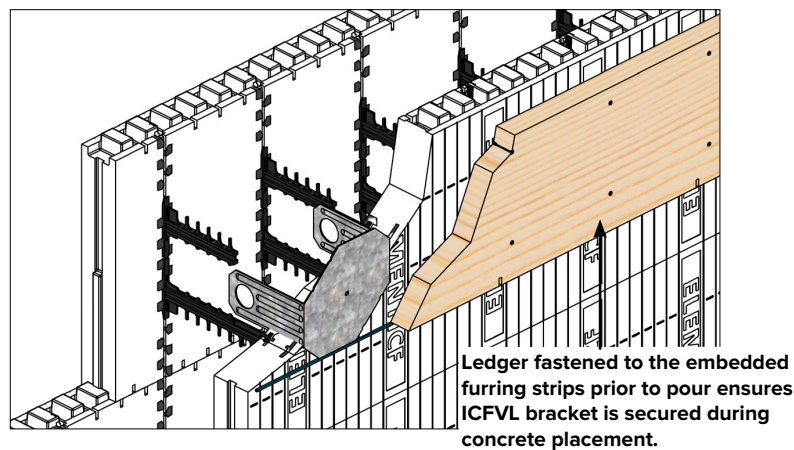

STEP 2: Secure the ICFVL brackets before placing concrete. Fastening strapping across the brackets or installing the ledgers prior to concrete placement will help ensure full concrete embedment of the ICFVL brackets.

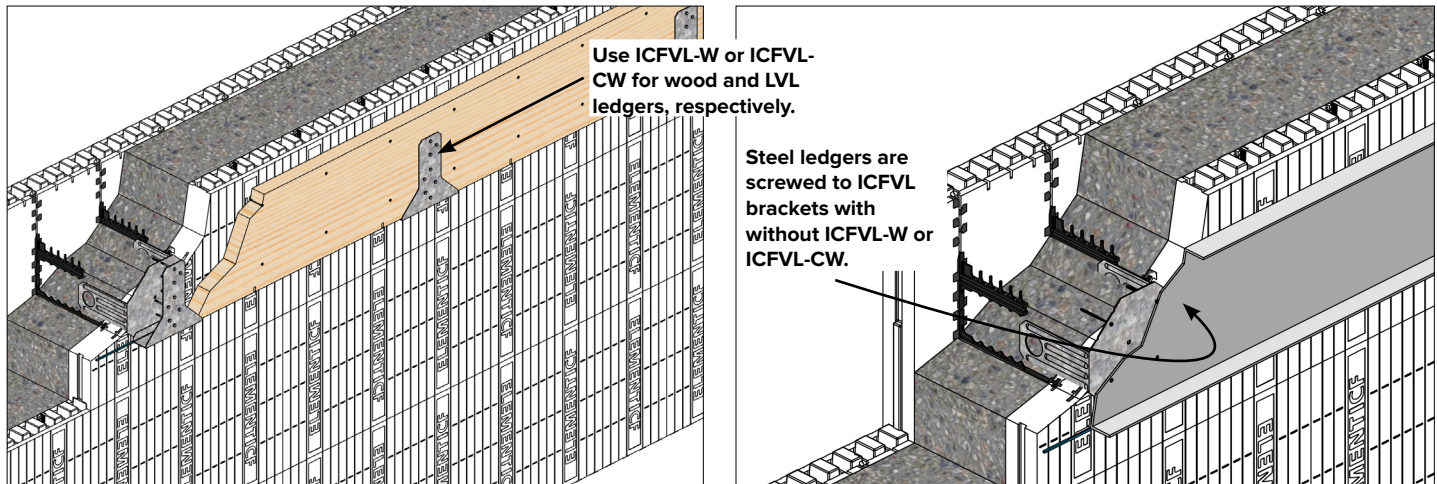

STEP 3: Place and consolidate concrete. Once set, slip the ICFVL-W or ICFVL-CW underneath the wood ledger and drive eight ICF-D3.25 screws through the ledger and into the ICFVL bracket. ICF-D3.25 screws are supplied by Simpson Strong-Tie.

For steel ledgers use four #14 x 3/4-inch (19 mm) screws to attach the ledger to the ICFVL brackets. These screws are not supplied by Simpson Strong-Tie.



STEP 4: Connect the floor joists to the ledgers, as required.


NOTE: Industry studies show that hardened fasteners can experience performance problems in wet environments. Accordingly, use this product in dry environments only. In addition, due to its corrosive nature, treated lumber should not be used with this product.

Use extra caution when installing the hangers on both sides of a wall. Consult your local Simpson Strongtie rep or contact Simpson Strongtie at (800) 999-5099 prior to installation.

Complete technical data is available at www.strongtie.com

2.13.5 – TRANSITION LEDGE

A transition ledge typically occurs at the floor level where a wider Element wall transitions to a narrower Element wall above the floor line, and usually up to the roof line.

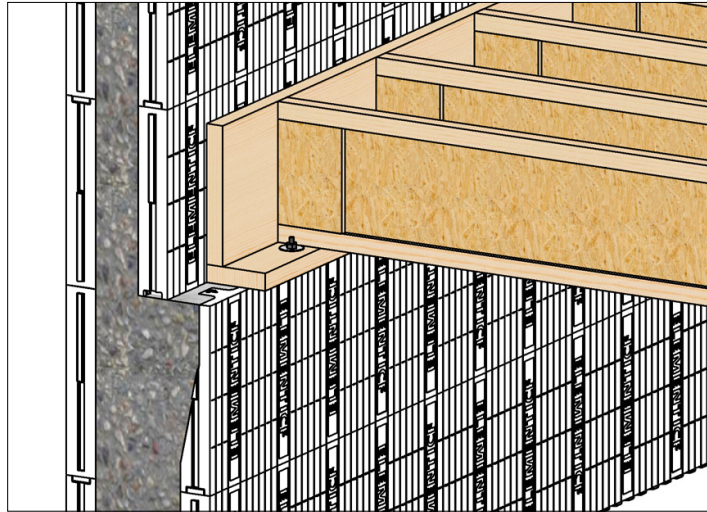


The ledge created when transitioning from a wider to a narrower wall can provide a suitable bearing length for many types of floor systems. The bearing length will vary depending on the thickness and type of Element blocks used. For a complete list of bearing lengths see CAD drawings 5.6.1.1 to 5.6.1.9 available in the [Element ICF Technical Library](#).

2.13.5.1 – TRANSITION LEDGE WITH CORNER BLOCKS

Transitioning from a wider block to a narrower block is commonly used in cases where a thinner wall becomes more economical (i.e., below grade wall to above grade wall), or to create a ledge that can support a floor or roof system, or finishes such as brick veneer.


When transitioning at corner locations using corner blocks, you might find that the interlocking knobs on the top side of the wider bottom block (bottom course) do not interlock or align with the underside of the top narrower block (top course). As a result, the top course will not sit or snap into its proper position.

This typically occurs in transitions at corner locations, and is easily resolved by following a few simple steps outlined below.


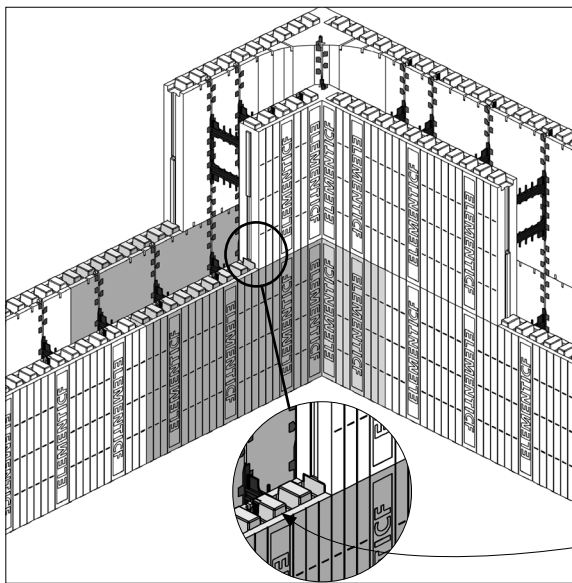


Proper alignment of top course to bottom course.
Interlock aligns with underside of top course.

Interlocks

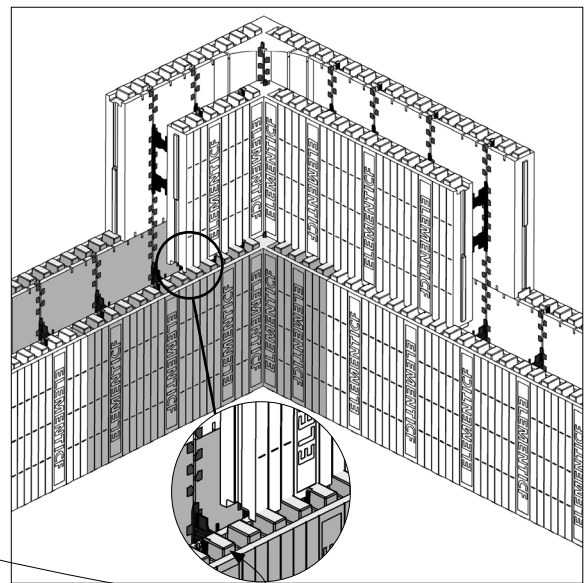


Improper alignment of top course to bottom course.
Interlock does not align with underside of top course.

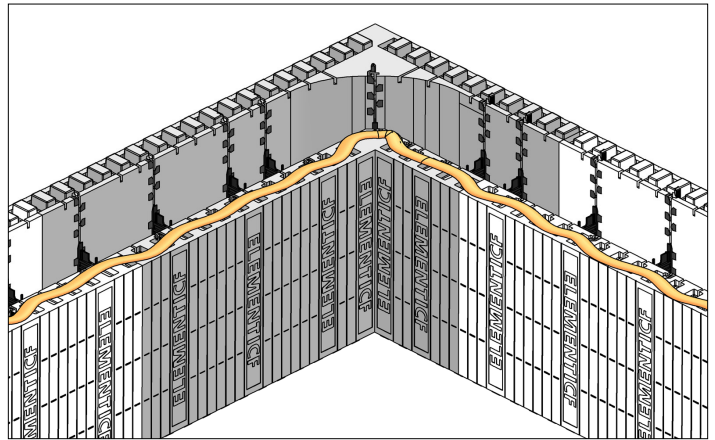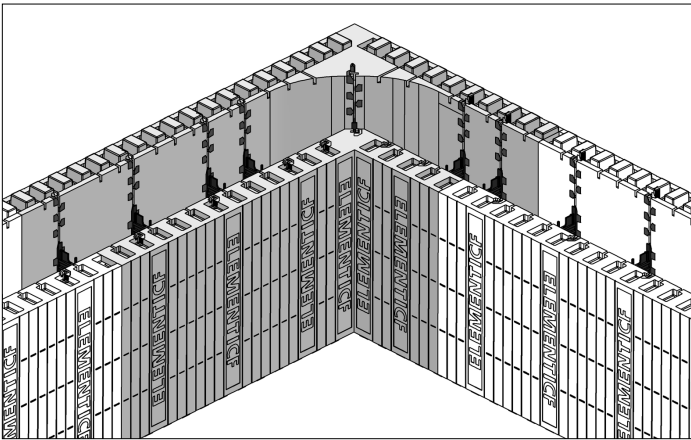

STEP 1: Cut the interlocks off the wider corner blocks (it may be necessary to cut the interlocks off the rest of the blocks on the bottom course to ensure the top course can be placed flush on top of the previous course).
As an alternative, Taper Top blocks for the bottom course can be used. The Taper Tops provide more flexibility since they can be adjusted to ensure the interlocks align with the top course.


STEP 2: Apply foam adhesive prior to installing the top course.

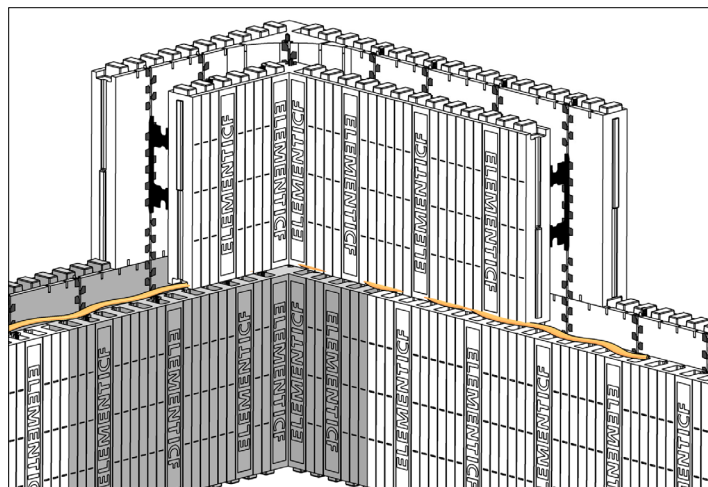



STEP 3: Install the top course beginning with the corner block and continuing around the building perimeter.

2.13.6 – TAPER TOP WITH SILL PLATE


The Taper Top block creates a greater bearing surface at the top of Element walls.

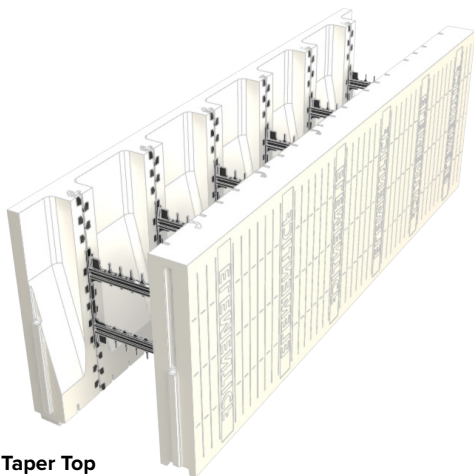


Element Taper Top

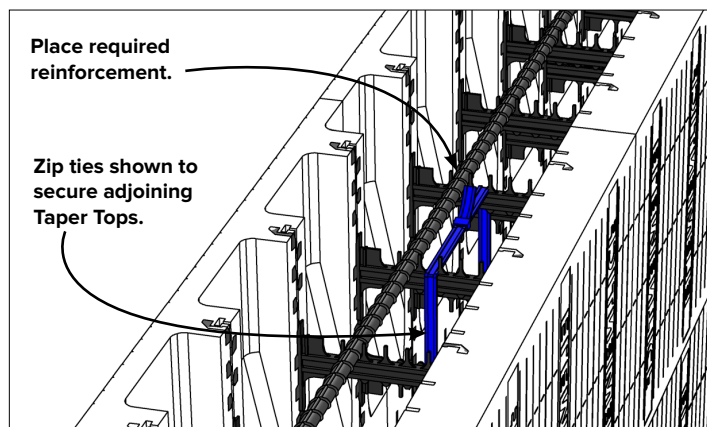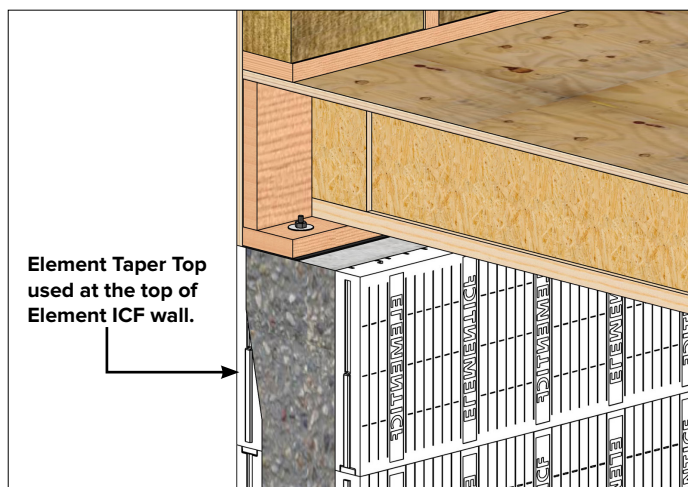

STEP 1: Taper Top blocks need to be foamed down or otherwise secured to the course below.

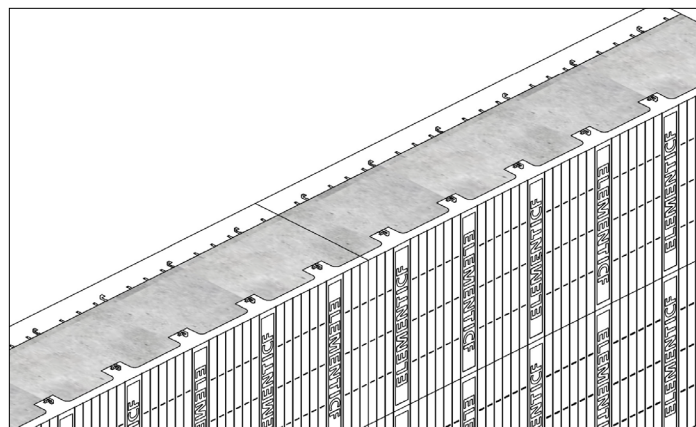

STEP 2: Trowel concrete flush with top of blocks, or inset as required. Be sure to check for level.

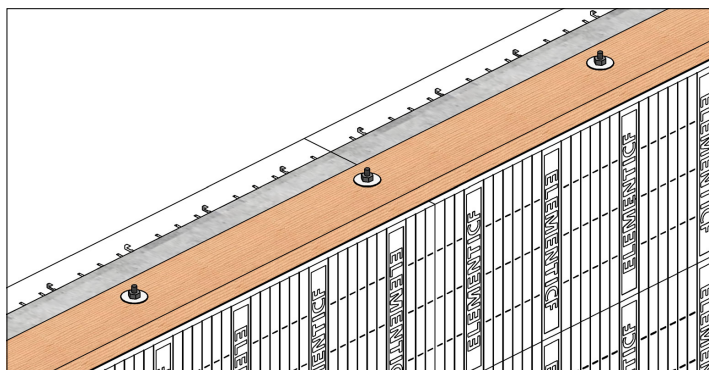

STEP 3: Insert embedments as required.

2.13.7 – CONCRETE FLOOR SYSTEMS

Building with Element will allow you to explore many concrete floor system options. Our walls are stronger and can support added weight that wood or steel frame buildings may not. Concrete floor systems are very popular in multi-residential buildings where the transmission of sound and fire are a concern. They are also growing in popularity in single-family residential applications.


2.13.7.1 – PRECAST CONCRETE FLOORS

Pre-cast floor systems are poured at the factory and shipped to site then craned in place. They are usually tensioned with steel cables cast in the concrete to provide maximum strength. Pre-cast floor are fast and can have very long clear spans.

Typically the Element wall is constructed to the desired height and the pre-cast planks sit directly on the cured concrete. The planks, typically 4-ft (1220 mm) wide, are craned in place and the grooves between planks are grouted together. A 2-inch (52 mm) topping is poured over the deck to provide a smooth and level finish.

The reinforcing of the wall is tied to the grouted grooves to secure the floor in place. The vertical reinforcing of the wall is extended past the planks to secure future levels of Element.

See floor manufacturer for specific installation requirements and details.

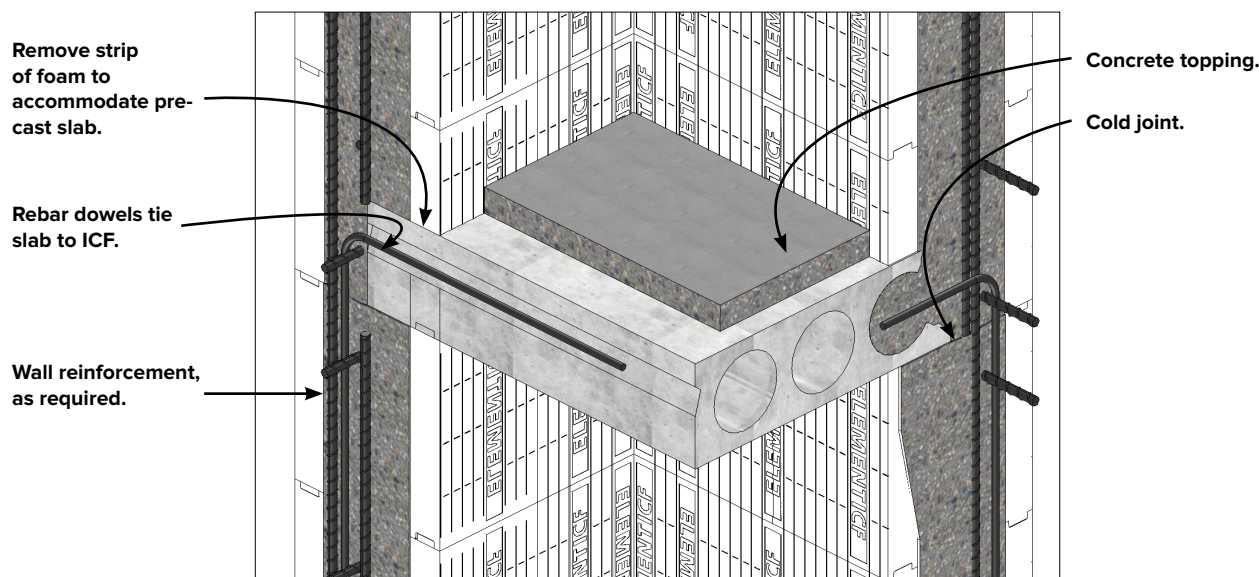


Element ICF with precast slab (hollow core slab example).

2.13.7.2 – COMPOSITE FLOOR SYSTEMS


Composite floors are a combination of steel and concrete that is bonded together to create a very strong floor allowing for longer spans and wider joist spacings.

There are a number of brands designed for ICFs including Hambro, iSpanEcospan and Total Joist. Consult your floor manufacturer and your local design engineer for more information.

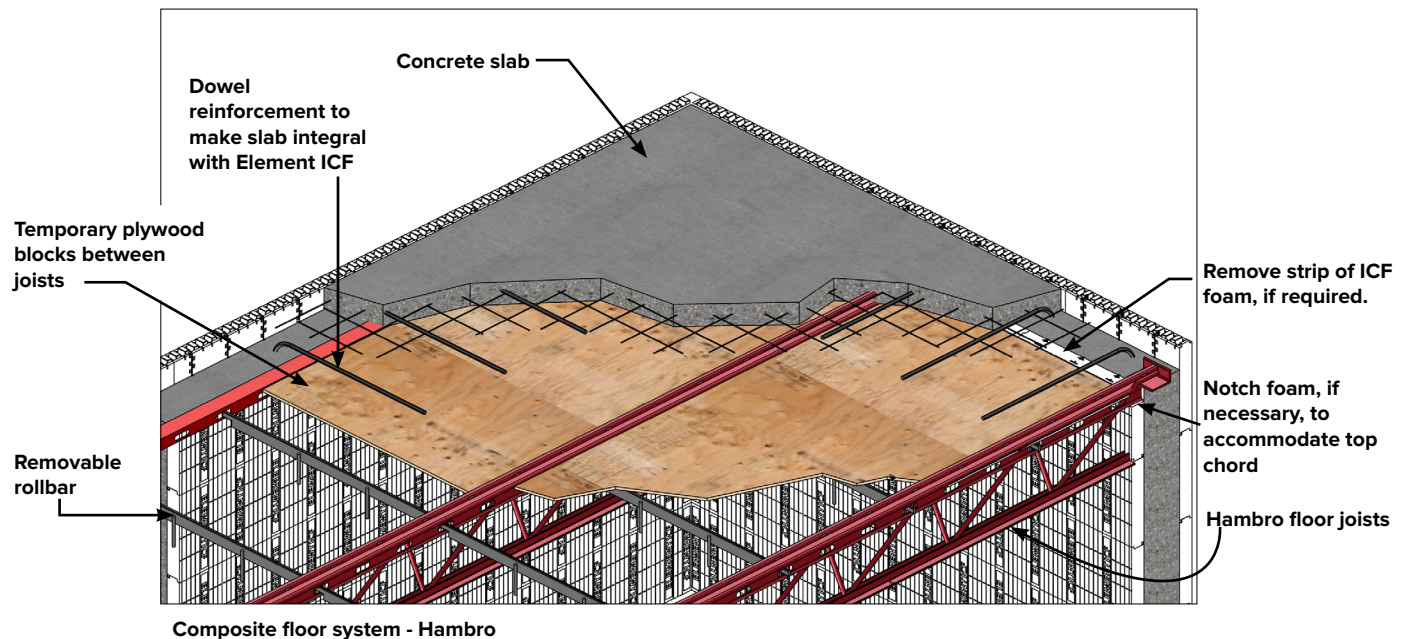


2.14 – ROOF CONNECTIONS

Roof connections can be attached to the Element wall in a variety of ways. Several factors can affect which method to use such as area of the country and wind conditions. There are a number of tie-down options made by Simpson Strong-Tie, including brands designed for ICFs, such as Burmon tie-down systems.

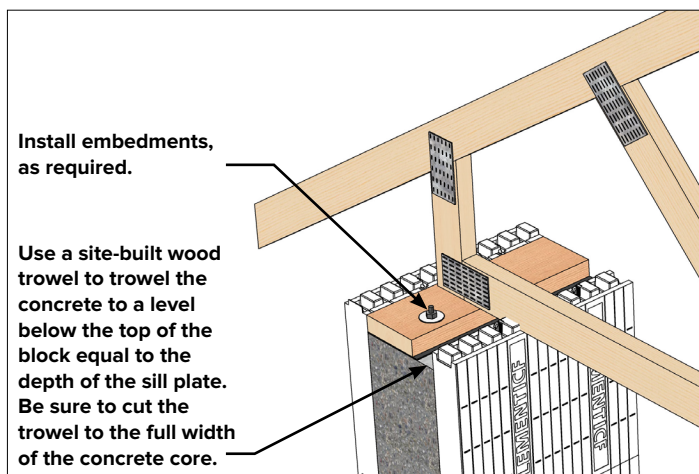


INSET SILL PLATE

This method of sill plate attachment is the most energy efficient. The Element foam on each side provides an excellent thermal barrier.

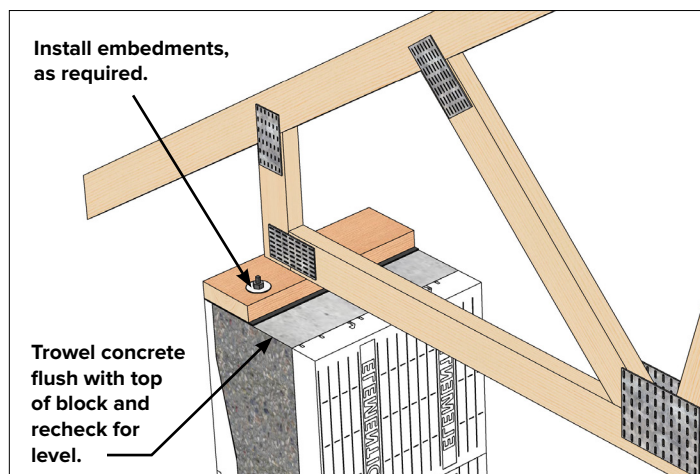


TOP MOUNTED SILL PLATE

This method is typically used when additional wall height is required.

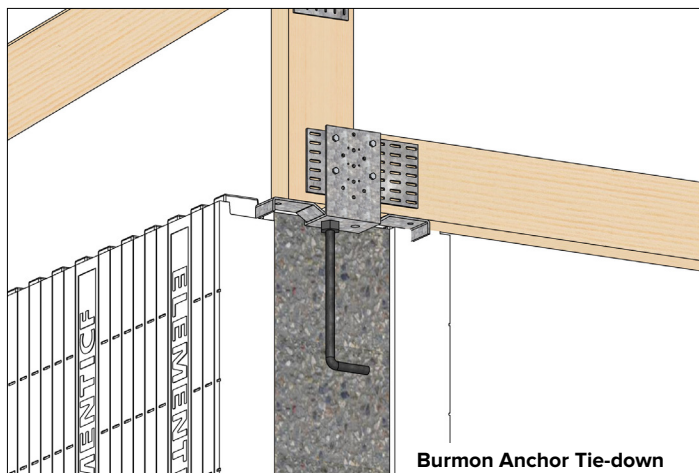

TIE-DOWN TO CONCRETE

This method anchors the roof truss to the concrete.

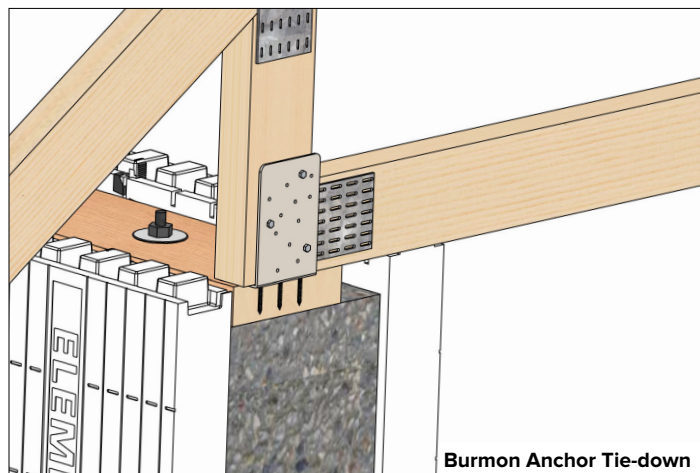

TIE-DOWN TO SILL PLATE


This method anchors the roof truss to the sill plate. (Burmon Anchor Tie-down)

2.15 – SERVICE PENETRATIONS


Identify and size all service and utility penetrations. Install all appropriate and properly sized sleeves where required, remembering that lightweight sleeves can be crushed during concrete placement.

List of possible service penetrations

- Dryer vent
- Water heater vent
- Water
- Sewer
- Electrical main service
- Gas line
- A/C line
- Furnace vent
- Air Exchange/HRV
- Central vacuum
- Ducting
- Bathroom vent
- Kitchen appliance venting
- Fireplace rough opening and vent
- Pet door

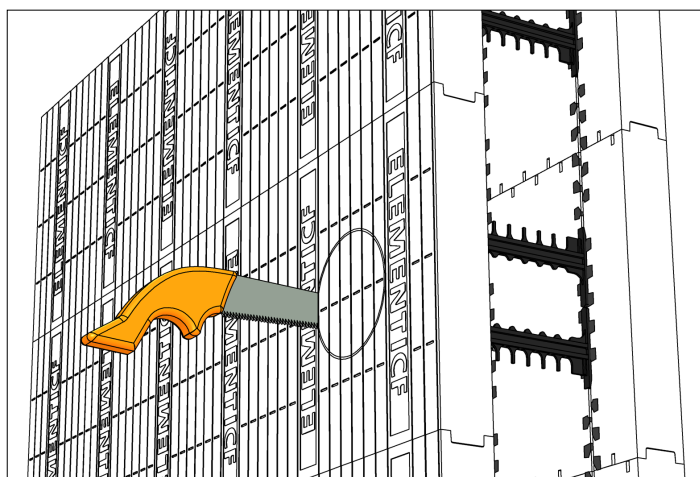

Cut appropriate sized holes for penetrations.

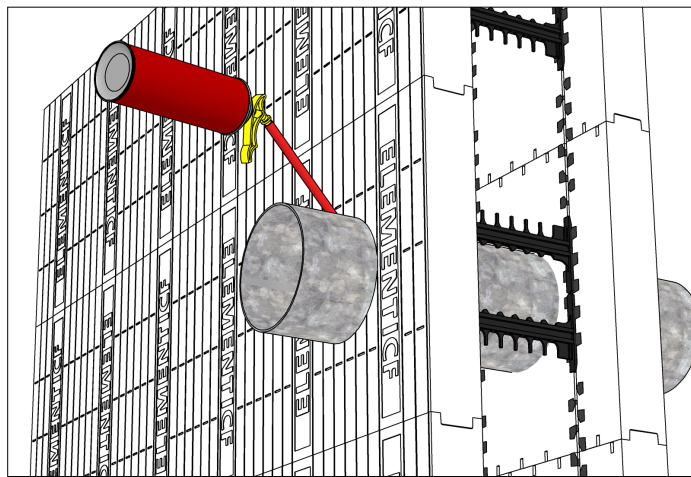

Install all required service penetrations through the ICF prior to concrete placement, and secure with spray foam.

2.16 – CONCRETE PLACEMENT

2.16.1 – PRE-PLACEMENT CHECKLIST

DATE:
FOREMAN:
JOB:

Prior to placing concrete in Element insulated concrete blocks, be certain to mark off each item on the checklist provided in this section.

- ___ 1. String line in place around the top of entire perimeter?
- ___ 2. Walls straight and plumb (not leaning out)?
- ___ 3. Top course foamed or tied down with zip ties or Element Hooks end to end to maintain dimensions?
- ___ 4. Additional block support on all corners, if required?
- ___ 5. Have T-walls been foamed and supported?
- ___ 6. Alignment system screws installed at every course?
- ___ 7. Scaffold planking properly secured?
- ___ 8. All handrails and toe boards installed?
- ___ 9. All bucks cross braced?
- ___ 10. All bucks secured to wall?
- ___ 11. All buck concrete anchors installed?
- ___ 12. All horizontal and vertical rebar in place?
- ___ 13. All lintel reinforcing in place?
- ___ 14. All penetrations installed?
- ___ 15. All beam pockets in place?
- ___ 16. All floor embedments installed?
- ___ 17. Are anchor bolts and hold-downs on site?
- ___ 18. Has cavity of wall been checked, and foreign material removed?
- ___ 19. Plywood, screw gun, and saw on site?
- ___ 20. Interlock protected by tape, or other covering?
- ___ 21. Proper concrete mix and slump ordered?
- ___ 22. Concrete vibrator on site?
- ___ 23. Pump equipped with reducer or 2 1/2-inch (64 mm) trimmer hose available?

2.16.2 – MIX DESIGN

Minimum compressive concrete strength is typically 3,000 psi (20MPa) at 28 days. However, this will depend on the structure and loading conditions. For seismic areas mix design should be confirmed with local codes or by an engineer.

The following maximum aggregate sizes are recommended for use in Element walls:

	Block Cavity Size, inch (mm)				
	4 (102)	6 (152)	8 (203)	10 (254)	12* (305)
Max. Aggregate Size, inch (mm)	3/8 (9.5)	3/8 (9.5) to 1/2 (13)	3/4 (19)	3/4 (19)	3/4 (19)

Always consult your local ready mix companies for appropriate concrete mix design.

2.16.3 – BEST PRACTICES


The most important stage of a successful Element project is the concrete placement. Extra workers at this stage are important - be certain to have enough on hand during the pour to safely handle placement, consolidation, alignment, embedments, and cleanup.

An experience crew ensures the concrete is properly placed and consolidated. The following are recommended practices and considerations when placing concrete.


- Concrete slump should be 5-inch (127 mm) to 6-inches (152 mm) for best results.
- Use an internal vibrator with a head size of 3/4-inch (19 mm) to 1-inch (25 mm) and maximum 1 hp motor. Do not use a vibrator with a head larger than 1-inch (25 mm).
- Appropriate internal vibration assures the strongest walls possible and is especially important for below grade application where the greatest loads occur.
- The rule of thumb for internal vibration is fast in and slow out, always moving, with a withdrawal rate of approximately 3-inch (76 mm) per second. Other methods of placement include conveyor truck, crane and bucket, and directly off the ready mix truck.
- Lift height is determined by many factors, such as air temperature, concrete temperature, slump, etc. In general, lift heights should not exceed 4ft (1.220 m) per hour.
- When placing concrete below freezing or at temperatures above 100° F (38° C), it's important to protect all exposed concrete with insulation.
- When placing concrete in 4-inch (102 mm) blocks, it is recommended that the pump truck be fitted with a 2.5-inch (76 mm) flexible hose end.

2.16.4 – PLACING CONCRETE

Once the pre-placement checklist is finished, adhere to the following guidelines during the concrete placement process.

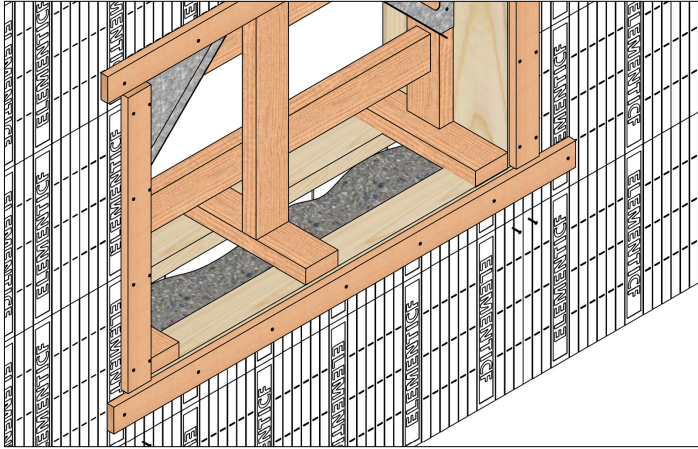


STEP 1: Begin concrete placement under openings, filling those areas and consolidating.

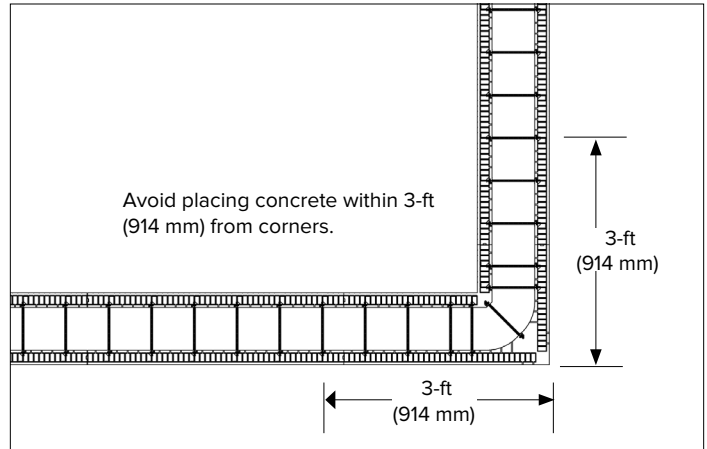


STEP 2: Beginning no closer than 3-ft (914 mm) from a corner, start filling the wall from the top, allowing the concrete to flow gently toward the corner. Then fill in that corner from the opposite side using the same technique.

STEP 3: Continue placing concrete around entire wall in appropriately sized lifts, using the same technique at each corner to minimize fluid pressure.

STEP 4: Vibrate the concrete as it is being placed to ensure proper consolidation.

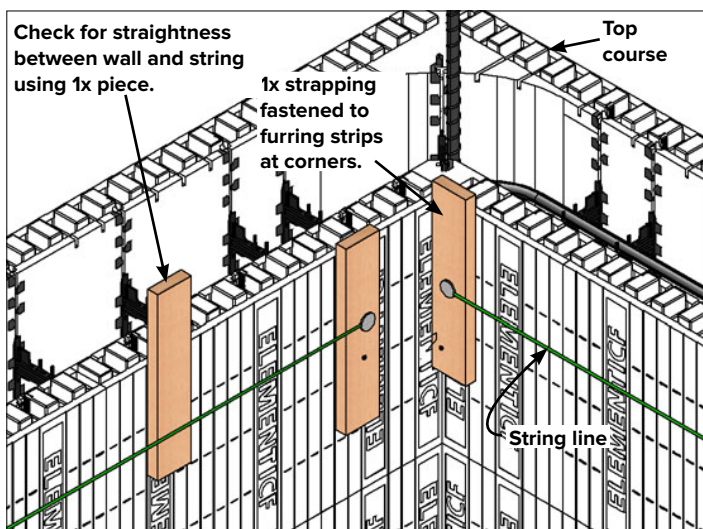

STEP 5: Check and adjust wall alignment using string lines and turnbuckles.

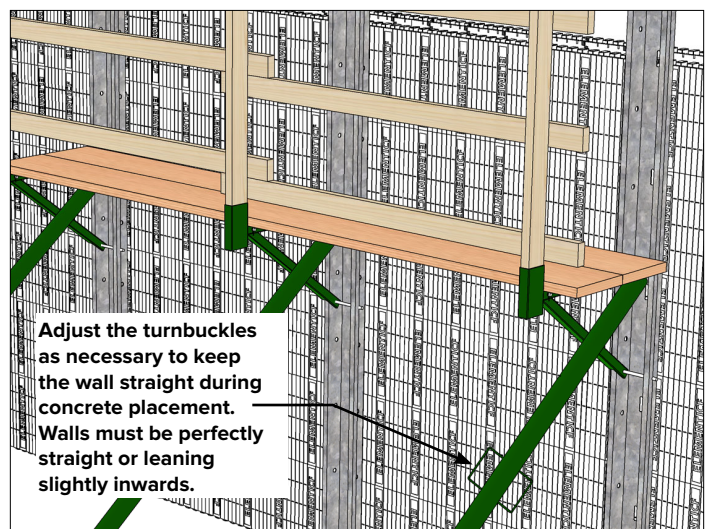

STEP 6: Return to starting location and begin the next lift. Follow all the techniques established above.

2.16.5 – POST-PLACEMENT CHECKLIST

DATE:
FOREMAN:
JOB:


After placing concrete in Element insulated concrete blocks, be certain to mark off each item on the checklist provided in this section.

- ____ 1. Has consolidation been completed?
- ____ 2. Are walls straightened to string line?
- ____ 3. In extreme temperatures, has exposed concrete been protected?
- ____ 4. Have all anchors and embeds been installed?
- ____ 5. Has spilled concrete been disposed of?
- ____ 6. Has final check for straight and plumb been done?

2.17 – ELECTRICAL INSTALLATIONS

Electrical and plumbing installation are typically performed after concrete placement. The exception to this rule is the placement of conduit that penetrates the wall, which must be performed before concrete placement.

Installing electrical wiring and boxes is accomplished by creating channels in the EPS foam. When installed in Element walls directly against the concrete, electrical boxes will extend 1/2-inch (13 mm) beyond the foam to match the thickness of 1/2-inch (13 mm) drywall.

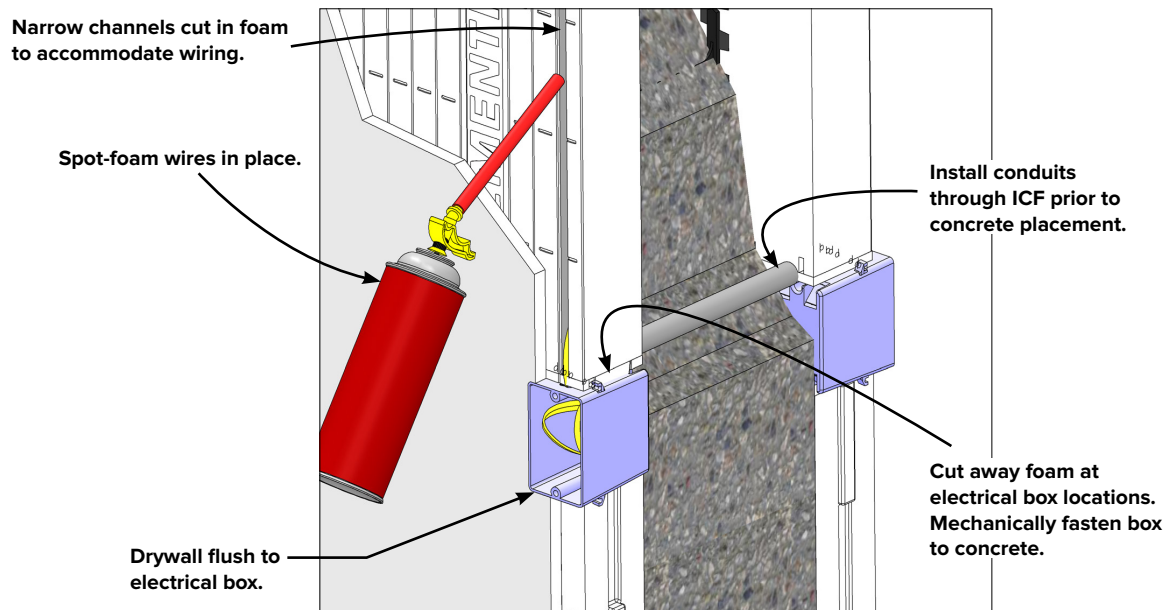


Various tools can be used to create the channels and spaces for wiring and boxes:

- Electrical chainsaw with an adjustable roller depth stop
- Hot knife
- Circular saw with a masonry blade

Make the wiring channels narrow so there will be a friction fit with the wiring. The wiring needs to remain embedded well into the foam to meet local electrical codes. Foam adhesive can be spot-applied into the channel to help hold the wiring in place.

Both Preformed and Site-assembled Element blocks are engineered to create wire chases between courses every 16-inches (406 mm) on center vertically, eliminating the need to cut the embedded furring strips.

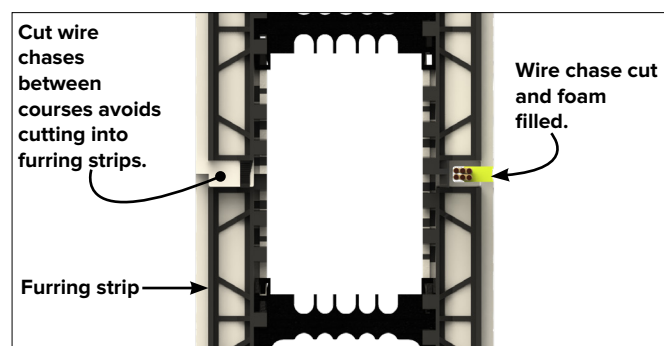


2.18 – PLUMBING INSTALLATIONS

In most cases, buildings are designed so plumbing pipes are not carried through the Element walls, except for utility entry and exit points.

However, in some cases it may be required to embed pipe in the EPS. For example, a kitchen vent tube may need to be installed vertically in the EPS foam. Pipes embedded in the foam cannot exceed 1-1/2-inch (38 mm) in diameter. Fittings embedded in the foam cannot exceed 2-1/2-inch (64 mm) diameter.

An external faucet will require the installation of a hose sleeve through the wall prior to concrete placement. This will permit replacement of the faucet or pipe should it ever be necessary.

If connecting to existing sewer lines, establish the location of the required opening and ensure clearances, since this is difficult to change.

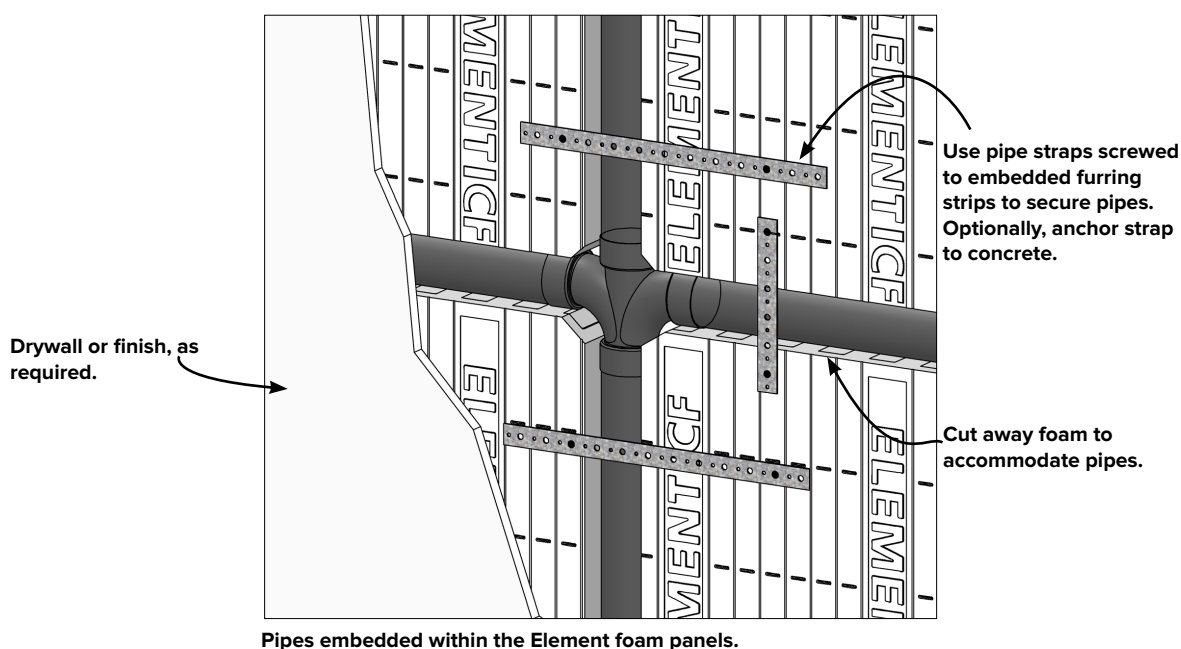


2.19 – INTERIOR & EXTERIOR FINISHES

2.19.1 – VAPOR & AIR BARRIERS

The Element wall assembly has no need for an additional vapor barrier. The solid concrete core covered with the low permeance EPS foam insulation on the inside wall face keeps water vapor from penetrating the wall.

The fact that the inner face of EPS foam maintains a similar temperature as the inside air of the building and that an Element wall has no cavity means that no condensation can occur in an Element wall assembly.

The Element wall assembly has no need for an air barrier (building wrap) layer as the solid concrete core and low permeance EPS foam insulation on the outside wall face keeps air and moisture from penetrating the wall.

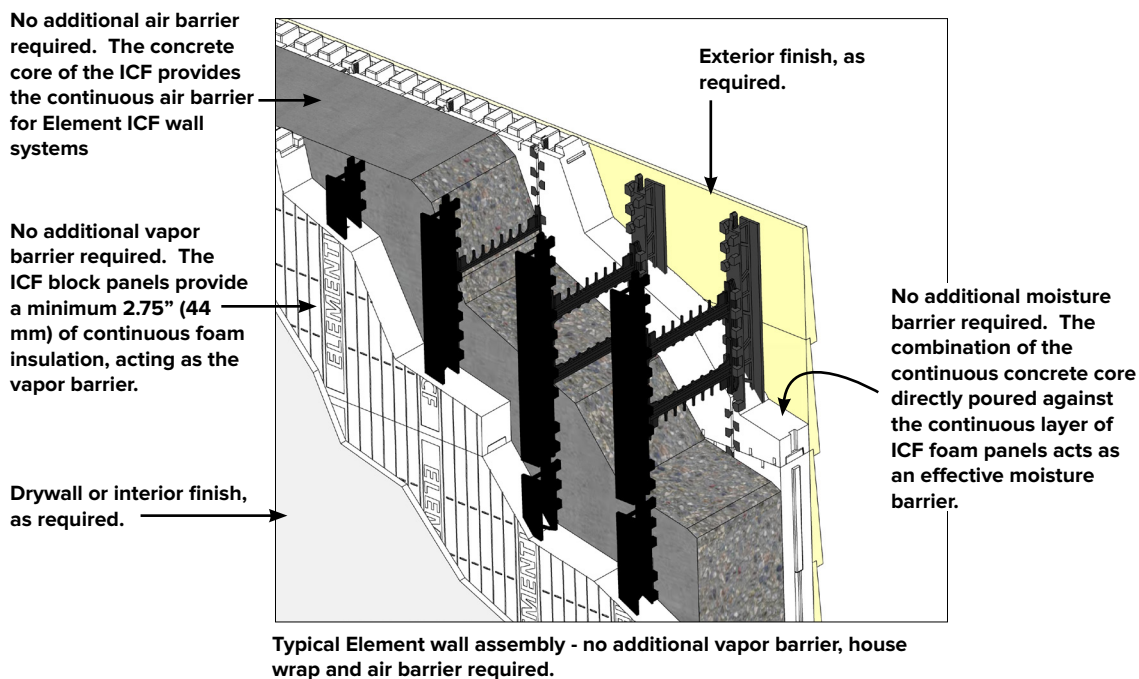

2.19.2 – INTERIOR DRYWALL


Drywall should be installed in the same manner on an Element wall as on a stud wall, with the following time-saving exceptions:

- All furring strips (studs) are on 8-inch (203 mm) centers from floor to ceiling for easy attachment of any type of interior wall finish.
- The butt joints of the drywall do not need to fall on webs (studs) as the foam provides solid backing wherever the joints fall. However, the edge of drywall panels should not exceed more than 4-inch (102 mm) from webs.
- A foam-compatible adhesive can be used to effectively fasten the drywall to the Element wall along with screws. Always make sure to verify the local code for types and spacing for drywall fasteners. Typically, adhesive alone is not allowed as a fastener for drywall, but again check with local building codes.

Many local building codes require the application of 1/2-inch (13 mm) drywall or other suitable thermal barrier in any living space even though the EPS foam has a fire retardant component. Always verify local building code requirements.

Non-habitable spaces such as crawl spaces, attics, and other types of hidden areas typically do not require a thermal barrier (drywall).

Embedded furring strips are fixed at each corner of the Element 90° corner blocks for solid drywall fastening at all corners.

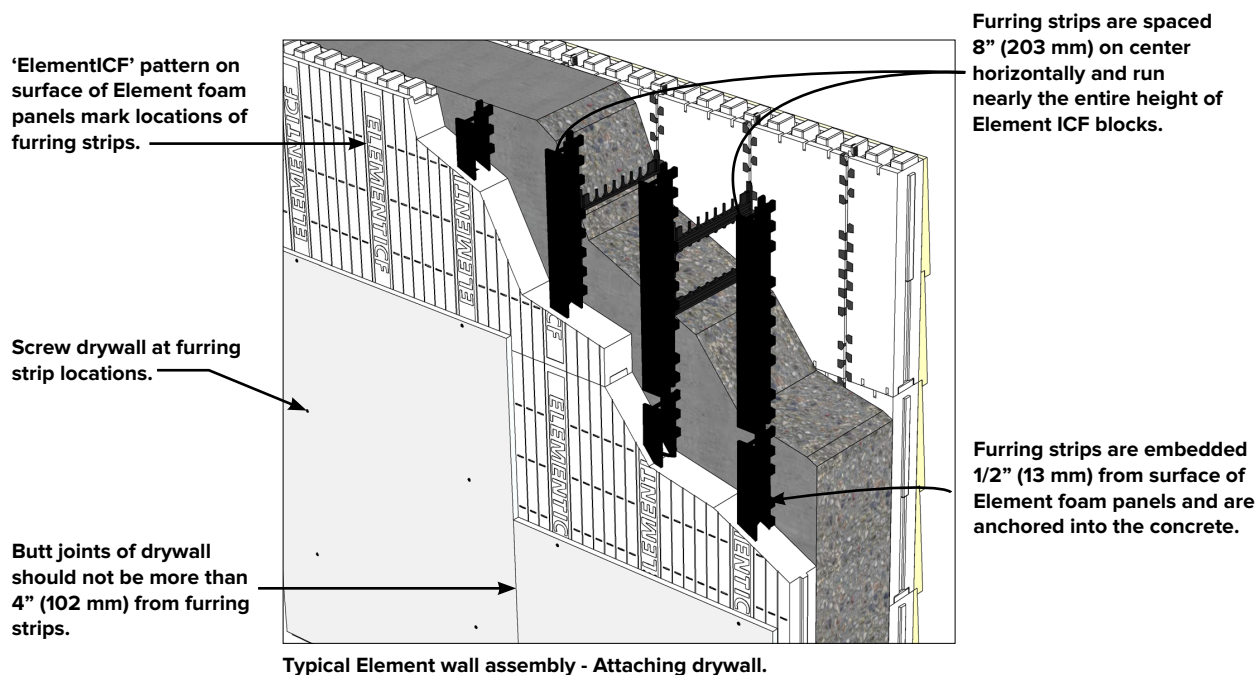

NOTE: Minimum fastener lengths: When fastening backing, brackets, or fixtures to the Element furring strips, confirm the fastener meets the minimum length in Appendix A.2.

2.19.3 – EXTERIOR SIDING

Siding material of some kind must be installed over the EPS foam to protect it from the UV rays of the sun. Foam left exposed to the sun will slowly develop a dusty surface.

NOTE: When using Element Chrome Series care should be taken to protect exposed foam surfaces from reflected sunlight and prolonged solar exposure until wall cladding or finish material is applied. Shade exposed foam areas, or remove sources of reflective surfaces, where heat build up onto exposed foam might occur. For more information refer to BASF Technical Leaflet N-4 Neopor, “Recommendations for packaging, transporting, storing and installing building insulation products made from Neopor EPS foam.” (The BASF Technical Leaflet is attached to every bundle of Element Chrome blocks delivered to a job site).


Metal and vinyl siding can be installed directly over the top of the EPS.

Although air guns can be used, the use of screw guns is recommended when attaching exterior siding. Always follow manufacturer’s recommendations and local codes to determine the size and spacing of fasteners for all siding products.

Any type of siding that is used on a typical wood-framed building can be used on an Element building.

The siding channel stock around doors and windows can be fastened to whatever type of buck material was chosen, in a similar fashion as wood framed building.

Furring strips are spaced 8" (203 mm) on center horizontally and run nearly the entire height of Element ICF blocks.

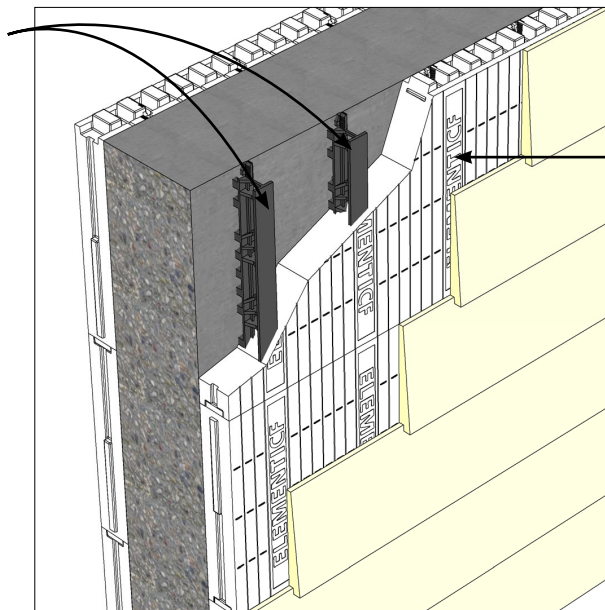


Typical Element wall assembly with siding.

‘ElementICF’ pattern on surface of Element foam panels mark locations of furring strips.
Fasten siding at furring strip locations.


2.19.4 – STEEL PANEL SIDING

Steel panel siding can be applied vertically to an Element wall when the style of the panel matches the Element web spacing at 8-inch (203 mm) on center increments for fastening purposes.

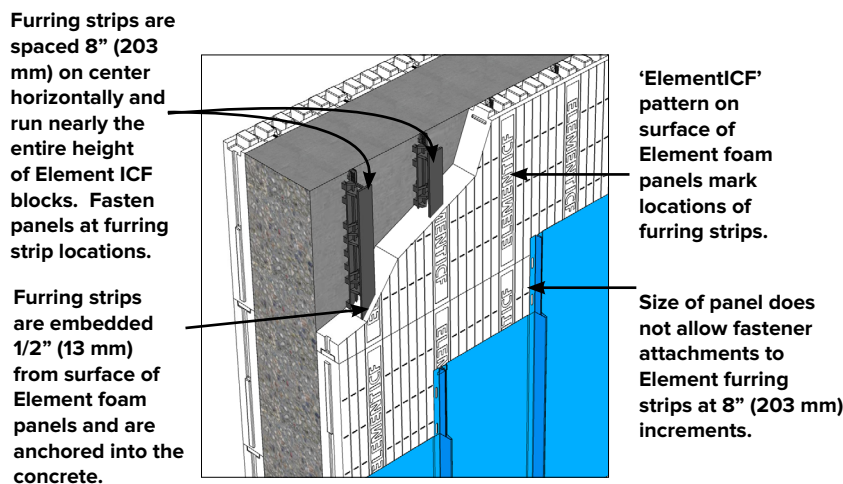


Typical Element WALL assembly - Metal Panel Siding.

When a panel siding is chosen that doesn't fit with 8-inch (203 mm) increment for fastening, two different methods are available:

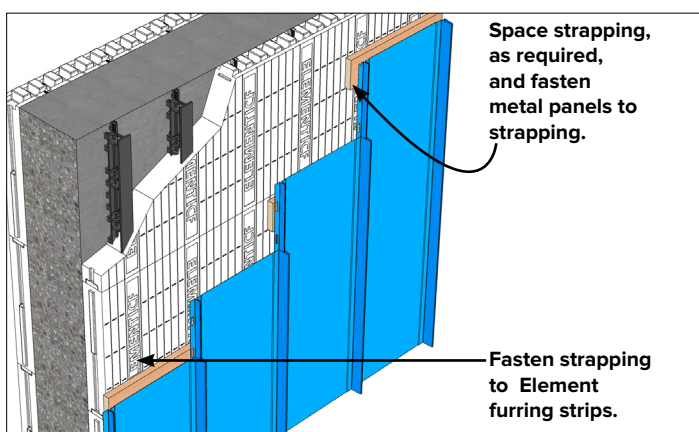

Typical Element wall assembly - Metal Panel Siding with strapping

METHOD 1: A 1/2-inch (13 mm) or 3/4-inch (19 mm) strip of wood can be attached horizontally to the webs in the wall to provide the manufacturer's specified fastener spacing.

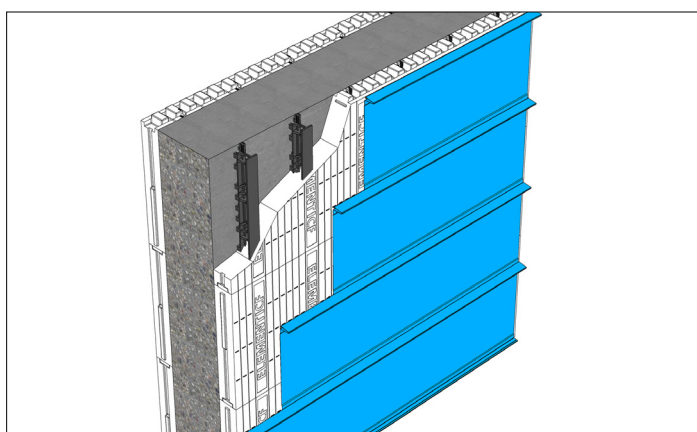

Typical Element wall assembly - Metal Panel Siding placed horizontally.

METHOD 2: The panels can be installed horizontally, by fastening directly into the webs.

NOTE: Although air guns can be used, screw guns is recommended when attaching to exterior siding. Always follow manufacturer's recommendations and local codes to determine the size and spacing of fasteners for all siding products.

2.19.5 – WOOD SIDING


Any wood siding can be attached to the Element wall in the same manner as to a traditional framed building. The spacing of the web studs on 8-inch (203 mm) centers allows for industry standard spacing of fasteners. Typically, screws are used for attaching wood siding or even half-log siding to the Element wall.

Although air guns can be used, a screw gun with screws in clips (Quik Drive) is recommended. This is usually the fastest method for applying wood siding. Always follow manufacturer's recommendations and local codes to determine the size and spacing of fasteners for all siding products.

A good practice for installing wood siding on a wall, is to apply the siding over vertical 1-inch x 2-inch (25 mm x 51 mm) wood nailing strips with a screen at the bottom. The screen keeps insects out while the space allows air to circulate behind the siding. The air circulation helps equalize the moisture content in the wood siding, which makes for much more dimensionally stable siding and longer lasting application.

Furring strips are spaced
8" (203 mm) on center
horizontally and run
nearly the entire height
of Element ICF blocks.

'ElementICF' pattern on
surface of Element foam
panels mark locations of
furring strips.

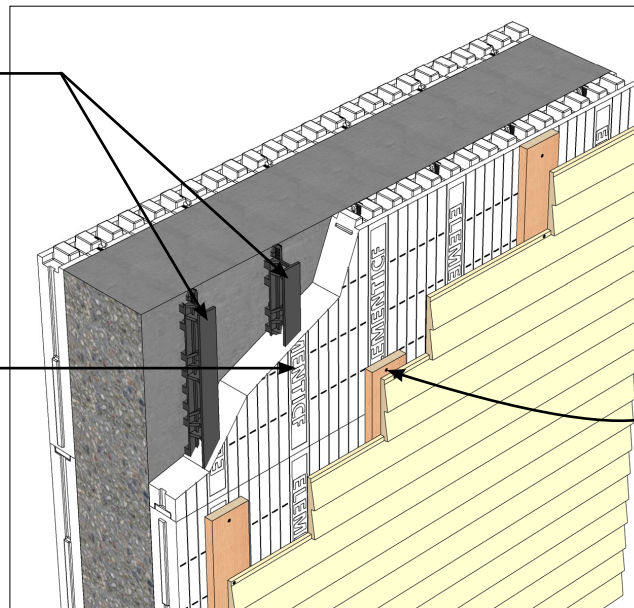

Fasten strapping
at furring strip
locations.

Fasten siding to
strapping.


Typical Element wall assembly - Wood Siding.

2.19.6 – EIFS

There are now acrylic-based stucco products available that are more flexible and easier to work with than traditional cement-based stucco. Collectively these products are known as EIFS (Exterior Insulation Finish Systems) and almost always require an EPS substrate.

Because Element blocks are made with EPS, they are a natural fit for EIFS finishes. In addition, the webs in Element blocks are embedded 1/2-inch (13 mm) deep in the EPS foam to comply with EIFS manufacturer requirements.

It is important to follow the EIFS manufacturer's application procedures.

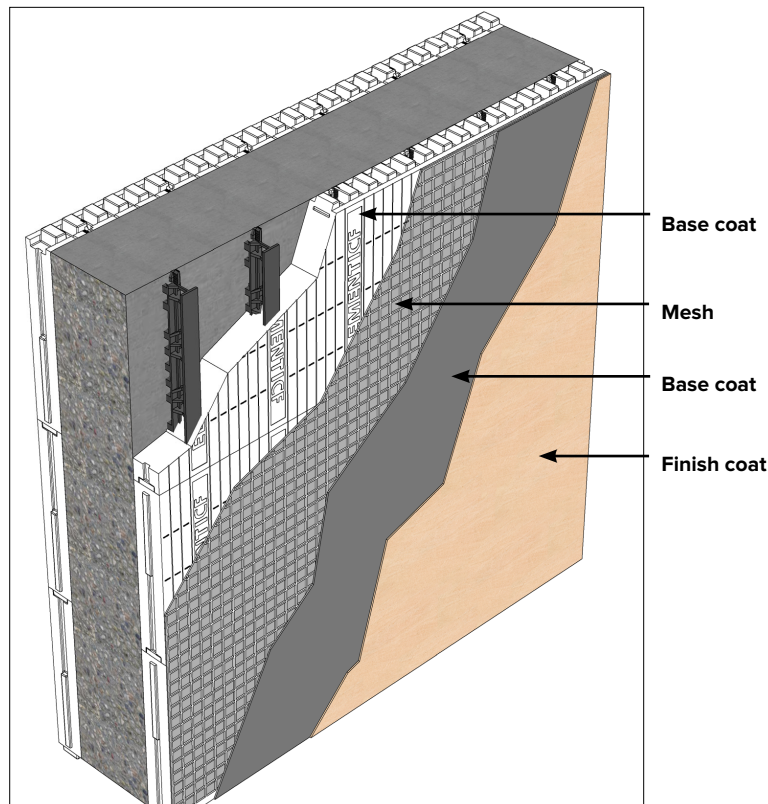

Typical Element wall assembly - EIFS example. Consult EIFS manufacturer for recommended application procedures.

2.19.7 – CEMENT COMPOSITE SIDING

Recently the new cement fiber siding products have gained popularity. This type of siding can usually be fastened directly to the Element webs.

Although air guns can be used, a screw gun is recommended to fasten flat-headed exterior screws at 16-inch (406 mm) centers. The screws pull the siding in tight and hold the siding securely in place.


Some manufacturers may require the siding to be strapped out to allow air space behind. Vertical or shake patterns will require strapping for fastening. See illustrations in “2.19.4 – STEEL PANEL SIDING” on page 96, and “2.19.5 – WOOD SIDING” on page 97, for strapping examples.

Always follow manufacturer’s recommendations and local codes to determine the size and spacing of fasteners for all siding products.

Check with your siding manufacturer for specific requirements.

Furring strips are spaced 8" (203 mm) on center horizontally and run nearly the entire height of Element ICF blocks.

Furring strips are embedded 1/2" (13 mm) from surface of Element foam panels and are anchored into the concrete.

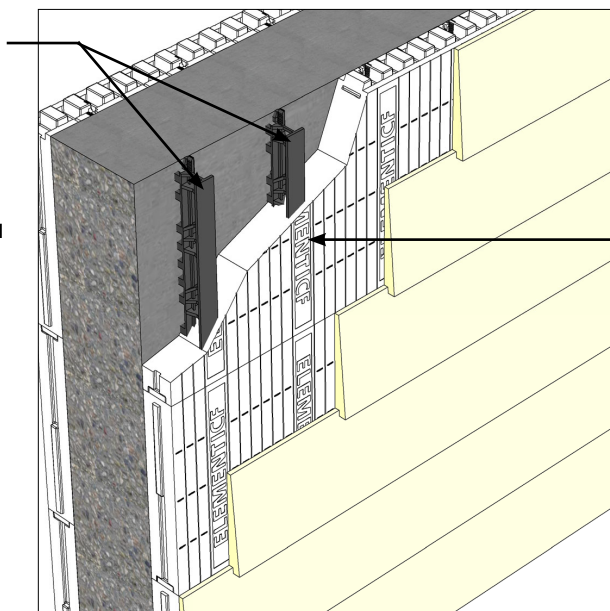

Typical Element wall assembly - Cement fibre siding installed horizontally.

'ElementICF' pattern on surface of Element foam panels mark locations of furring strips.




Fasten siding at furring strip locations.

2.19.8 – BRICK VENEER

The Element Brick Ledge block units are used to support a brick veneer as the exterior finish material. The Brick Ledge blocks are simply placed at a level where the brick is desired to begin. The design of the block creates a reinforced concrete ledge.

With standard reinforcing, the Brick Ledge can bear up to 1300lb/ft (19kN/m) of wall. With site-specific engineering, up to 3000lb/ft (44kN/m) of wall is attainable.

To install Brick Ledge block units, follow the instructions in section “2.8.7 – FIELD-FABRICATED ICF CORNERS” on page 32 of the guide. When reinforcing steel and concrete are in place within the wall, brick is laid on the ledge and tied back to the webs with brick ties as specified.

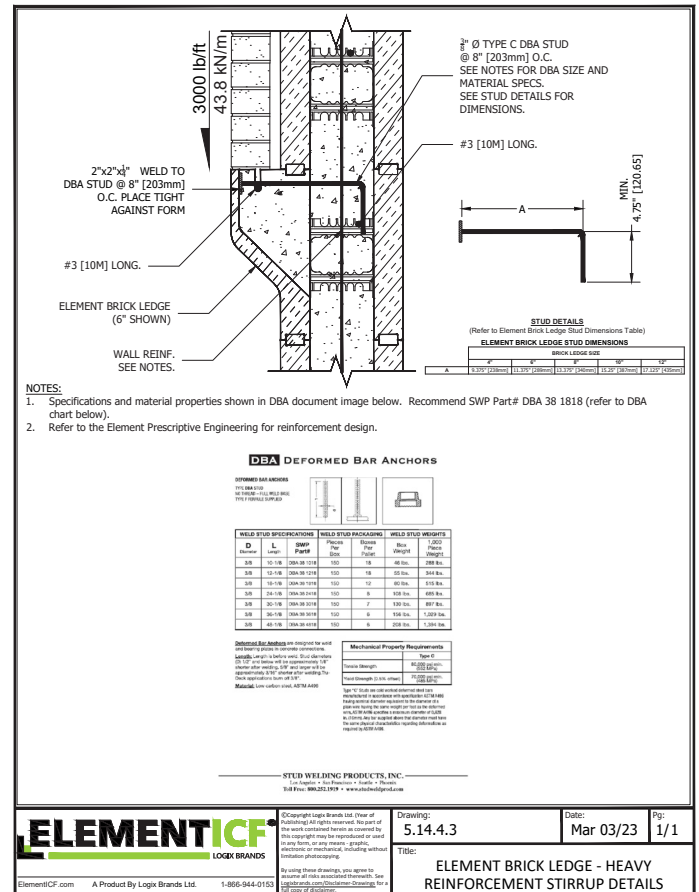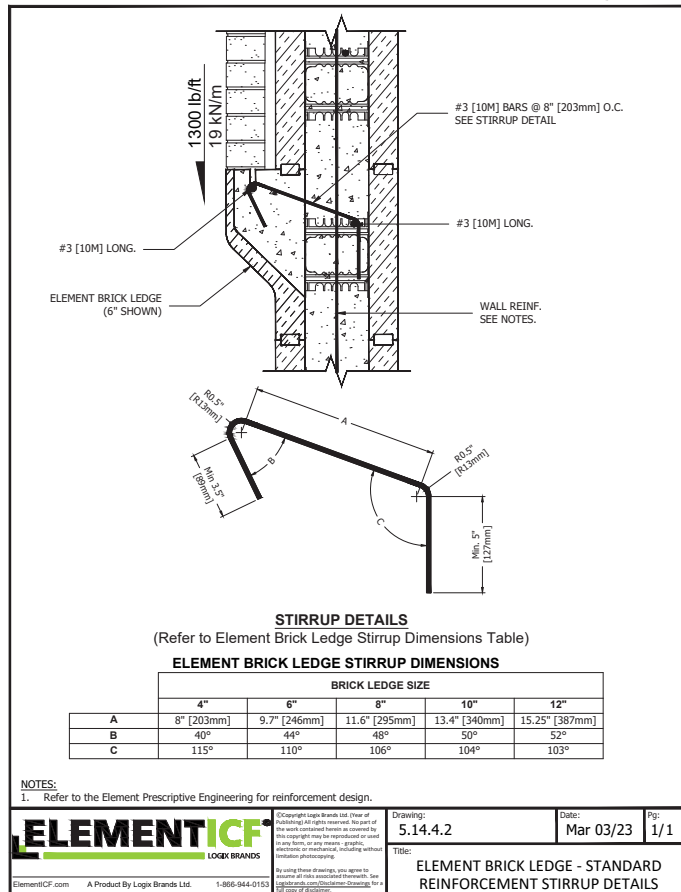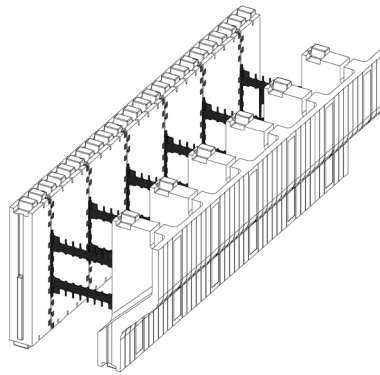


2.19.9 – BELOW GRADE WATERPROOFING, DAMP PROOFING & PARGING

There are many methods available to protect the “below grade” and the “just above grade” areas of the exterior of your building.

Damp proofing is used on concrete or masonry surfaces to repel water in above grade walls. The 2.75-inch (70 mm) foam panels of the Element insulated concrete blocks act as damp proofing, therefore, no additional damp proofing treatment is required.

NOTE: Although damp proofing above grade walls is not typically required, check with local building codes for damp proofing requirements.

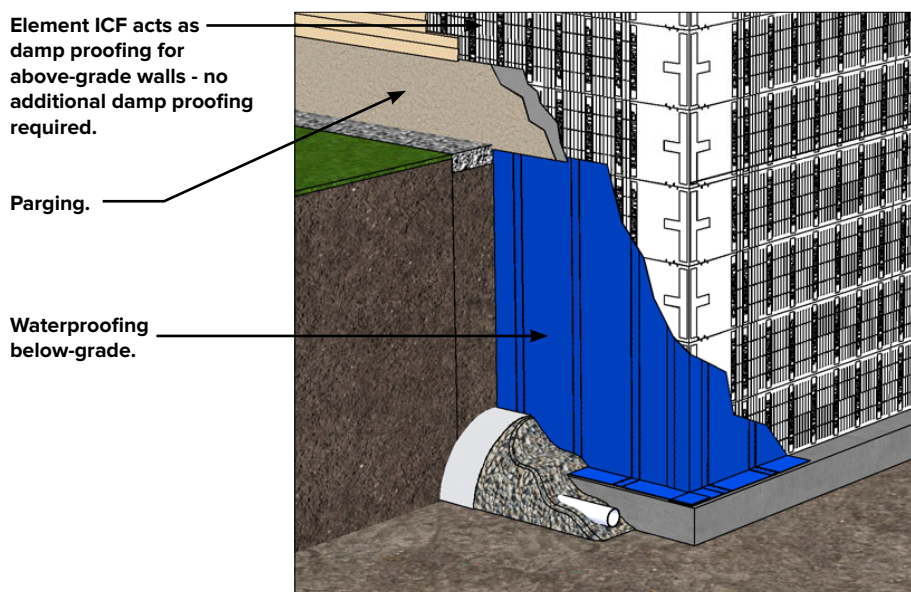

2.19.9.1 – BELOW GRADE WATERPROOFING

A rubberized “peel and stick” waterproofing membrane is recommended for waterproofing below-grade. The membrane is applied vertically to the wall from grade level down to and overlapping the top of the footing. It is recommended to use protection board, such as 1/2-inch (13 mm) rigid foam boards, or drainage boards, to prevent damage to the waterproofing membrane during backfilling.

Proper free-draining backfill material is recommended for below-grade walls.


NOTE: Membrane should be installed within one week prior to backfill being placed. Sunlight and high temperatures may cause the membrane to begin to “sag” which may cause wrinkles in the material. This may result in tears or punctures during the placement of the backfill material. Should you choose to use one of the many other types of waterproofing available be sure to follow the manufacturer’s recommended installation procedures.

2.19.9.1 – BELOW GRADE WATERPROOFING


STEP 1: Prep the wall and footing area to be covered by removing all dirt and debris. If the ICF foam panels have been subjected to prolonged UV exposure a chalky layer of dust will develop on its surface. Be sure to remove the dust layer by sweeping the surface with a broom.

STEP 2: Snap chalk lines for the “grade” line.

STEP 3: Measure the height from grade line to footing. Add enough length to cover the top of the footing and cut pieces of membrane to length.

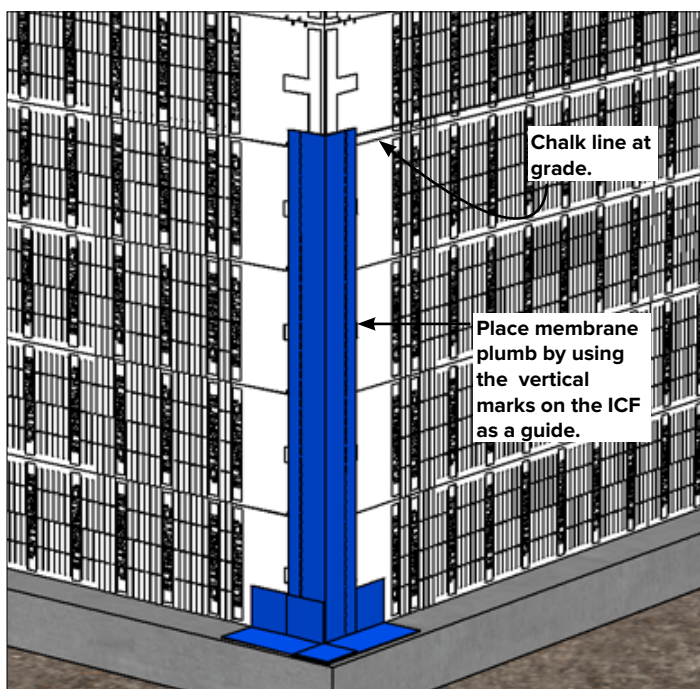

STEP 4: Apply the membrane at corners first. Hang the membrane vertically, and starting at the top pull back the first 8” to 10” of the release paper and press. Continue pulling back the release paper and pressing the membrane to the wall. Make sure to wrap the corners with the membrane.

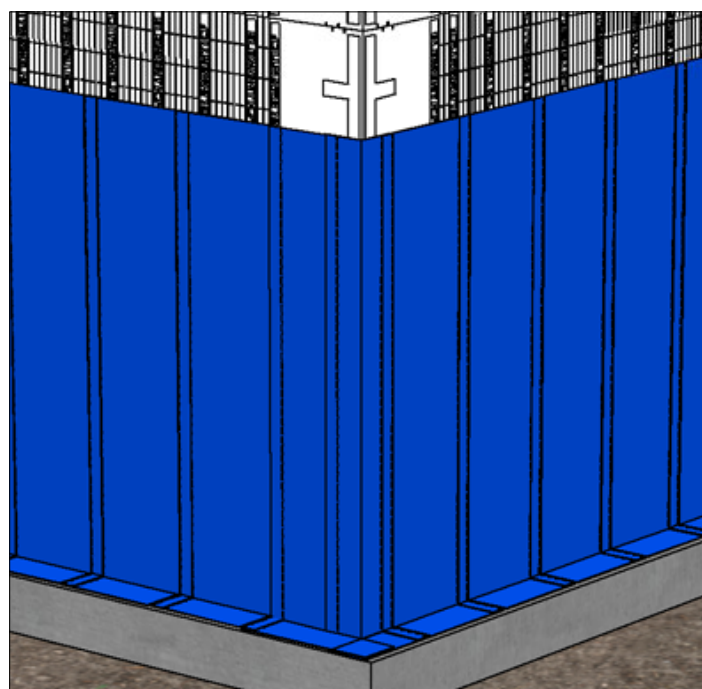

STEP 5: Starting at a corner continue applying cut pieces of membrane around the wall, maintaining 2-inch (13 mm) overlap by using the printed marks on the membrane as a guide.

NOTE: Extreme temperatures, both cold and hot, may cause the installer to consider other types of waterproofing. Be sure to follow the manufacturer’s installation process.

2.19.9.2 – ABOVE GRADE PARGING

The area that is above grade line and below the exterior siding material must be parged to protect the EPS from damage.

Parging is a coating material that is applied to give a finished appearance to the small area of wall that is above grade level but below where the siding materials will begin. Element Prepcoat is the preferred option for this area.

STEP 1: Prep the wall area to be covered by removing any dirt or debris. The wall may need to be “scuffed” to reveal fresh EPS beads.


STEP 2: Mix Prepcoat dry material with water to a pasty consistency.

STEP 3: Using a trowel apply a thin, 1/16-inch - 1/8-inch (2 mm - 3 mm) “skim coat” of Prepcoat.

STEP 4: Pre-cut pieces of Element fiber mesh 1-inch - 2-inch (25 mm - 51 mm) wider than the area to be parged. This will allow for an over-lap over the waterproofing membrane to create a “drip ledge”.


STEP 5: Embed the mesh in the skim coat firmly.

STEP 6: Once the area is dry to the touch apply a second coat of Prepcoat. This coat can be painted or stained if desired.

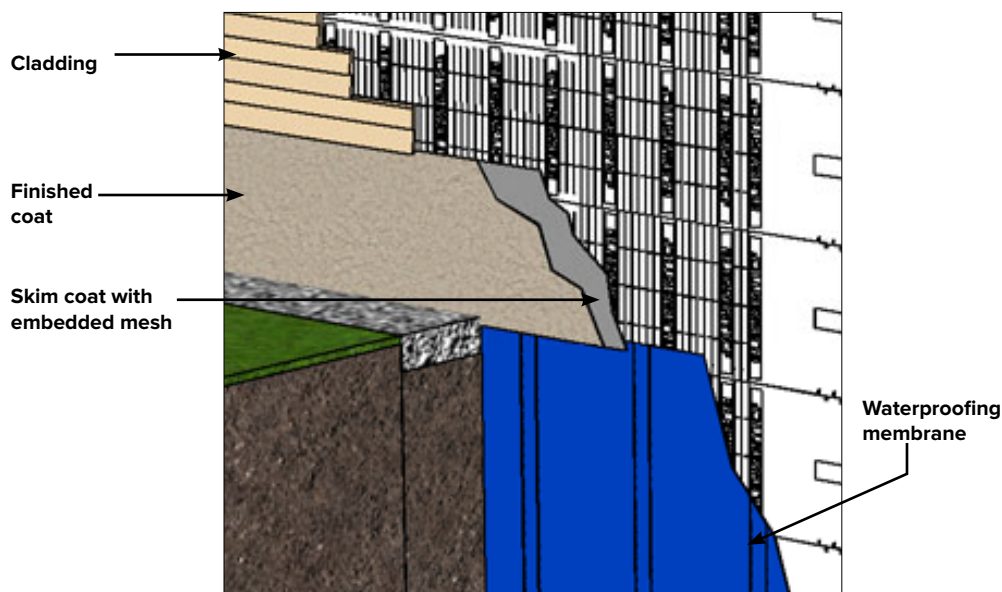

2.20 – ATTACHING FIXTURES

For attaching fixtures Element provides furring strips spaced every 8-inches (203 mm), which provides more fastening points than stud walls.

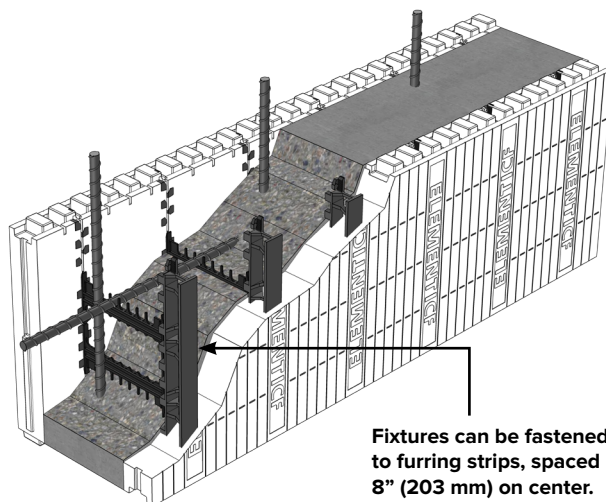

Different methods are used to attach fixtures depending on whether the fixture is light or heavy in weight.

2.20.1 – LIGHT WEIGHT FIXTURES

Fixtures that are light in weight, such as small picture frames or mirrors, can be attached to the wall without having to fasten into the furring strips by using typical hanging pins, finishing nails or plugs.

Fixtures such as curtain rods, large picture frames or mirrors, bathroom accessories, etc., require a more secure attachment to the wall.

2.20.2 – HEAVY WEIGHT FIXTURES

Additional backing is recommended to support heavier wall fixtures, such as kitchen cabinetry, wall mounted fixtures, grab bars, hand rails, etc.


Different attachment methods can be employed depending on the type of attachment.

NOTE: Minimum fastener lengths: When fastening backing, brackets, or fixtures to the Element furring strips, confirm the fastener meets the minimum length in Appendix A.2.

2.20.2.1 – CABINETS

Fasten plywood to the embedded furring strips. Furring strip locations are marked with 'ElementICF' pattern.


Plywood fastened to Element in lieu of drywall.

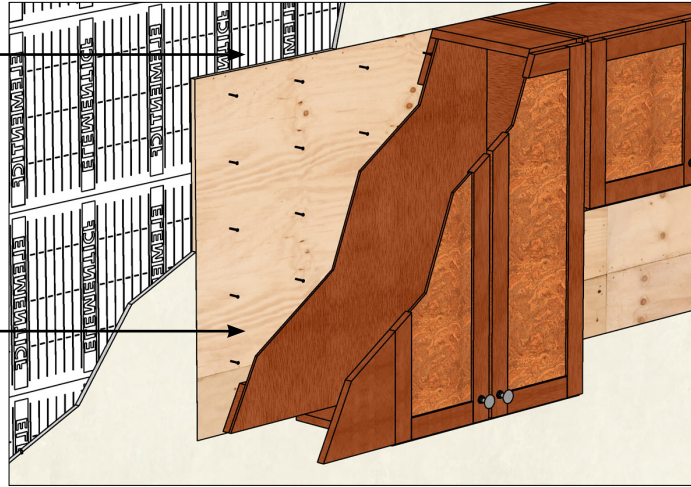

METHOD 1: Plywood board can be attached to the Element wall behind the heavier cabinets in place of gypsum board, providing a thermal barrier comparable to gypsum and a strong attachment surface for heavier items and fixtures. Be certain to attach the plywood board to the Element webs with a sufficient number of screws to hold heavy items in place for when loads are applied.


Cut strip of foam and place 2x4. Make sure 2x4 is flush to face of Element ICF. Anchor 2x4 to concrete.

Fasten cabinets to the 2x4s.

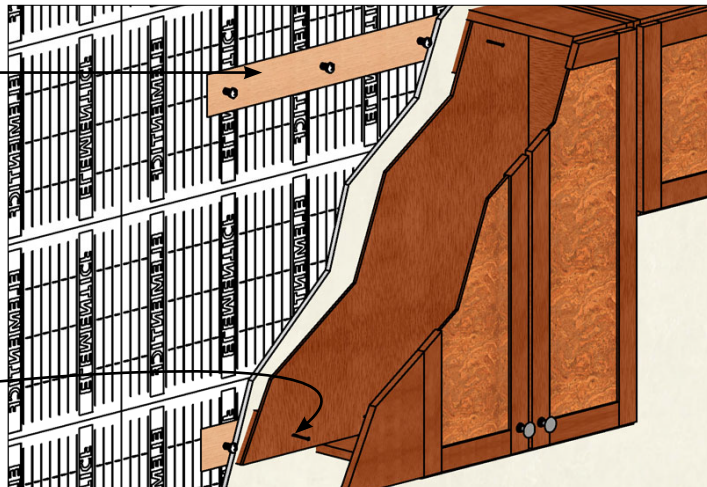


METHOD 2: Create horizontal channels behind the cabinets equal in width to a 2x4 and install 2x4 backing directly to the concrete surface using sufficiently long concrete screws and a rotohammer. Attach the cabinets to the 2x4s.

2.20.2.2 – GRAB BARS

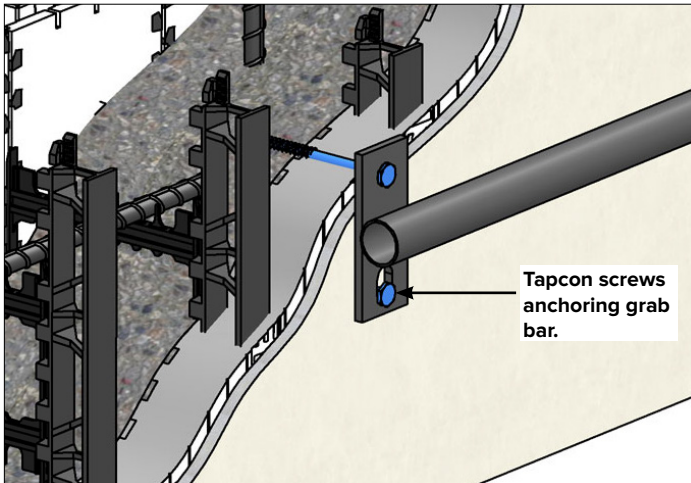


METHOD 1: Use Tapcon screws to anchor the grab bar directly to the concreted.

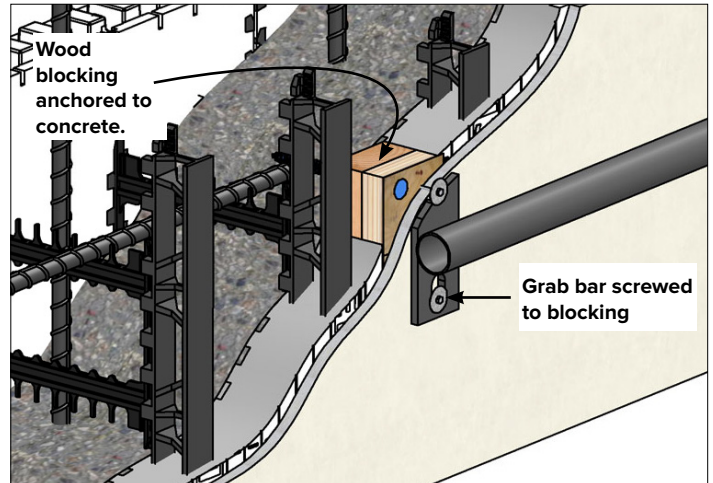


METHOD 2: For a stronger hold remove the foam and replace with wood blocking behind the grab bar mounting bracket. The wood blocking should be mechanically fastened to the concrete.


2.20.2.3 – TELEVISIONS

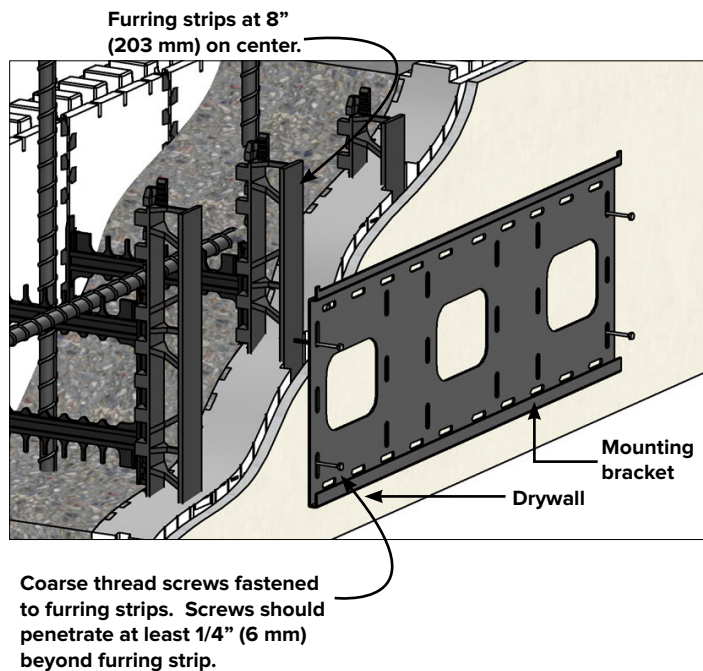

METHOD 1: Face mounted TVs up to 200lbs can be secured to the furring strips with a minimum of 4 coarse thread screws. Care must be taken to ensure the screws are properly fastened to the furring strips.

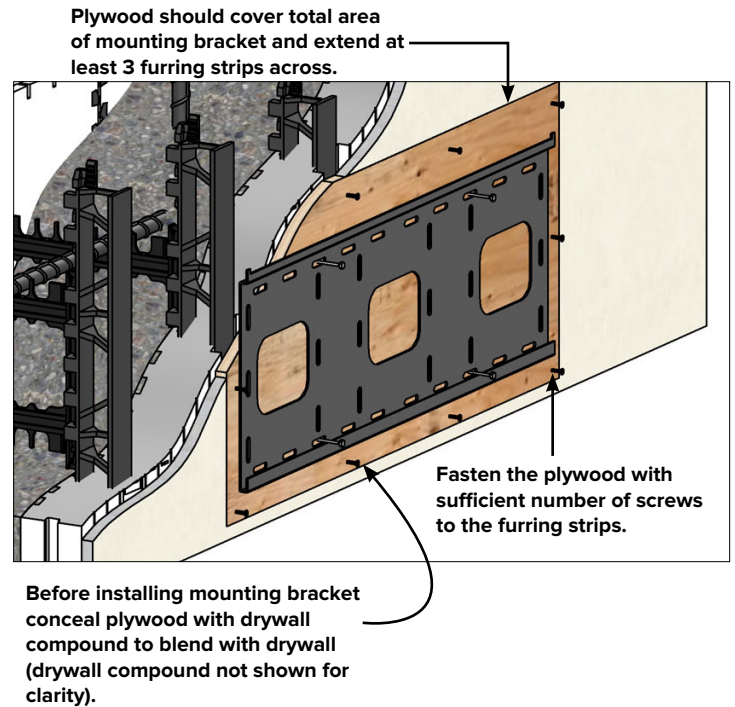

METHOD 2: Replace the drywall behind the mounting bracket with plywood.

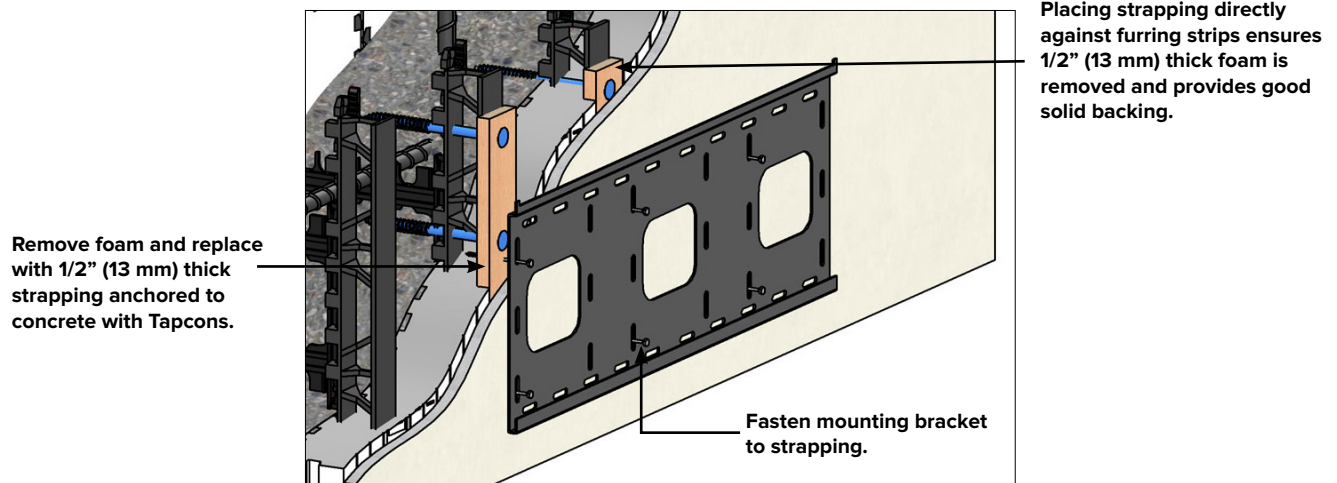

METHOD 3: TV mounts that swivel causes heavier loading conditions and should be anchored to the concrete with plywood and tapcons.

2.21 – TALL WALLS

Element walls can be constructed to any height provided proper engineering and construction methods are used. (Note: the pictures on this page are of tall wall projects built with Logix ICF and are being used to illustrate the principles of constructing ICF tall walls.)

Element tall walls should be designed in accordance with ACI 318 or CAN/CSA A23.3.



Constructing tall walls follows the same basic steps described throughout Section 2. In addition, building taller walls is done in much the same way as concrete pours using traditional formwork. Generally, Element blocks are stacked and braced, normally 10 to 12-ft (3048 to 3658 mm) high. The concrete is then placed. After the concrete sets Element blocks are then stacked another 10 to 12-ft (3048 to 3658 mm), and bracing is raised or extended higher to support the wall, as well as keeping the wall plumb. This process is continued until the specified wall height is reached.





To ensure a smooth build, the following items should be considered:

- Load tables in the Element Prescriptive Engineering manual can be used as a design aid for both the builder and designer. However, tall wall designs should be reviewed and approved by a locally licensed professional engineer.
- In higher wind areas taller walls may require guy wires for additional support. Typically, this will be determined by the engineer of record.
- Proper consolidation of concrete can be achieved by adequate vibrating. However, depending on the drop height, and the steel congestion, external vibration, in addition to internal vibration, should be considered, particularly at corners, openings, and congested areas of rebar. (External vibrators made specifically for ICFs are available. See “APPENDIX D – SUPPORTING PRODUCTS” on page 129.
- Since tall walls are typically poured using a pump truck, using a 2 1/2” trimmer hose can provide better control of the concrete pour.
- If required, roughen the surface of all cold joints to ensure a good bond between the surface of the old pour and the subsequent pour. In addition, ensure adequate rebar embedments are provided.
- For the final stage of the pour, an Element Taper Top block can be used, if required, for the top course of the wall. This provides a larger opening for concrete to flow into the wall and also provides a larger bearing area for supporting Elements.
- Several tall wall bracing and alignment systems are available. For more information see Section 3.2, Tall Wall Bracing Systems.

NOTE: Both ACI 318 and CAN/CSA A23.3 permit cold joints when concrete is poured in stages.



APPENDIX A – HOLDING POWER OF SCREWS FASTENED TO ELEMENT FURRING STRIPS

Web fastener withdrawal and shear testing using coarse and fine thread drywall screws. Tests were conducted on furring strips embedded 1/2-inch (13 mm) from the surface of the 2.75-inch (70 mm) Element EPS panels .

	Allowable Withdrawal Resistance ¹	Allowable Shear Resistance ²
#6 x 1-5/8" Drywall Screw Coarse	33lb (15.0kg)	42 lb (19kg)
#6 x 1-5/8" Drywall Screw Fine	34lb (15.4kg)	39 lb (18 kg)
#8 x 2" Long Wood Screw	40 lb (18.2 kg)	46 lb (20.8 kg)
#10 x 2" Long Wood Screw	42.1 lb (19.1 kg)	30 lb (13.5 kg)
#8 x 2" Long Exterior Deck Screw	42.3 lb (19.2kg)	56lb 25.2kg)

1kg = 9.81 Newtons

1. Allowable withdrawal resistance values are based on a factor of safety of 5.

2. Allowable shear resistance values are based on a factor of safety of 3.2 within defined deflection limits (for more detailed information contact info@Elementicf.com)


APPENDIX A.2 – MINIMUM FASTENER LENGTHS

Fasteners attaching finishes, furring, strapping, or fixtures to Element ICF must be long enough to pass through the applied material and the foam cover and still fully engage the embedded furring tab. Use minimum lengths in the table below.

More length is required at the outside corner of Element corner blocks, where the furring tab sits under deeper foam cover. Use the far right column for the outside corner face of corner blocks only; use the middle column for all other locations, including the straight legs and inside corner of corner blocks.

To use the table, measure the total thickness of the material being fastened over the ICF, find the matching row in the far left column, and read across. If your thickness falls between two rows, use the longer fastener.


Material Thickness Over ICF	Min. Fastener Length - all locations except outside corner of Corner Blocks ¹	Min. Fastener Length - outside corner of Corner Blocks only ²
1/4"	1-1/2"	2"
7/16"	1-3/4"	2-1/4"
1/2"	1-3/4"	2-1/4"
5/8"	2"	2-1/2"
3/4"	2"	2-1/2"
1"	2-1/4"	2-3/4"
1-1/4"	2-1/2"	3"
1-1/2"	2-3/4"	3-1/4"

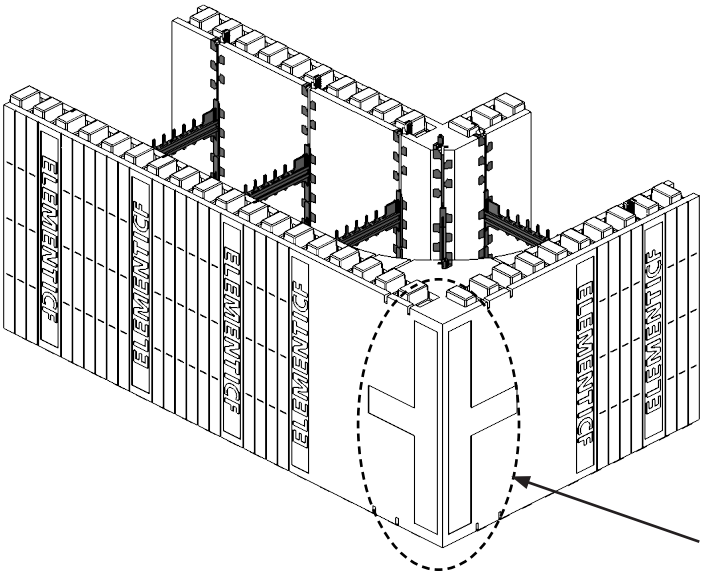

At outside corners of Element corner blocks, use the minimum fastener lengths listed in the far right column of the table above.

APPENDIX A APPENDIX A2 - MINIMUM FASTENER LENGTHS

APPENDIX B – RADIUS WALL TABLE

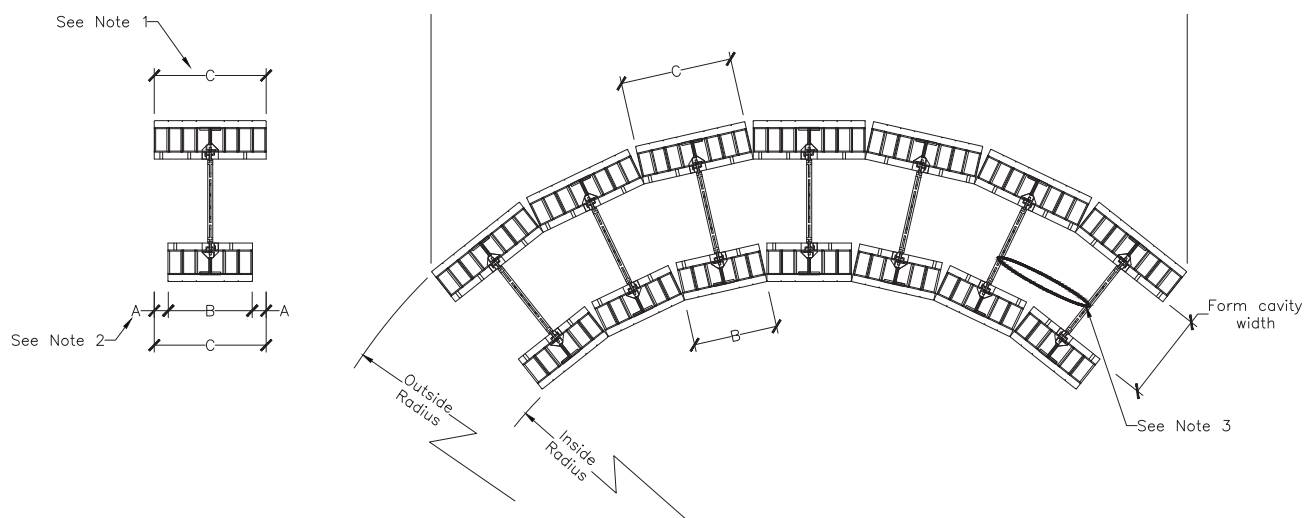

Outside Radius, ft. (m)	Form Cavity Width							
	4" (102mm)		6" (152mm)		8" (203mm)		10" (254mm)	
	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)
3 (0.914)	8 (203)	13/16 (21)	8 (203)	1 1/16 (27)	8 (203)	1 19/64 (33)	8 (203)	1 35/64 (39)
3.5 (1.067)	8 (203)	11/16 (17)	8 (203)	57/64 (23)	8 (203)	1 3/32 (28)	8 (203)	1 19/64 (33)
4 (1.219)	8 (203)	19/32 (15)	8 (203)	49/64 (19)	8 (203)	61/64 (24)	8 (203)	1 1/8 (29)
4.5 (1.372)	8 (203)	17/32 (13)	8 (203)	11/16 (17)	8 (203)	27/32 (21)	8 (203)	1 (25)
5 (1.524)	8 (203)	15/32 (12)	8 (203)	39/64 (15)	8 (203)	3/4 (19)	8 (203)	57/64 (23)
5.5 (1.676)	8 (203)	27/64 (11)	8 (203)	35/64 (14)	8 (203)	43/64 (17)	8 (203)	51/64 (20)
6 (1.829)	8 (203)	25/64 (10)	8 (203)	1/2 (13)	8 (203)	5/8 (16)	8 (203)	47/64 (19)
6.5 (1.981)	8 (203)	23/64 (9)	8 (203)	15/32 (12)	8 (203)	9/16 (14)	8 (203)	43/64 (17)
7 (2.134)	8 (203)	21/64 (8)	8 (203)	27/64 (11)	8 (203)	17/32 (13)	8 (203)	5/8 (16)

NOTES:

- Field cut Element Standard blocks (straight blocks) into widths, C, according to Element Radius Walls table. For inside radius field cut additional foam, A, accordingly.
- Secure each radius section with zip ties, Element Hooks, tape or foam.
- The field cuts, C, are kept at 8-inch (203 mm), 16-inch (406 mm), 24-inch (610 mm) or 48-inch (1220 mm) lengths. The field cuts, A, are determined depending on required radius. The combined field cuts, A and C, results in an outside radius which is within 1% of the design radius for radii less than 60-ft (18.3 m), and 1% to 2% for radii between 60-ft and 100-ft (18.3 m to 30.5 m).



Outside Radius, ft. (m)	Form Cavity Width							
	4" (102mm)		6" (152mm)		8" (203mm)		10" (254mm)	
	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)
7.5 (2.286)	8 (203)	5/16 (8)	8 (203)	25/64 (10)	8 (203)	31/64 (12)	8 (203)	37/64 (15)
8 (2.438)	8 (203)	9/32 (7)	8 (203)	3/8 (10)	8 (203)	29/64 (12)	8 (203)	35/64 (14)
8.5 (2.591)	8 (203)	17/64 (7)	8 (203)	11/32 (9)	8 (203)	27/64 (11)	8 (203)	33/64 (13)
9 (2.743)	8 (203)	1/4 (6)	8 (203)	21/64 (8)	8 (203)	13/32 (10)	8 (203)	31/64 (12)
9.5 (2.896)	8 (203)	15/64 (6)	16 (406)	5/8 (16)	8 (203)	25/64 (10)	8 (203)	29/64 (12)
10 (3.048)	16 (406)	29/64 (12)	16 (406)	19/32 (15)	8 (203)	23/64 (9)	8 (203)	7/16 (11)
10.5 (3.200)	16 (406)	7/16 (11)	16 (406)	9/16 (14)	8 (203)	11/32 (9)	8 (203)	13/32 (10)
11 (3.353)	16 (406)	27/64 (11)	16 (406)	17/32 (13)	8 (203)	21/64 (8)	8 (203)	25/64 (10)
11.5 (3.505)	16 (406)	25/64 (10)	16 (406)	33/64 (13)	8 (203)	5/16 (8)	8 (203)	3/8 (10)
12 (3.658)	16 (406)	3/8 (10)	16 (406)	1/2 (13)	8 (203)	19/64 (8)	8 (203)	23/64 (9)
12.5 (3.810)	16 (406)	23/64 (9)	16 (406)	15/32 (12)	16 (406)	37/64 (15)	8 (203)	11/32 (9)
13 (3.962)	16 (406)	11/32 (9)	16 (406)	29/64 (12)	8 (203)	9/32 (7)	8 (203)	21/64 (8)
13.5 (4.115)	16 (406)	21/64 (8)	16 (406)	7/16 (11)	16 (406)	17/32 (13)	8 (203)	5/16 (8)
14 (4.267)	16 (406)	21/64 (8)	16 (406)	27/64 (11)	8 (203)	1/4 (6)	16 (406)	39/64 (15)
14.5 (4.420)	16 (406)	5/16 (8)	16 (406)	13/32 (10)	8 (203)	1/4 (6)	16 (406)	19/32 (15)
15 (4.572)	16 (406)	19/64 (8)	16 (406)	25/64 (10)	8 (203)	15/64 (6)	16 (406)	37/64 (15)
15.5 (4.724)	16 (406)	19/64 (8)	16 (406)	3/8 (10)	8 (203)	15/64 (6)	16 (406)	35/64 (14)
16 (4.877)	24 (610)	27/64 (11)	16 (406)	23/64 (9)	8 (203)	7/32 (6)	16 (406)	17/32 (13)
16.5 (5.029)	24 (610)	13/32 (10)	16 (406)	23/64 (9)	8 (203)	7/32 (6)	16 (406)	33/64 (13)
17 (5.182)	24 (610)	13/32 (10)	16 (406)	11/32 (9)	16 (406)	27/64 (11)	16 (406)	1/2 (13)
17.5 (5.334)	24 (610)	25/64 (10)	24 (610)	1/2 (13)	16 (406)	13/32 (10)	16 (406)	31/64 (12)
18 (5.486)	24 (610)	3/8 (10)	24 (610)	31/64 (12)	16 (406)	13/32 (10)	16 (406)	15/32 (12)
18.5 (5.639)	24 (610)	23/64 (9)	24 (610)	15/32 (12)	16 (406)	25/64 (10)	16 (406)	15/32 (12)
19 (5.791)	24 (610)	23/64 (9)	24 (610)	15/32 (12)	16 (406)	3/8 (10)	16 (406)	29/64 (12)



Outside Radius, ft. (m)	Form Cavity Width							
	4" (102mm)		6" (152mm)		8" (203mm)		10" (254mm)	
	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)
19.5 (5.944)	24 (610)	11/32 (9)	24 (610)	29/64 (12)	16 (406)	3/8 (10)	16 (406)	7/16 (11)
20 (6.096)	24 (610)	11/32 (9)	24 (610)	7/16 (11)	16 (406)	23/64 (9)	16 (406)	27/64 (11)
20.5 (6.248)	24 (610)	21/64 (8)	24 (610)	27/64 (11)	16 (406)	11/32 (9)	16 (406)	27/64 (11)
21 (6.401)	24 (610)	21/64 (8)	24 (610)	27/64 (11)	16 (406)	11/32 (9)	16 (406)	13/32 (10)
21.5 (6.553)	24 (610)	5/16 (8)	24 (610)	13/32 (10)	16 (406)	21/64 (8)	16 (406)	25/64 (10)
22 (6.706)	24 (610)	5/16 (8)	24 (610)	25/64 (10)	16 (406)	21/64 (8)	16 (406)	25/64 (10)
22.5 (6.858)	24 (610)	19/64 (8)	24 (610)	25/64 (10)	16 (406)	5/16 (8)	16 (406)	3/8 (10)
23 (7.010)	24 (610)	19/64 (8)	24 (610)	3/8 (10)	16 (406)	5/16 (8)	16 (406)	3/8 (10)
23.5 (7.163)	24 (610)	9/32 (7)	24 (610)	3/8 (10)	24 (610)	29/64 (12)	16 (406)	23/64 (9)
24 (7.315)	24 (610)	9/32 (7)	24 (610)	23/64 (9)	24 (610)	29/64 (12)	16 (406)	23/64 (9)
24.5 (7.468)	24 (610)	9/32 (7)	48 (1,219)	23/32 (18)	24 (610)	7/16 (11)	16 (406)	11/32 (9)
25 (7.620)	24 (610)	17/64 (7)	48 (1,219)	45/64 (18)	24 (610)	7/16 (11)	16 (406)	11/32 (9)
25.5 (7.772)	24 (610)	17/64 (7)	48 (1,219)	11/16 (17)	24 (610)	27/64 (11)	16 (406)	21/64 (8)
26 (7.925)	48 (1,219)	33/64 (13)	48 (1,219)	43/64 (17)	24 (610)	13/32 (10)	16 (406)	21/64 (8)
26.5 (8.077)	48 (1,219)	33/64 (13)	48 (1,219)	43/64 (17)	24 (610)	13/32 (10)	16 (406)	5/16 (8)
27 (8.230)	48 (1,219)	1/2 (13)	48 (1,219)	21/32 (17)	24 (610)	25/64 (10)	16 (406)	5/16 (8)
27.5 (8.382)	48 (1,219)	1/2 (13)	48 (1,219)	41/64 (16)	24 (610)	25/64 (10)	16 (406)	5/16 (8)
28 (8.534)	48 (1,219)	31/64 (12)	48 (1,219)	5/8 (16)	24 (610)	25/64 (10)	16 (406)	19/64 (8)
28.5 (8.687)	48 (1,219)	15/32 (12)	48 (1,219)	39/64 (15)	24 (610)	3/8 (10)	24 (610)	29/64 (12)
29 (8.839)	48 (1,219)	15/32 (12)	48 (1,219)	39/64 (15)	24 (610)	3/8 (10)	24 (610)	7/16 (11)
29.5 (8.992)	48 (1,219)	29/64 (12)	48 (1,219)	19/32 (15)	24 (610)	23/64 (9)	24 (610)	7/16 (11)
30 (9.144)	48 (1,219)	29/64 (12)	48 (1,219)	37/64 (15)	24 (610)	23/64 (9)	24 (610)	27/64 (11)
30.5 (9.296)	48 (1,219)	7/16 (11)	48 (1,219)	37/64 (15)	48 (1,219)	45/64 (18)	24 (610)	27/64 (11)
31 (9.449)	48 (1,219)	7/16 (11)	48 (1,219)	9/16 (14)	48 (1,219)	45/64 (18)	24 (610)	13/32 (10)

Outside Radius, ft. (m)	Form Cavity Width							
	4" (102mm)		6" (152mm)		8" (203mm)		10" (254mm)	
	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)
31.5 (9.601)	48 (1,219)	27/64 (11)	48 (1,219)	9/16 (14)	48 (1,219)	11/16 (17)	24 (610)	13/32 (10)
32 (9.754)	48 (1,219)	27/64 (11)	48 (1,219)	35/64 (14)	48 (1,219)	43/64 (17)	24 (610)	25/64 (10)
32.5 (9.906)	48 (1,219)	27/64 (11)	48 (1,219)	35/64 (14)	48 (1,219)	21/32 (17)	24 (610)	25/64 (10)
33 (10.058)	48 (1,219)	13/32 (10)	48 (1,219)	17/32 (13)	48 (1,219)	21/32 (17)	24 (610)	25/64 (10)
33.5 (10.211)	48 (1,219)	13/32 (10)	48 (1,219)	33/64 (13)	48 (1,219)	41/64 (16)	24 (610)	3/8 (10)
34 (10.363)	48 (1,219)	25/64 (10)	48 (1,219)	33/64 (13)	48 (1,219)	41/64 (16)	24 (610)	3/8 (10)
34.5 (10.516)	48 (1,219)	25/64 (10)	48 (1,219)	1/2 (13)	48 (1,219)	5/8 (16)	24 (610)	3/8 (10)
35 (10.668)	48 (1,219)	25/64 (10)	48 (1,219)	1/2 (13)	48 (1,219)	39/64 (15)	24 (610)	23/64 (9)
35.5 (10.820)	48 (1,219)	3/8 (10)	48 (1,219)	1/2 (13)	48 (1,219)	39/64 (15)	24 (610)	23/64 (9)
36 (10.973)	48 (1,219)	3/8 (10)	48 (1,219)	31/64 (12)	48 (1,219)	19/32 (15)	24 (610)	23/64 (9)
36.5 (11.125)	48 (1,219)	3/8 (10)	48 (1,219)	31/64 (12)	48 (1,219)	19/32 (15)	24 (610)	11/32 (9)
37 (11.278)	48 (1,219)	23/64 (9)	48 (1,219)	15/32 (12)	48 (1,219)	37/64 (15)	24 (610)	11/32 (9)
37.5 (11.430)	48 (1,219)	23/64 (9)	48 (1,219)	15/32 (12)	48 (1,219)	37/64 (15)	24 (610)	11/32 (9)
38 (11.582)	48 (1,219)	23/64 (9)	48 (1,219)	29/64 (12)	48 (1,219)	9/16 (14)	24 (610)	21/64 (8)
38.5 (11.735)	48 (1,219)	11/32 (9)	48 (1,219)	29/64 (12)	48 (1,219)	9/16 (14)	24 (610)	21/64 (8)
39 (11.887)	48 (1,219)	11/32 (9)	48 (1,219)	29/64 (12)	48 (1,219)	35/64 (14)	24 (610)	21/64 (8)
39.5 (12.040)	48 (1,219)	11/32 (9)	48 (1,219)	7/16 (11)	48 (1,219)	35/64 (14)	24 (610)	21/64 (8)
40 (12.192)	48 (1,219)	11/32 (9)	48 (1,219)	7/16 (11)	48 (1,219)	17/32 (13)	24 (610)	5/16 (8)
40.5 (12.344)	48 (1,219)	21/64 (8)	48 (1,219)	7/16 (11)	48 (1,219)	17/32 (13)	48 (1,219)	5/8 (16)
41 (12.497)	48 (1,219)	21/64 (8)	48 (1,219)	27/64 (11)	48 (1,219)	17/32 (13)	48 (1,219)	5/8 (16)
41.5 (12.649)	48 (1,219)	21/64 (8)	48 (1,219)	27/64 (11)	48 (1,219)	33/64 (13)	48 (1,219)	39/64 (15)
42 (12.802)	48 (1,219)	5/16 (8)	48 (1,219)	27/64 (11)	48 (1,219)	33/64 (13)	48 (1,219)	39/64 (15)
42.5 (12.954)	48 (1,219)	5/16 (8)	48 (1,219)	13/32 (10)	48 (1,219)	1/2 (13)	48 (1,219)	19/32 (15)
43 (13.106)	48 (1,219)	5/16 (8)	48 (1,219)	13/32 (10)	48 (1,219)	1/2 (13)	48 (1,219)	19/32 (15)



Outside Radius, ft. (m)	Form Cavity Width							
	4" (102mm)		6" (152mm)		8" (203mm)		10" (254mm)	
	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)
43.5 (13.259)	48 (1,219)	5/16 (8)	48 (1,219)	13/32 (10)	48 (1,219)	1/2 (13)	48 (1,219)	19/32 (15)
44 (13.411)	48 (1,219)	5/16 (8)	48 (1,219)	25/64 (10)	48 (1,219)	31/64 (12)	48 (1,219)	37/64 (15)
44.5 (13.564)	48 (1,219)	19/64 (8)	48 (1,219)	25/64 (10)	48 (1,219)	31/64 (12)	48 (1,219)	37/64 (15)
45 (13.716)	48 (1,219)	19/64 (8)	48 (1,219)	25/64 (10)	48 (1,219)	31/64 (12)	48 (1,219)	9/16 (14)
45.5 (13.868)	48 (1,219)	19/64 (8)	48 (1,219)	25/64 (10)	48 (1,219)	15/32 (12)	48 (1,219)	9/16 (14)
46 (14.021)	48 (1,219)	19/64 (8)	48 (1,219)	3/8 (10)	48 (1,219)	15/32 (12)	48 (1,219)	35/64 (14)
46.5 (14.173)	48 (1,219)	9/32 (7)	48 (1,219)	3/8 (10)	48 (1,219)	15/32 (12)	48 (1,219)	35/64 (14)
47 (14.326)	48 (1,219)	9/32 (7)	48 (1,219)	3/8 (10)	48 (1,219)	29/64 (12)	48 (1,219)	35/64 (14)
47.5 (14.478)	48 (1,219)	9/32 (7)	48 (1,219)	23/64 (9)	48 (1,219)	29/64 (12)	48 (1,219)	17/32 (13)
48 (14.630)	48 (1,219)	9/32 (7)	48 (1,219)	23/64 (9)	48 (1,219)	29/64 (12)	48 (1,219)	17/32 (13)
48.5 (14.783)	48 (1,219)	9/32 (7)	48 (1,219)	23/64 (9)	48 (1,219)	7/16 (11)	48 (1,219)	17/32 (13)
49 (14.935)	48 (1,219)	17/64 (7)	48 (1,219)	23/64 (9)	48 (1,219)	7/16 (11)	48 (1,219)	33/64 (13)
49.5 (15.088)	48 (1,219)	17/64 (7)	48 (1,219)	23/64 (9)	48 (1,219)	7/16 (11)	48 (1,219)	33/64 (13)
50 (15.240)	48 (1,219)	17/64 (7)	48 (1,219)	11/32 (9)	48 (1,219)	27/64 (11)	48 (1,219)	33/64 (13)
50.5 (15.392)	48 (1,219)	17/64 (7)	48 (1,219)	11/32 (9)	48 (1,219)	27/64 (11)	48 (1,219)	1/2 (13)
51 (15.545)	48 (1,219)	17/64 (7)	48 (1,219)	11/32 (9)	48 (1,219)	27/64 (11)	48 (1,219)	1/2 (13)
51.5 (15.697)	48 (1,219)	17/64 (7)	48 (1,219)	11/32 (9)	48 (1,219)	27/64 (11)	48 (1,219)	1/2 (13)
52 (15.850)	48 (1,219)	1/4 (6)	48 (1,219)	21/64 (8)	48 (1,219)	13/32 (10)	48 (1,219)	31/64 (12)
52.5 (16.002)	48 (1,219)	1/4 (6)	48 (1,219)	21/64 (8)	48 (1,219)	13/32 (10)	48 (1,219)	31/64 (12)
53 (16.154)	48 (1,219)	1/4 (6)	48 (1,219)	21/64 (8)	48 (1,219)	13/32 (10)	48 (1,219)	31/64 (12)
53.5 (16.307)	48 (1,219)	1/4 (6)	48 (1,219)	21/64 (8)	48 (1,219)	13/32 (10)	48 (1,219)	15/32 (12)
54 (16.459)	48 (1,219)	1/4 (6)	48 (1,219)	21/64 (8)	48 (1,219)	25/64 (10)	48 (1,219)	15/32 (12)
54.5 (16.612)	48 (1,219)	1/4 (6)	48 (1,219)	5/16 (8)	48 (1,219)	25/64 (10)	48 (1,219)	15/32 (12)
55 (16.764)	48 (1,219)	1/4 (6)	48 (1,219)	5/16 (8)	48 (1,219)	25/64 (10)	48 (1,219)	15/32 (12)

Outside Radius, ft. (m)	Form Cavity Width							
	4" (102mm)		6" (152mm)		8" (203mm)		10" (254mm)	
	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)
55.5 (16.916)	48 (1,219)	15/64 (6)	48 (1,219)	5/16 (8)	48 (1,219)	25/64 (10)	48 (1,219)	29/64 (12)
56 (17.069)	48 (1,219)	15/64 (6)	48 (1,219)	5/16 (8)	48 (1,219)	3/8 (10)	48 (1,219)	29/64 (12)
56.5 (17.221)	48 (1,219)	15/64 (6)	48 (1,219)	5/16 (8)	48 (1,219)	3/8 (10)	48 (1,219)	29/64 (12)
57 (17.374)	48 (1,219)	15/64 (6)	48 (1,219)	19/64 (8)	48 (1,219)	3/8 (10)	48 (1,219)	29/64 (12)
57.5 (17.526)	48 (1,219)	15/64 (6)	48 (1,219)	19/64 (8)	48 (1,219)	3/8 (10)	48 (1,219)	7/16 (11)
58 (17.678)	48 (1,219)	15/64 (6)	48 (1,219)	19/64 (8)	48 (1,219)	3/8 (10)	48 (1,219)	7/16 (11)
58.5 (17.831)	48 (1,219)	15/64 (6)	48 (1,219)	19/64 (8)	48 (1,219)	23/64 (9)	48 (1,219)	7/16 (11)
59 (17.983)	48 (1,219)	7/32 (6)	48 (1,219)	19/64 (8)	48 (1,219)	23/64 (9)	48 (1,219)	7/16 (11)
59.5 (18.136)	48 (1,219)	7/32 (6)	48 (1,219)	19/64 (8)	48 (1,219)	23/64 (9)	48 (1,219)	27/64 (11)
60 (18.288)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	23/64 (9)	48 (1,219)	27/64 (11)
60.5 (18.440)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	23/64 (9)	48 (1,219)	27/64 (11)
61 (18.593)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	11/32 (9)	48 (1,219)	27/64 (11)
61.5 (18.745)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	11/32 (9)	48 (1,219)	13/32 (10)
62 (18.898)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	11/32 (9)	48 (1,219)	13/32 (10)
62.5 (19.050)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	11/32 (9)	48 (1,219)	13/32 (10)
63 (19.202)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	11/32 (9)	48 (1,219)	13/32 (10)
63.5 (19.355)	48 (1,219)	13/64 (5)	48 (1,219)	17/64 (7)	48 (1,219)	11/32 (9)	48 (1,219)	13/32 (10)
64 (19.507)	48 (1,219)	13/64 (5)	48 (1,219)	17/64 (7)	48 (1,219)	21/64 (8)	48 (1,219)	25/64 (10)
64.5 (19.660)	48 (1,219)	13/64 (5)	48 (1,219)	17/64 (7)	48 (1,219)	21/64 (8)	48 (1,219)	25/64 (10)
65 (19.812)	48 (1,219)	13/64 (5)	48 (1,219)	17/64 (7)	48 (1,219)	21/64 (8)	48 (1,219)	25/64 (10)
65.5 (19.964)	48 (1,219)	13/64 (5)	48 (1,219)	17/64 (7)	48 (1,219)	21/64 (8)	48 (1,219)	25/64 (10)
66 (20.117)	48 (1,219)	13/64 (5)	48 (1,219)	17/64 (7)	48 (1,219)	21/64 (8)	48 (1,219)	25/64 (10)
66.5 (20.269)	48 (1,219)	13/64 (5)	48 (1,219)	17/64 (7)	48 (1,219)	21/64 (8)	48 (1,219)	3/8 (10)
67 (20.422)	48 (1,219)	13/64 (5)	48 (1,219)	17/64 (7)	48 (1,219)	5/16 (8)	48 (1,219)	3/8 (10)



Outside Radius, ft. (m)	Form Cavity Width							
	4" (102mm)		6" (152mm)		8" (203mm)		10" (254mm)	
	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)
67.5 (20.574)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	5/16 (8)	48 (1,219)	3/8 (10)
68 (20.726)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	5/16 (8)	48 (1,219)	3/8 (10)
68.5 (20.879)	48 (1,219)	3/16 (5)	48 (1,219)	1/4 (6)	48 (1,219)	5/16 (8)	48 (1,219)	3/8 (10)
69 (21.031)	48 (1,219)	3/16 (5)	48 (1,219)	1/4 (6)	48 (1,219)	5/16 (8)	48 (1,219)	23/64 (9)
69.5 (21.184)	48 (1,219)	3/16 (5)	48 (1,219)	1/4 (6)	48 (1,219)	5/16 (8)	48 (1,219)	23/64 (9)
70 (21.336)	48 (1,219)	3/16 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)	48 (1,219)	23/64 (9)
70.5 (21.488)	48 (1,219)	3/16 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)	48 (1,219)	23/64 (9)
71 (21.641)	48 (1,219)	3/16 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)	48 (1,219)	23/64 (9)
71.5 (21.793)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	19/64 (8)	48 (1,219)	23/64 (9)
72 (21.946)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	19/64 (8)	48 (1,219)	11/32 (9)
72.5 (22.098)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	19/64 (8)	48 (1,219)	11/32 (9)
73 (22.250)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	19/64 (8)	48 (1,219)	11/32 (9)
73.5 (22.403)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	19/64 (8)	48 (1,219)	11/32 (9)
74 (22.555)	48 (1,219)	11/64 (4)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)	48 (1,219)	11/32 (9)
74.5 (22.708)	48 (1,219)	11/64 (4)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)	48 (1,219)	11/32 (9)
75 (22.860)	48 (1,219)	11/64 (4)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)	48 (1,219)	11/32 (9)
75.5 (23.012)	48 (1,219)	11/64 (4)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)	48 (1,219)	21/64 (8)
76 (23.165)	48 (1,219)	11/64 (4)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)	48 (1,219)	21/64 (8)
76.5 (23.317)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	21/64 (8)
77 (23.470)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	21/64 (8)
77.5 (23.622)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	9/32 (7)	48 (1,219)	21/64 (8)
78 (23.774)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)	48 (1,219)	21/64 (8)
78.5 (23.927)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)	48 (1,219)	21/64 (8)
79 (24.079)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)	48 (1,219)	5/16 (8)

Outside Radius, ft. (m)	Form Cavity Width							
	4" (102mm)		6" (152mm)		8" (203mm)		10" (254mm)	
	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)
79.5 (24.232)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)	48 (1,219)	5/16 (8)
80 (24.384)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)	48 (1,219)	5/16 (8)
80.5 (24.536)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)	48 (1,219)	5/16 (8)
81 (24.689)	48 (1,219)	5/32 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)	48 (1,219)	5/16 (8)
81.5 (24.841)	48 (1,219)	5/32 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)	48 (1,219)	5/16 (8)
82 (24.994)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	17/64 (7)	48 (1,219)	5/16 (8)
82.5 (25.146)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	5/16 (8)
83 (25.298)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)
83.5 (25.451)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)
84 (25.603)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)
84.5 (25.756)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)
85 (25.908)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)
85.5 (26.060)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)
86 (26.213)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)
86.5 (26.365)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)
87 (26.518)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	19/64 (8)
87.5 (26.670)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	1/4 (6)	48 (1,219)	9/32 (7)
88 (26.822)	48 (1,219)	5/32 (4)	48 (1,219)	13/64 (5)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)
88.5 (26.975)	48 (1,219)	5/32 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)
89 (27.127)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)
89.5 (27.280)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)
90 (27.432)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)
90.5 (27.584)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)
91 (27.737)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)



Outside Radius, ft. (m)	Form Cavity Width							
	4" (102mm)		6" (152mm)		8" (203mm)		10" (254mm)	
	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)	C, in. (mm)	A, in. (mm)
91.5 (27.889)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)
92 (28.042)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	9/32 (7)
92.5 (28.194)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	17/64 (7)
93 (28.346)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	17/64 (7)
93.5 (28.499)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	15/64 (6)	48 (1,219)	17/64 (7)
94 (28.651)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)
94.5 (28.804)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)
95 (28.956)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)
95.5 (29.108)	48 (1,219)	9/64 (4)	48 (1,219)	3/16 (5)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)
96 (29.261)	48 (1,219)	9/64 (4)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)
96.5 (29.413)	48 (1,219)	9/64 (4)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)
97 (29.566)	48 (1,219)	9/64 (4)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)
97.5 (29.718)	48 (1,219)	9/64 (4)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	17/64 (7)
98 (29.870)	48 (1,219)	9/64 (4)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	1/4 (6)
98.5 (30.023)	48 (1,219)	9/64 (4)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	1/4 (6)
99 (30.175)	48 (1,219)	1/8 (3)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	1/4 (6)
99.5 (30.328)	48 (1,219)	1/8 (3)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	1/4 (6)
100 (30.480)	48 (1,219)	1/8 (3)	48 (1,219)	11/64 (4)	48 (1,219)	7/32 (6)	48 (1,219)	1/4 (6)

APPENDIX C – PREFERRED WALL DIMENSIONS

ELEMENT ICF

4" PREFERRED WALL DIMENSIONS


O-O = Outside to outside corners

I-I = Inside to inside corners

O-I = Outside to inside corners

O-O	I-I	O-I
2' 5"	0' 10"	1' 7.5"
3' 1"	1' 6"	2' 3.5"
3' 9"	2' 2"	2' 11.5"
4' 5"	2' 10"	3' 7.5"
5' 1"	3' 6"	4' 3.5"
5' 9"	4' 2"	4' 11.5"
6' 5"	4' 10"	5' 7.5"
7' 1"	5' 6"	6' 3.5"
7' 9"	6' 2"	6' 11.5"
8' 5"	6' 10"	7' 7.5"
9' 1"	7' 6"	8' 3.5"
9' 9"	8' 2"	8' 11.5"
10' 5"	8' 10"	9' 7.5"
11' 1"	9' 6"	10' 3.5"
11' 9"	10' 2"	10' 11.5"
12' 5"	10' 10"	11' 7.5"
13' 1"	11' 6"	12' 3.5"
13' 9"	12' 2"	12' 11.5"
14' 5"	12' 10"	13' 7.5"
15' 1"	13' 6"	14' 3.5"
15' 9"	14' 2"	14' 11.5"
16' 5"	14' 10"	15' 7.5"
17' 1"	15' 6"	16' 3.5"
17' 9"	16' 2"	16' 11.5"
18' 5"	16' 10"	17' 7.5"
19' 1"	17' 6"	18' 3.5"
19' 9"	18' 2"	18' 11.5"
20' 5"	18' 10"	19' 7.5"
21' 1"	19' 6"	20' 3.5"
21' 9"	20' 2"	20' 11.5"
22' 5"	20' 10"	21' 7.5"
23' 1"	21' 6"	22' 3.5"
23' 9"	22' 2"	22' 11.5"

O-O	I-I	O-I
24' 5"	22' 10"	23' 7.5"
25' 1"	23' 6"	24' 3.5"
25' 9"	24' 2"	24' 11.5"
26' 5"	24' 10"	25' 7.5"
27' 1"	25' 6"	26' 3.5"
27' 9"	26' 2"	26' 11.5"
28' 5"	26' 10"	27' 7.5"
29' 1"	27' 6"	28' 3.5"
29' 9"	28' 2"	28' 11.5"
30' 5"	28' 10"	29' 7.5"
31' 1"	29' 6"	30' 3.5"
31' 9"	30' 2"	30' 11.5"
32' 5"	30' 10"	31' 7.5"
33' 1"	31' 6"	32' 3.5"
33' 9"	32' 2"	32' 11.5"
34' 5"	32' 10"	33' 7.5"
35' 1"	33' 6"	34' 3.5"
35' 9"	34' 2"	34' 11.5"
36' 5"	34' 10"	35' 7.5"
37' 1"	35' 6"	36' 3.5"
37' 9"	36' 2"	36' 11.5"
38' 5"	36' 10"	37' 7.5"
39' 1"	37' 6"	38' 3.5"
39' 9"	38' 2"	38' 11.5"
40' 5"	38' 10"	39' 7.5"
41' 1"	39' 6"	40' 3.5"
41' 9"	40' 2"	40' 11.5"
42' 5"	40' 10"	41' 7.5"
43' 1"	41' 6"	42' 3.5"
43' 9"	42' 2"	42' 11.5"
44' 5"	42' 10"	43' 7.5"
45' 1"	43' 6"	44' 3.5"
45' 9"	44' 2"	44' 11.5"

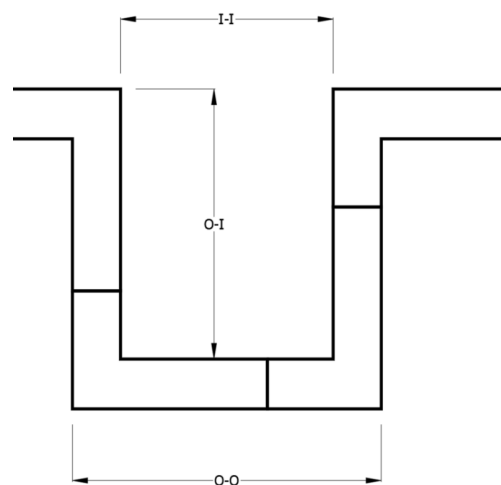

Notes:

1. Preferred wall length dimensions that allow the use of full size Element blocks (no cutting required) are indicated in shaded dimensions.
2. This table shows increments of 8 inch to allow block webs to be aligned between successive courses for attachment of interior/exterior finishes.
3. Window and door openings can fall anywhere in the wall envelope, window/door openings do not need to fall on cut lines.

ELEMENT ICF 6" PREFERRED WALL DIMENSIONS


O-O = Outside to outside corners

I-I = Inside to inside corners

O-I = Outside to inside corners

O-O	I-I	O-I
3' 9"	1' 10"	2' 9.5"
4' 5"	2' 6"	3' 5.5"
5' 1"	3' 2"	4' 1.5"
5' 9"	3' 10"	4' 9.5"
6' 5"	4' 6"	5' 5.5"
7' 1"	5' 2"	6' 1.5"
7' 9"	5' 10"	6' 9.5"
8' 5"	6' 6"	7' 5.5"
9' 1"	7' 2"	8' 1.5"
9' 9"	7' 10"	8' 9.5"
10' 5"	8' 6"	9' 5.5"
11' 1"	9' 2"	10' 1.5"
11' 9"	9' 10"	10' 9.5"
12' 5"	10' 6"	11' 5.5"
13' 1"	11' 2"	12' 1.5"
13' 9"	11' 10"	12' 9.5"
14' 5"	12' 6"	13' 5.5"
15' 1"	13' 2"	14' 1.5"
15' 9"	13' 10"	14' 9.5"
16' 5"	14' 6"	15' 5.5"
17' 1"	15' 2"	16' 1.5"
17' 9"	15' 10"	16' 9.5"
18' 5"	16' 6"	17' 5.5"
19' 1"	17' 2"	18' 1.5"
19' 9"	17' 10"	18' 9.5"
20' 5"	18' 6"	19' 5.5"
21' 1"	19' 2"	20' 1.5"
21' 9"	19' 10"	20' 9.5"
22' 5"	20' 6"	21' 5.5"
23' 1"	21' 2"	22' 1.5"
23' 9"	21' 10"	22' 9.5"
24' 5"	22' 6"	23' 5.5"
25' 1"	23' 2"	24' 1.5"

O-O	I-I	O-I
25' 9"	23' 10"	24' 9.5"
26' 5"	24' 6"	25' 5.5"
27' 1"	25' 2"	26' 1.5"
27' 9"	25' 10"	26' 9.5"
28' 5"	26' 6"	27' 5.5"
29' 1"	27' 2"	28' 1.5"
29' 9"	27' 10"	28' 9.5"
30' 5"	28' 6"	29' 5.5"
31' 1"	29' 2"	30' 1.5"
31' 9"	29' 10"	30' 9.5"
32' 5"	30' 6"	31' 5.5"
33' 1"	31' 2"	32' 1.5"
33' 9"	31' 10"	32' 9.5"
34' 5"	32' 6"	33' 5.5"
35' 1"	33' 2"	34' 1.5"
35' 9"	33' 10"	34' 9.5"
36' 5"	34' 6"	35' 5.5"
37' 1"	35' 2"	36' 1.5"
37' 9"	35' 10"	36' 9.5"
38' 5"	36' 6"	37' 5.5"
39' 1"	37' 2"	38' 1.5"
39' 9"	37' 10"	38' 9.5"
40' 5"	38' 6"	39' 5.5"
41' 1"	39' 2"	40' 1.5"
41' 9"	39' 10"	40' 9.5"
42' 5"	40' 6"	41' 5.5"
43' 1"	41' 2"	42' 1.5"
43' 9"	41' 10"	42' 9.5"
44' 5"	42' 6"	43' 5.5"
45' 1"	43' 2"	44' 1.5"
45' 9"	43' 10"	44' 9.5"
46' 5"	44' 6"	45' 5.5"
47' 1"	45' 2"	46' 1.5"

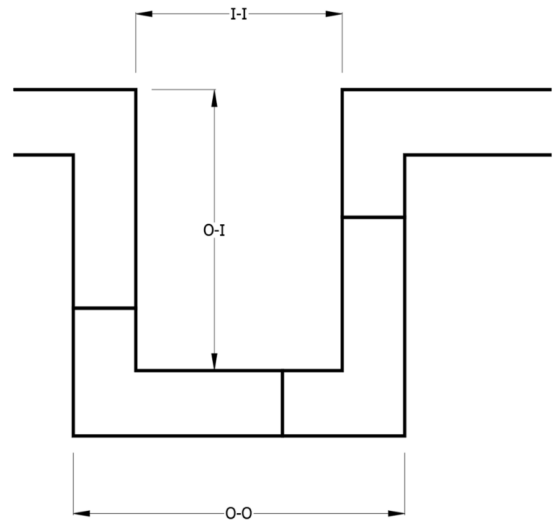

Notes:

1. Preferred wall length dimensions that allow the use of full size Element blocks (no cutting required) are indicated in shaded dimensions.
2. This table shows increments of 8 inch to allow block webs to be aligned between successive courses for attachment of interior/exterior finishes.
3. Window and door openings can fall anywhere in the wall envelope, window/door openings do not need to fall on cut lines.



ELEMENT ICF 8" PREFERRED WALL DIMENSIONS


O-O = Outside to outside corners

I-I = Inside to inside corners

O-I = Outside to inside corners

O-O	I-I	O-I
3' 9"	1' 6"	2' 7.5"
4' 5"	2' 2"	3' 3.5"
5' 1"	2' 10"	3' 11.5"
5' 9"	3' 6"	4' 7.5"
6' 5"	4' 2"	5' 3.5"
7' 1"	4' 10"	5' 11.5"
7' 9"	5' 6"	6' 7.5"
8' 5"	6' 2"	7' 3.5"
9' 1"	6' 10"	7' 11.5"
9' 9"	7' 6"	8' 7.5"
10' 5"	8' 2"	9' 3.5"
11' 1"	8' 10"	9' 11.5"
11' 9"	9' 6"	10' 7.5"
12' 5"	10' 2"	11' 3.5"
13' 1"	10' 10"	11' 11.5"
13' 9"	11' 6"	12' 7.5"
14' 5"	12' 2"	13' 3.5"
15' 1"	12' 10"	13' 11.5"
15' 9"	13' 6"	14' 7.5"
16' 5"	14' 2"	15' 3.5"
17' 1"	14' 10"	15' 11.5"
17' 9"	15' 6"	16' 7.5"
18' 5"	16' 2"	17' 3.5"
19' 1"	16' 10"	17' 11.5"
19' 9"	17' 6"	18' 7.5"
20' 5"	18' 2"	19' 3.5"
21' 1"	18' 10"	19' 11.5"
21' 9"	19' 6"	20' 7.5"
22' 5"	20' 2"	21' 3.5"
23' 1"	20' 10"	21' 11.5"
23' 9"	21' 6"	22' 7.5"
24' 5"	22' 2"	23' 3.5"
25' 1"	22' 10"	23' 11.5"

O-O	I-I	O-I
25' 9"	23' 6"	24' 7.5"
26' 5"	24' 2"	25' 3.5"
27' 1"	24' 10"	25' 11.5"
27' 9"	25' 6"	26' 7.5"
28' 5"	26' 2"	27' 3.5"
29' 1"	26' 10"	27' 11.5"
29' 9"	27' 6"	28' 7.5"
30' 5"	28' 2"	29' 3.5"
31' 1"	28' 10"	29' 11.5"
31' 9"	29' 6"	30' 7.5"
32' 5"	30' 2"	31' 3.5"
33' 1"	30' 10"	31' 11.5"
33' 9"	31' 6"	32' 7.5"
34' 5"	32' 2"	33' 3.5"
35' 1"	32' 10"	33' 11.5"
35' 9"	33' 6"	34' 7.5"
36' 5"	34' 2"	35' 3.5"
37' 1"	34' 10"	35' 11.5"
37' 9"	35' 6"	36' 7.5"
38' 5"	36' 2"	37' 3.5"
39' 1"	36' 10"	37' 11.5"
39' 9"	37' 6"	38' 7.5"
40' 5"	38' 2"	39' 3.5"
41' 1"	38' 10"	39' 11.5"
41' 9"	39' 6"	40' 7.5"
42' 5"	40' 2"	41' 3.5"
43' 1"	40' 10"	41' 11.5"
43' 9"	41' 6"	42' 7.5"
44' 5"	42' 2"	43' 3.5"
45' 1"	42' 10"	43' 11.5"
45' 9"	43' 6"	44' 7.5"
46' 5"	44' 2"	45' 3.5"
47' 1"	44' 10"	45' 11.5"

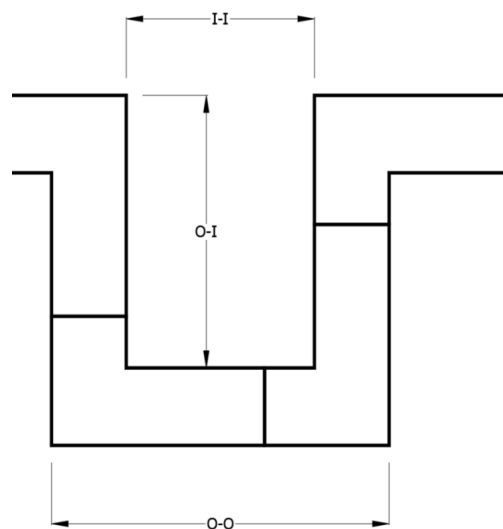

Notes:

1. Preferred wall length dimensions that allow the use of full size Element blocks (no cutting required) are indicated in shaded dimensions.
2. This table shows increments of 8 inch to allow block webs to be aligned between successive courses for attachment of interior/exterior finishes.
3. Window and door openings can fall anywhere in the wall envelope, window/door openings do not need to fall on cut lines.

ELEMENT ICF 10" PREFERRED WALL DIMENSIONS


O-O = Outside to outside corners

I-I = Inside to inside corners

O-I = Outside to inside corners

O-O	I-I	O-I
3' 9"	1' 2"	2' 5.5"
4' 5"	1' 10"	3' 1.5"
5' 1"	2' 6"	3' 9.5"
5' 9"	3' 2"	4' 5.5"
6' 5"	3' 10"	5' 1.5"
7' 1"	4' 6"	5' 9.5"
7' 9"	5' 2"	6' 5.5"
8' 5"	5' 10"	7' 1.5"
9' 1"	6' 6"	7' 9.5"
9' 9"	7' 2"	8' 5.5"
10' 5"	7' 10"	9' 1.5"
11' 1"	8' 6"	9' 9.5"
11' 9"	9' 2"	10' 5.5"
12' 5"	9' 10"	11' 1.5"
13' 1"	10' 6"	11' 9.5"
13' 9"	11' 2"	12' 5.5"
14' 5"	11' 10"	13' 1.5"
15' 1"	12' 6"	13' 9.5"
15' 9"	13' 2"	14' 5.5"
16' 5"	13' 10"	15' 1.5"
17' 1"	14' 6"	15' 9.5"
17' 9"	15' 2"	16' 5.5"
18' 5"	15' 10"	17' 1.5"
19' 1"	16' 6"	17' 9.5"
19' 9"	17' 2"	18' 5.5"
20' 5"	17' 10"	19' 1.5"
21' 1"	18' 6"	19' 9.5"
21' 9"	19' 2"	20' 5.5"
22' 5"	19' 10"	21' 1.5"
23' 1"	20' 6"	21' 9.5"
23' 9"	21' 2"	22' 5.5"
24' 5"	21' 10"	23' 1.5"
25' 1"	22' 6"	23' 9.5"

O-O	I-I	O-I
25' 9"	23' 2"	24' 5.5"
26' 5"	23' 10"	25' 1.5"
27' 1"	24' 6"	25' 9.5"
27' 9"	25' 2"	26' 5.5"
28' 5"	25' 10"	27' 1.5"
29' 1"	26' 6"	27' 9.5"
29' 9"	27' 2"	28' 5.5"
30' 5"	27' 10"	29' 1.5"
31' 1"	28' 6"	29' 9.5"
31' 9"	29' 2"	30' 5.5"
32' 5"	29' 10"	31' 1.5"
33' 1"	30' 6"	31' 9.5"
33' 9"	31' 2"	32' 5.5"
34' 5"	31' 10"	33' 1.5"
35' 1"	32' 6"	33' 9.5"
35' 9"	33' 2"	34' 5.5"
36' 5"	33' 10"	35' 1.5"
37' 1"	34' 6"	35' 9.5"
37' 9"	35' 2"	36' 5.5"
38' 5"	35' 10"	37' 1.5"
39' 1"	36' 6"	37' 9.5"
39' 9"	37' 2"	38' 5.5"
40' 5"	37' 10"	39' 1.5"
41' 1"	38' 6"	39' 9.5"
41' 9"	39' 2"	40' 5.5"
42' 5"	39' 10"	41' 1.5"
43' 1"	40' 6"	41' 9.5"
43' 9"	41' 2"	42' 5.5"
44' 5"	41' 10"	43' 1.5"
45' 1"	42' 6"	43' 9.5"
45' 9"	43' 2"	44' 5.5"
46' 5"	43' 10"	45' 1.5"
47' 1"	44' 6"	45' 9.5"

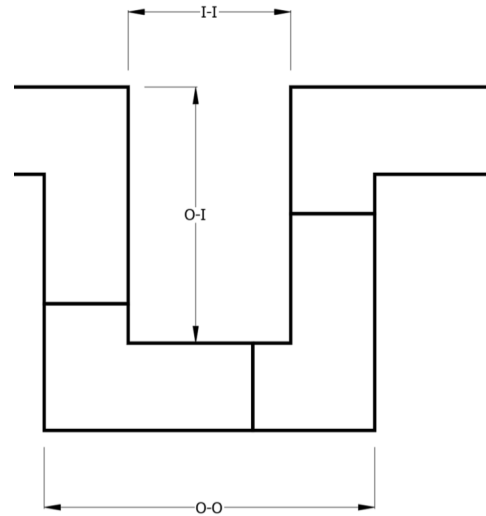

Notes:

1. Preferred wall length dimensions that allow the use of full size Element blocks (no cutting required) are indicated in shaded dimensions.
2. This table shows increments of 8 inch to allow block webs to be aligned between successive courses for attachment of interior/exterior finishes.
3. Window and door openings can fall anywhere in the wall envelope, window/door openings do not need to fall on cut lines.

ELEMENT ICF 12" PREFERRED WALL DIMENSIONS


O-O = Outside to outside corners

I-I = Inside to inside corners

O-I = Outside to inside corners

O-O	I-I	O-I
3' 9"	0' 10"	2' 3.5"
4' 5"	1' 6"	2' 11.5"
5' 1"	2' 2"	3' 7.5"
5' 9"	2' 10"	4' 3.5"
6' 5"	3' 6"	4' 11.5"
7' 1"	4' 2"	5' 7.5"
7' 9"	4' 10"	6' 3.5"
8' 5"	5' 6"	6' 11.5"
9' 1"	6' 2"	7' 7.5"
9' 9"	6' 10"	8' 3.5"
10' 5"	7' 6"	8' 11.5"
11' 1"	8' 2"	9' 7.5"
11' 9"	8' 10"	10' 3.5"
12' 5"	9' 6"	10' 11.5"
13' 1"	10' 2"	11' 7.5"
13' 9"	10' 10"	12' 3.5"
14' 5"	11' 6"	12' 11.5"
15' 1"	12' 2"	13' 7.5"
15' 9"	12' 10"	14' 3.5"
16' 5"	13' 6"	14' 11.5"
17' 1"	14' 2"	15' 7.5"
17' 9"	14' 10"	16' 3.5"
18' 5"	15' 6"	16' 11.5"
19' 1"	16' 2"	17' 7.5"
19' 9"	16' 10"	18' 3.5"
20' 5"	17' 6"	18' 11.5"
21' 1"	18' 2"	19' 7.5"
21' 9"	18' 10"	20' 3.5"
22' 5"	19' 6"	20' 11.5"
23' 1"	20' 2"	21' 7.5"
23' 9"	20' 10"	22' 3.5"
24' 5"	21' 6"	22' 11.5"
25' 1"	22' 2"	23' 7.5"

O-O	I-I	O-I
25' 9"	22' 10"	24' 3.5"
26' 5"	23' 6"	24' 11.5"
27' 1"	24' 2"	25' 7.5"
27' 9"	24' 10"	26' 3.5"
28' 5"	25' 6"	26' 11.5"
29' 1"	26' 2"	27' 7.5"
29' 9"	26' 10"	28' 3.5"
30' 5"	27' 6"	28' 11.5"
31' 1"	28' 2"	29' 7.5"
31' 9"	28' 10"	30' 3.5"
32' 5"	29' 6"	30' 11.5"
33' 1"	30' 2"	31' 7.5"
33' 9"	30' 10"	32' 3.5"
34' 5"	31' 6"	32' 11.5"
35' 1"	32' 2"	33' 7.5"
35' 9"	32' 10"	34' 3.5"
36' 5"	33' 6"	34' 11.5"
37' 1"	34' 2"	35' 7.5"
37' 9"	34' 10"	36' 3.5"
38' 5"	35' 6"	36' 11.5"
39' 1"	36' 2"	37' 7.5"
39' 9"	36' 10"	38' 3.5"
40' 5"	37' 6"	38' 11.5"
41' 1"	38' 2"	39' 7.5"
41' 9"	38' 10"	40' 3.5"
42' 5"	39' 6"	40' 11.5"
43' 1"	40' 2"	41' 7.5"
43' 9"	40' 10"	42' 3.5"
44' 5"	41' 6"	42' 11.5"
45' 1"	42' 2"	43' 7.5"
45' 9"	42' 10"	44' 3.5"
46' 5"	43' 6"	44' 11.5"
47' 1"	44' 2"	45' 7.5"

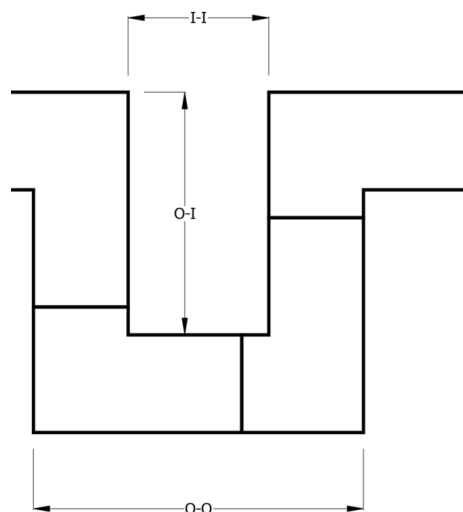

Notes:

1. Preferred wall length dimensions that allow the use of full size Element blocks (no cutting required) are indicated in shaded dimensions.
2. This table shows increments of 8 inch to allow block webs to be aligned between successive courses for attachment of interior/exterior finishes.
3. Window and door openings can fall anywhere in the wall envelope, window/door openings do not need to fall on cut lines.



APPENDIX D – SUPPORTING PRODUCTS

A selection of supporting products for use with Element Insulated Concrete Forms is listed below. These products have been reviewed to help ensure their general availability and compatibility; however, users should contact the respective manufacturers directly for the most up-to-date information and to confirm suitability for their specific application. Please note that this list is not exhaustive and does not limit the use of Element ICFs with other supporting products not shown here.

FOOTINGS

Product	Manufacturer	Contact	Website
Fastfoot	Fab-form Industries	1-888-303-3278	fab-form.com
Form-A-Drain	CertainTeed Corp.	713-325-0642	formadrainsolutions.com
Footing Tube	Footing Tube	1-888-929-2011	foottube.com
Proform HD	Prinsco Water Management Solutions	1-800-992-1725	prinsco.com/proformhd
The Foothold	The Foothold ICF	1-860-833-8739	thefootholdicf.com

EXTERIOR FINISHES

Product	Manufacturer	Contact	Website
Durock	Durock Alfacing International Ltd.	1-888-238-6345	durock.com
Senergy	Sika Corp. USA	1-800-589-1336	usa.sika.com
Sika related products	Sika Corp. Canada	1-800-221-2397	can.sika.com
TAFS (Textured Acrylic Finishes)	Dryvit	1-800-263-3308	dryvit.com
Akroflex	Omega Products Corp.	602-721-5027	omega-products.com
Impact System	Parex	1-800-537-2739	parex.com
PermaCrete	PPG Paints	1-800-441-9695	ppgpaints.com
Crack Guard	Poly-Wall	1-800-846-3020	poly-wall.com

WATERPROOFING

Product	Manufacturer	Contact	Website
Rub-R-Wall	Rub-R-Wall	770-410-1545	rubrwall.com
WM40	Polyguard	1-800-589-1336	polyguard.com
650 Membrane	Polyguard	1-800-589-1336	polyguard.com
Hydrostar AG	Alewill Distribution	905-547-9727	hydrostarag.com
DMX AG Foundation Wrap	DMX Membranes Ltd.	1-855-501-7837	dmxmembranes.com
Blueskin WP2000	Henry Company	1-800-486-1278	henry.com
Colephene Icf	Soprema, Inc	1 800 567-1492	soprema.com
Delta-MS	Dorken Systems, Inc	1-888-433-5824	dorken.com
Platon	Armtec Ltd.	1-800-265-7622	armtec.com
Tamko Tw60	Tamko, Inc.	1-800-641-4691	tamko.com
Bituthene Membrane	GCP	1-866-333-3726	gcpat.com/en
Universal Primer-free Membrane	Protecto Wrap	1-800-759-9727	protectowrap.com
ICF Foundation Membrane	Resisto	1-855-227-7850	resisto.us/en
Below-grade Drainage Board	Resisto	1-855-227-7850	https://www.resisto.ca
MEL-ROL	W.R.Meadows	1-800-342-5976	wrmeadows.com
Hulk Composite Systems	Hulk Systems, Inc	1-833-485-5797	hulksystem.com

CONNECTION SYSTEMS

Product	Manufacturer	Contact	Website
ICFVL Ledger Connector System	Simpson Strong-Tie, Inc	1-800-999-5099	strongtie.com
Burmon Building Products	Burmon Pty, Ltd.	1-888-218-0281	burmon.com
Watkins Hanger	RP Watkins	405-664-0010	watkinshanger.com
Clearco Fastener ICF products	Clearco Fasteners	952-257-5068	clearcofasteners.com

ADHESIVE & SEALANTS

Product	Manufacturer	Contact	Website
Tytan products	Tytan Professional	817-381-4427	tytan.com
Enerfoam Sealant	Dupont	1-833-338-7668	dupont.ca
PL300	LePage	See website	lepage.ca
FastFlash	Prosoco	1-800-255-4255	prosoco.com
Wigluf adhesive tapes	Siga	1-855-733-7442	siga.swiss
Tescon Vana adhesive tapes	Por Clima	1-800-995-6329	proclima.com
Great Stuff foam sealant	Dupont	1-866-583-2583	greatstuff.dupont.com
DAP DYNFLEX 800 sealant	DAP Global Inc	1-800-327-3339	dap.com
DAP Foamboard Construction Adhesive	DAP Global Inc.	1-800-327-3339	dap.com
DAP Touch 'N Seal All Seasons foam sealant	DAP Global Inc.	1-800-327-3339	dap.com

WALL BRACING & ALIGNMENT SYSTEMS

Product	Manufacturer	Contact	Website
Giraffe Bracing	Giraffe Bracing	1-888-778-2285	giraffebracing.com
Hilltop ICF Bracing	Hilltop Manufacturing	1-866-627-7720	hilltopmanufacturing.com
Plumwall ICF Bracing	Plumwall Ltd.	1-888-928-6676	plumwall.com
Superior Brace	Superior Alignment Systems	1-877-525-4466	superioralignmentsystems.com
ZONT Brace	Fab-Form	1-888-303-3278	fab-form.com

EXTERNAL VIBRATORS

Product	Manufacturer	Contact	Website
Giraffe Black Rattler	Giraffe Bracing	1-888-778-2285	giraffebracing.com
Durofix vibrator	Durofix	1-877-693-8665	durofix.com





SUPPLIERS OF SUPPORTING ICF PRODUCTS

Company	Contact	Website
Clearco Fasteners	1-952-257-5068	clearcofasteners.com
Wind-lock	1-800-872-5625	wind-lock.com



APPENDIX E – ELEMENT ICF CONCRETE VOLUMES

The values shown represent the approximate concrete volume contained within each Element ICF product for the corresponding block type and core size illustrated. Volumes are provided per individual block and are shown in both cubic yards (yd³) and cubic meters (m³).

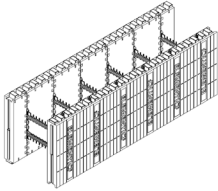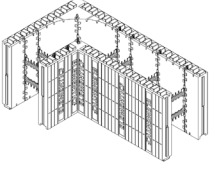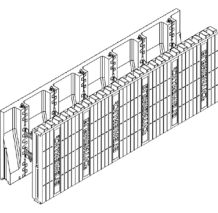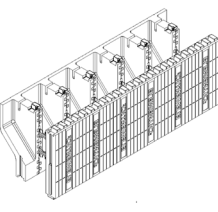	Block Size				
	4" (102 mm)	6" (152 mm)	8" (203 mm)	10" (254 mm)	12" (305 mm)
Standard Block 	0.07 yd ³ (0.05 m ³) Available only in Site-assembled	0.1 yd ³ (0.08 m ³) Available in Site-assembled & Preformed	0.13 yd ³ (0.10 m ³) Available in Site-assembled & Preformed	0.16 yd ³ (0.13 m ³) Available only in Site-assembled	0.2 yd ³ (0.15 m ³) Available only in Site-assembled
90 Degree Corner Block 	0.07 yd ³ (0.05 m ³) Available only in Site-assembled	0.1 yd ³ (0.08 m ³) Available in Site-assembled & Preformed	0.12 yd ³ (0.10 m ³) Available in Site-assembled & Preformed	0.16 yd ³ (0.12 m ³) Available only in Site-assembled	0.18 yd ³ (0.14 m ³) Available only in Site-assembled
Taper Top Block 	0.08 yd ³ (0.06 m ³) Available only in Site-assembled	0.11 yd ³ (0.08 m ³) Available only in Site-assembled	0.14 yd ³ (0.11 m ³) Available only in Site-assembled	0.18 yd ³ (0.14 m ³) Available only in Site-assembled	0.21 yd ³ (0.16 m ³) Available only in Site-assembled
Brick Ledge Block 	0.11 yd ³ (0.08 m ³) Available only in Site-assembled	0.14 yd ³ (0.11 m ³) Available only in Site-assembled	0.18 yd ³ (0.14 m ³) Available only in Site-assembled	0.21 yd ³ (0.16 m ³) Available only in Site-assembled	0.24 yd ³ (0.19 m ³) Available only in Site-assembled



CONNECT WITH A LOCAL MANUFACTURER

888.838.5038

330 Cain Drive
Haysville, KS 67060-2004

888.453.5961

11581-272 St.
Acheson, AB T7X 6E9

888.706.7709

840 Division St.
Cobourg, ON K9A 5V2

888.453.5961

6333 Unsworth Rd.
Chilliwack, BC V2R 5M3

877.789.7622

35 Headingley Rd.
Headingley, MB R4H 0A8



© Copyright Logix Brands Ltd. (2023) All rights reserved.

No part of the work contained herein as covered by this copyright may be reproduced or used in any form, or any means – graphic, electronic or mechanical, including without limitation photocopying. By using these products, you agree to assume all risks associated therewith. See LogixBrands.com/Disclaimer-General for a full copy of disclaimer.

ELEMENTICF®
LOGIX BRANDS

info@elementicf.com
ElementICF.com

A PRODUCT BY
LOGIX®
BRANDS